


Handheld Computer

Z-2060 series

(Version 3.00)

User's Manual

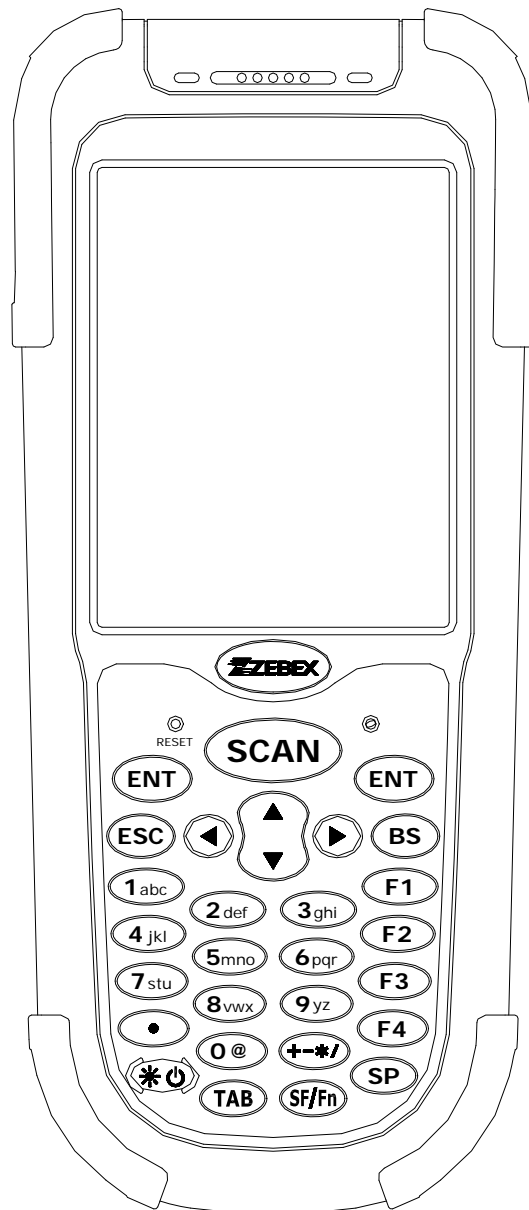

ZEBEX INDUSTRIES INC.
WWW.ZEBEX.COM


Editorial Record

[illegible]

Table of Contents

Preface

Handheld Computer	1
Z-2060 series (Version 3.00)	1
User's Manual	1
ZEBEX INDUSTRIES INC.	1
WWW.ZEBEX.COM	1
Revise the picture of Package contents	2
Revise the picture of Cradle Package.....	2
Revise the picture Purchaseable accessories.....	2
Adding the instruction of Using PowerPack.....	2
Adding the picture of How to order	2
About This Manual.....	9
Symbols used in this manual	9
A triangular shape indicates you should exercise caution.	9
Copyright.....	10
ZEBEX Industries Inc. makes no warranty of any kind with regard to this material. Including but not limited to the imply warranties of merchantability and fitness for a particular purpose. ZEBEX Industries Inc. shall not be liable for errors contained herein or for incidental consequential damages in connection with the furnishing, Performance or use of this product.	10
ZEBEX is a registered trademark of ZEBEX INDUSTRIES INC.....	10
Safety Information	10
Laser Safety	10
The Z-2060 series handheld computer complies with safety standard IEC825-1(1993) for a Class 2 laser product. It also complies with U.S.21CFR1040 as applicable to a Class II laser product. Avoid staring at direct laser light as the laser beam may hurt your eyes.	10
LASER BEAM	10
Never look directly into the laser beam. Doing so can cause serious eye damage.	10
Safety Operation	11
Disassembly and Modification	11
Never try to disassemble or modify the device in any way. All servicing should be carried out by qualified Zebex personnel or Zebex- approved engineers.	11
Interior Parts and Components	11
Extreme temperature.....	11
Do not operate the device under extreme temperature.	11
Battery and Charger	11
Federal Communication Commission (FCC) Statement	12
FCC RF Radiation Exposure Statement.....	12
Package Contents	13
Z-2060 series	13
Stylus Pen	13
Mini USB cable.....	13
(Terminal to PC USB port).....	13
Optional Parts	14
Cradle package.....	14
Docking Cradle	14
RS232 cable	14
AC Adapter	14
USB cable	14
(Cradle to USB)	14
Purchaseable Accessories	15

Mini USB Cable	AC Adapter	15
RS232 Cable	Britain Plug head	15
U.S. Plug head		15
USB cable (Cradle to USB)	Australia Plug head	15
Battery Pack	Europe Plug head	15
Stylus Pen	Sling for stylus Pen	16
General Guide		17
Arrow		18
Arrow keys		18
Press these to move around the screen.		18
ENT		18
Enter key		18
Press to confirm entries or commands.		18
0-9		18
Alphanumeric keypad		18
Press to enter numerical or alphabetical data.....		18
F1-F4		18
Function keys.....		18
Press to access function keys 1-4.		18
BS		18
Backspace key		18
Press to move cursor and deletes the previous character each time.		18
		18
Power/Backlight on key		18
1. Press to turn the power on.....		18
2. Press more then 3 seconds for turn the terminal power off and go into the suspend mode.		18
3. Press to turn the LCD backlight on when it is off.....		18
ESC		18
Escape key		18
Press to perform a cancel action.....		18
SCAN.....		18
Scan key		18
Press and hold to scan a barcode.....		18
SF/Fn.....		18
Shift key.....		18
The key is used in combination with other keys to type special characters or perform other function keys.....		18
1. Press after SF/Fn key and press Up key to turn the input method into upper alphabetical.		18
2. Press after SF/Fn key and press Down key to turn the input method into lower alphabetical.....		18
3. Press after SF/Fn key and press Left or Right key to turn the input method into numerical.		18
4. Press after SF/Fn key and press F1-F4 key to perform F5 - F8 key.....		18
TAB		18
Tab key		18
Press to add a tab indentation.		18
SP		18
Space key		18
Press to add a space character.		18
Inserting the Battery		19

Insert the battery pack as shown and watch the battery direction.....	19
Remove the Battery	19
Push the side lock to pick up the battery pack.....	19
Charging the Battery	20
Charging by cable	20
Connect the charging cable and AC adaptor as shown.	20
Charging by cradle.....	20
USB Interface	20
Cradle - rear view	20
Cradle - front view	21
Cradle LEDs	21
Right LED - The LED lit when the cradle is connected to AC power.	21
Charging the battery separately in the cradle	21
Insert the battery into the compartment at the rear of the cradle.	21
Connect the power jack to the cradle and plug AC adapter into the socket.	22
NOTES.....	22
System Reset	23
Using the Warm reset function.....	23
Using the Cold reset function.....	23
WARNING	23
PC System Requirements	24
Windows XP Operating System	24
Connecting To a PC	24
Connecting via the RS232.....	24
Connecting via USB Cradle	25
Connecting the Z-2060 directly via Mini USB.....	25
Inserting SD Card	26
Remove the SD Card	26
About The Product	27
Prerequisites	27
Specifications	28
Model.....	28
Z-2060 series	28
System	28
CPU	28
Inter PXA 270 processor (Max. 520MHz).....	28
RAM.....	28
128 Mbyte	28
F-ROM.....	28
64 Mbyte	28
LCD Display.....	28
3.5", QVGA 240 X 320 TFT color panel with touch screen	28
Operating System	28
Microsoft Windows CE.NET 5.0.....	28
Power Management	28
Main Battery	28
3.7V5,000mAH Li-ion rechargeable battery	28
3.7V 2,200 mAH Li-ion rechargeable.....	28
3.7V, 120mAH, Li-Poly rechargeable battery.....	28
Battery Life	28
8 hours (without wireless communication activated)	28
Scanning Performance	28

Scan Engine	28
Symbol SE-955 1D laser engine	28
Symbol SE-4400 2D image engine (optional).....	28
Light Source.....	28
Scan Rate	28
100 scans per second	28
Print Contrast.....	28
30% @ UPC/EAN 100%.....	28
Decoding Capability.....	28
Barcode Symbologies.....	28
UPC/ EAN/ JAN, Code 128/EAN 128, Code 39, Code 93, Interleaved 2 of 5, Discrete 2 of 5, Codabar, MSI/Plessey	28
Card Slots	28
1 x Mini SD I/O card	28
Communications / Interfaces	28
Bluetooth	28
Bluetooth Class 2	28
IrDA	28
Standard IrDA 1.3.....	28
USB	28
USB 2.0	28
RS-232.....	28
Programmable up to 115,200 bps	28
WLAN	28
802.11b/g (optional)	28
Dimensions.....	28
190.5 mm (L) x82.8 mm (W) x 50.5 mm (H).....	28
Weight	28
Approx. 480 g (battery included).....	28
Environmental	28
Operating Temp.	28
0°C ~ 50°C.....	28
Storage Temp	28
-10°C ~ 60°C	28
Operating Humidity	28
10% ~ 70% (non-condensing).....	28
Storage Humidity	28
5% ~ 70% (non-condensing).....	28
Drop Durability	28
Withstand 1.2m (4 feet) drop to concrete	28
Environmental Sealing.....	28
IP64 rated sealing	28
Regulatory Approvals	28
CE & FCC Part 15B, 15 C,CE RF,LVD,ESD	28
Cradle.....	28
Single slot USB / RS-232 charging cradle with spare battery slot.....	28
Software &Development	28
Supports SDK for program development.....	28
Using Barcode Scanner	29
Scanning Barcodes	29
To scan a barcode:	29
1. Hold the Z-2060 horizontally and point it directly at the barcode you wish to	

scan.....	29
2. Once in the correct position, press the SCAN button.....	29
An audible alarm is heard and the barcode digits will appear on the	29
Using the Zebex PowerPack.....	29
Using the Zebex PowerPack.....	30
Backlight.....	30
Calculator	32
. : A decimal point of dot.....	32
= :To be equal to, The amount.....	32
File Transfer	33
Ex. File Transferred Operation By Using Bluetooth	34
Preload Manager.....	36
Preload Operation.....	37
Switch	40
TrayScan.....	41
TrayScan.....	42
The TrayScan program is a barcode reader set up program, it offer you an easy way to enable or disable the barcode scanner, and also offer you to set up each barcode symbolic properties.....	42
.....	42
Below are instructions of functions on main page:	42
1. Output Mode	42
Providing three output methods such as Copy & Paste / Key Emulation / None (Copy to Clipboard).	42
1.1 Copy & Paste.....	43
Copy and paste the barcode information into application that need to execute data as input. (ex. WordPad) ,	43
1.2 Key Emulation	43
Transfer barcode information via Key Emulation to executed software's edit window. Key Emulation function can also be used for barcode scanning under conditions of Terminal Emulation, Command Prompt and some other program without touch panel. Read data will be transferred to application program.....	43
1.3 None(copy to clipboard).....	43
Function provide required barcode information to application program, after this function was activated, scanner will read barcode information and save data into clipboard.....	43
2. Terminal Character	43
Set the terminator control code with barcode data. We offer "Enter", "Space", "Tab", and "None" for selections. Terminator control code will be sent every time when barcode was read.	43
3. Suffix.....	43
Set the suffix character with barcode data.....	43
4. Prefix.....	43
Set the preamble character with barcode data.	43
5. Setting	43
To set the barcode parameter value of each kind of barcode for barcode scanner. Press the" Setting " button in TrayScan application to start the barcode setting.	43
To check the barcode type selection for enable the type of barcode for read.	44
Press " " button to setting the barcode parameter value of each kind of barcode.....	44
Press " "button to use system default value to set up the barcode parameter. The default value was show in below pictures.....	44

The default values of EAN/UPC code and Code39.	45
The default values of ITF 2 of 5 code and Code128.	45
Backup/Restore	46
Firmware Information	48
You can find this application is located on path " \settings\control Panel".....	48
This information is good for identify device firmware version for future update or maintenance.....	48
Function Key Manager	49
How to order.....	54
Please offer Part Number or Model Name for next purchase.....	54

Preface

About This Manual

Thank you for your purchase of the ZEBEX Z-2060 series handheld computer. ZEBEX Z-2060 series product is at the forefront of handheld computer technology, and this manual will provide the necessary information on the many and varied options available to you.

The Z-2060 series product is a compact, ergonomic and durable handheld computer. It is designed with an integrated 802.11b/g wireless communication, 1D/2D barcode scanner, touch screen and 29-keys keypad. The design is complies with IP64 regulations and ideal for the mobile worker as it simple and easy to use anywhere along a supply chain.

Symbols used in this manual



A triangular shape indicates you should exercise caution.



A circle shape indicates something you should not to do.



A black circle indicates something you must to do.



A note symbol indicates you the information that is important and you should be observed.

Copyright

ZEBEX Industries Inc. makes no warranty of any kind with regard to this material. Including but not limited to the implied warranties of merchantability and fitness for a particular purpose. ZEBEX Industries Inc. shall not be liable for errors contained herein or for incidental consequential damages in connection with the furnishing, Performance or use of this product.

ZEBEX Industries Inc. will be under no liability in respect of any defect arising from fair wear and tear, willful damage, negligence, abnormal working conditions, failure to follow the instructions and warnings, or misuse or alteration or repair of the products without written approval.

No part of this document may be reproduced, transmitted, stored in a retrieval system, transcribed or translated into any language or computer language in any form or by any means electronic, mechanical, magnetic, optical, chemical, manual or otherwise, with express written consent and authorization.

We reserve the right to make changes in product design without reservation and without notification. The material in this guide is for information only and is subject to change without notice.

ZEBEX is a registered trademark of ZEBEX INDUSTRIES INC.

© Copyright 2008 ZEBEX.

Safety Information

Your safety is of the utmost importance so please observe and follow the following guidelines that allow you to use the scanner in a safe and responsible way.

Laser Safety

The Z-2060 series handheld computer complies with safety standard IEC825-1(1993) for a Class 2 laser product. It also complies with U.S.21CFR1040 as applicable to a Class II laser product. Avoid staring at direct laser light as the laser beam may hurt your eyes.



LASER BEAM

Never look directly into the laser beam. Doing so can cause serious eye damage.

Safety Operation

WARNING



Disassembly and Modification

Never try to disassemble or modify the device in any way. All servicing should be carried out by qualified Zebex personnel or Zebex- approved engineers.



Interior Parts and Components

Never touch interior high voltage parts or components. Doing so creates the danger of electrical shock.



Drop and Knock the Device

Be careful when using the device; do not drop or knock the device as irreversible damage to the unit may occur.



Extreme temperature

Do not operate the device under extreme temperature.



Battery and Charger

The use of third-party battery or charger may either damage the device or shorten the life of the device.

CAUTION



Dropping and Damage

Should the drop the device and damage it, immediately turn off the power and contact your original dealer or an authorized ZEBEX service provider. Continued use creates the danger of fire and electrical shock.



Abnormal Conditions

Should the device become hot or start to emit smoke or an original dealer or an authorized ZEBEX service provider. Continued use creates the danger of fire and electrical shock.



Foreign Objects

Should any foreign matter ever get into the device, immediately turn off the power and contact your original dealer or an authorized ZEBEX service provider. Continued use creates the danger of fire and electrical shock.



Moisture

Keep the device away from vases, planters, cups, glasses and other containers of liquid. Also keep it away from metal. Water and metal getting into the device creates the danger of fire and electrical shock.

Federal Communication Commission (FCC) Statement

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in the accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Unpacking


Package Contents

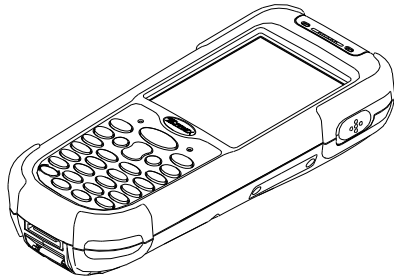


Z-2060 series
Mobile Data Terminal

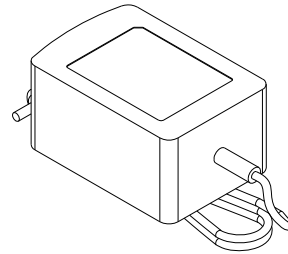


AC Adapter

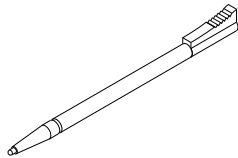


Stylus Pen

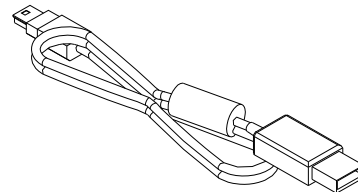


Mini USB cable
(Terminal to PC USB port)




Sling for stylus Pen

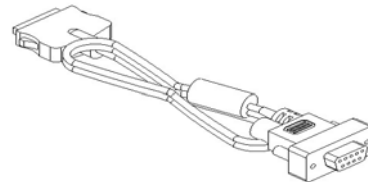


RS-232 DB9 (F) Cable

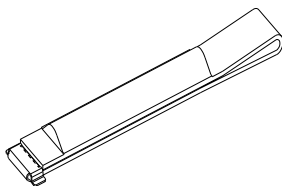

Hand Strip

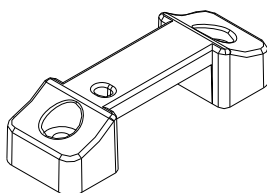


Hand strip Holder

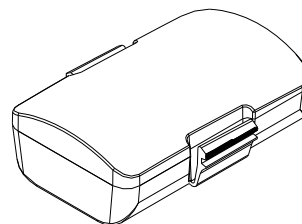


Battery Pack

Optional Parts


Cradle package

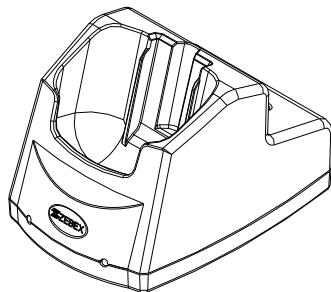


Docking Cradle

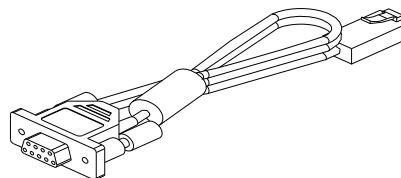

RS232 cable

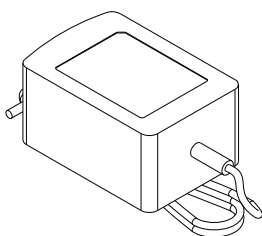


AC Adapter

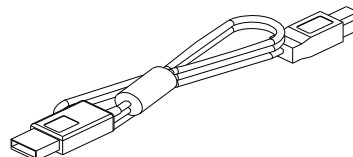


USB cable
(Cradle to USB)


Purchaseable Accessories

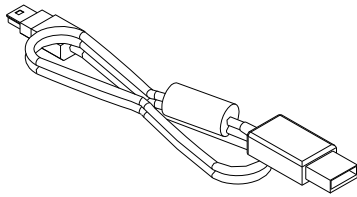


Mini USB Cable

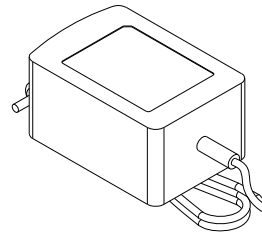


AC Adapter

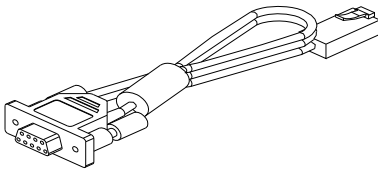


RS232 Cable

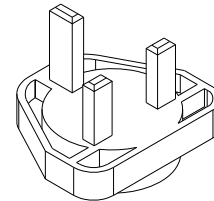


Britain Plug head

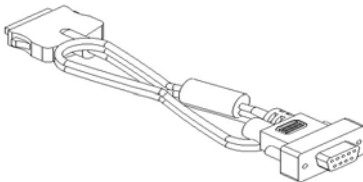


RS-232 DB9 (F) Cable

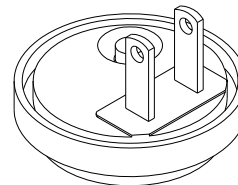


U.S. Plug head

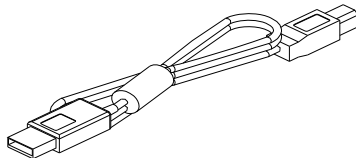


USB cable (Cradle to USB)

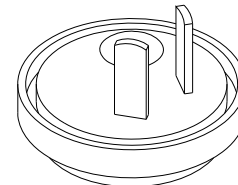


Australia Plug head

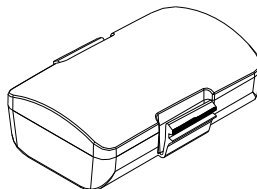

Battery Pack

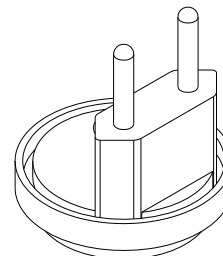


Europe Plug head

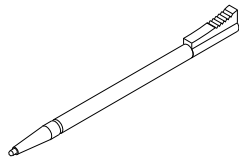


Stylus Pen



Sling for stylus Pen

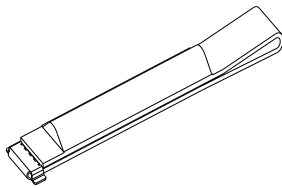


Hand Strip

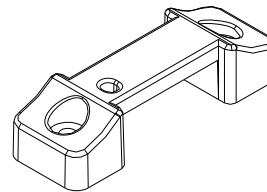



Hand strip Holder

General Guide

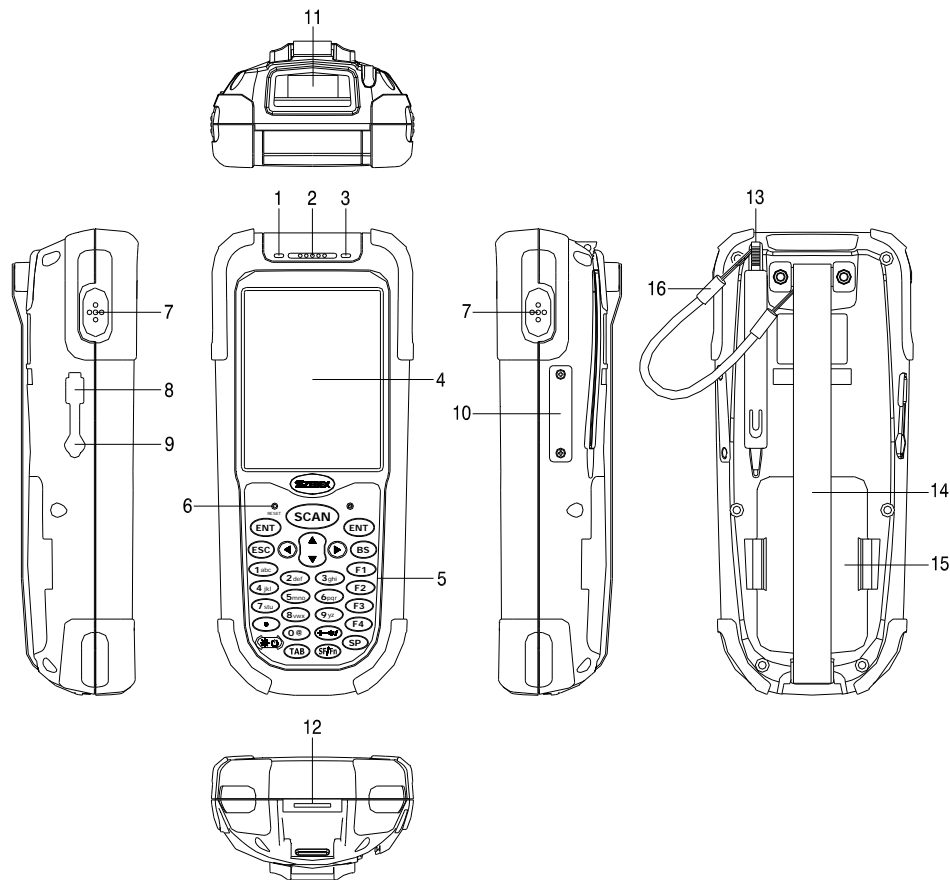

1	LED indicator	Indicates the status of read bar code or battery charge : Green for successful read barcode or full charge of battery. Red for battery just on charging.
2	Buzzer	Outputs operation confirmation tones.
3	LED indicator for WI-FI	Flashes in red when operating via WLAN communication
4	LCD screen	Display various data when a program is being run.
5	Stroke keys	A total of 29 keys are provided to turn power ON or OFF and other operations.
6	Reset switch (inside the hole)	Use reset needle (take off the other side of stylus pen cover) to press the RESET switch located inside the hole.
7	Scan button	For Barcode reading.
8	Mini USB port	This port is for USB communication with PC.
9	Ear Jack	Listens to the voice.
10	Mini SD I/O card slot	Install the Mini SD I/O card
11	Scan windows	Emits a laser for bar code reading.
12	RS-232 port	This port is for RS-232 communication with PC
13	Stylus pen	For touch screen operation and press RESET switch.
14	Hand strip	Protects the Handheld Terminal to drop.
15	Battery	Main battery
16	Sling	Sling for stylus pen

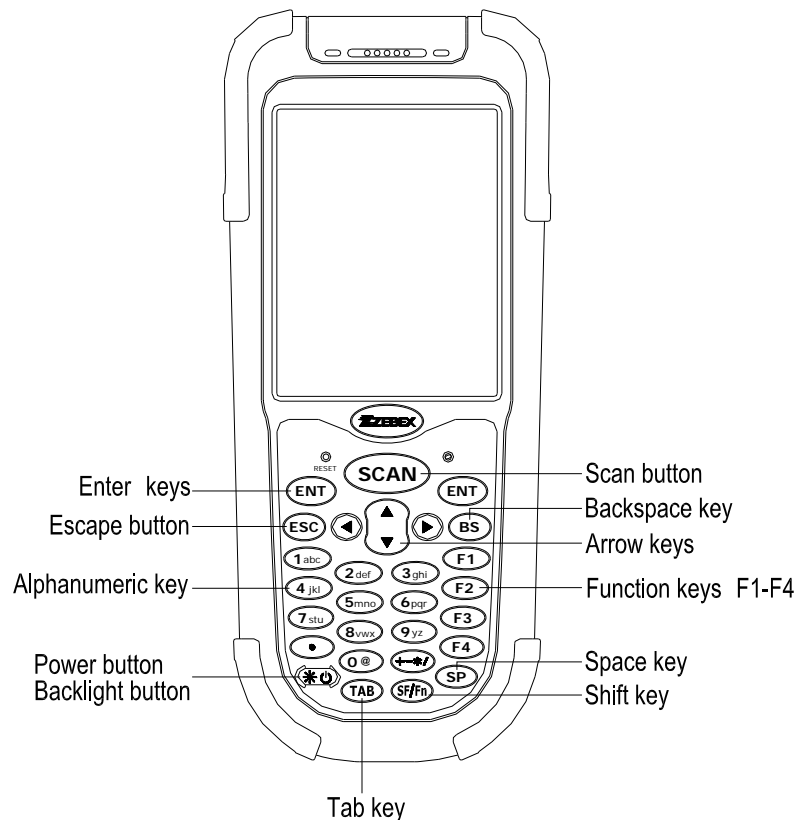


Arrow	Arrow keys	Press these to move around the screen.
ENT	Enter key	Press to confirm entries or commands.
0-9	Alphanumeric keypad	Press to enter numerical or alphabetical data.
F1-F4	Function keys	Press to access function keys 1-4.
BS	Backspace key	Press to move cursor and deletes the previous character each time.
	Power/Backlight on key	<ol style="list-style-type: none"> 1. Press to turn the power on. 2. Press more then 3 seconds for turn the terminal power off and go into the suspend mode. 3. Press to turn the LCD backlight on when it is off.
ESC	Escape key	Press to perform a cancel action.
SCAN	Scan key	Press and hold to scan a barcode.
SF/Fn	Shift key	<p>The key is used in combination with other keys to type special characters or perform other function keys.</p> <ol style="list-style-type: none"> 1. Press after SF/Fn key and press Up key to turn the input method into upper alphabetical. 2. Press after SF/Fn key and press Down key to turn the input method into lower alphabetical. 3. Press after SF/Fn key and press Left or Right key to turn the input method into numerical. 4. Press after SF/Fn key and press F1-F4 key to perform F5 - F8 key.
TAB	Tab key	Press to add a tab indention.
SP	Space key	Press to add a space character.

Getting Started



Inserting the Battery

Insert the battery pack as shown and watch the battery direction..

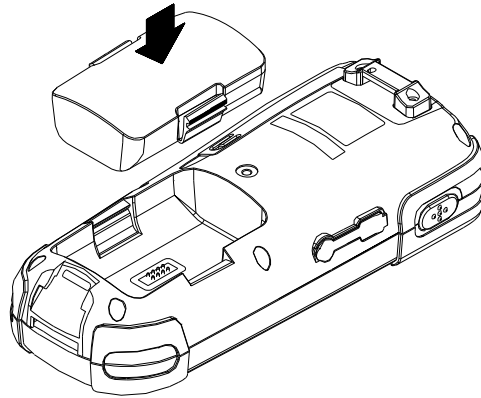

Remove the Battery

Push the side lock to pick up the battery pack.

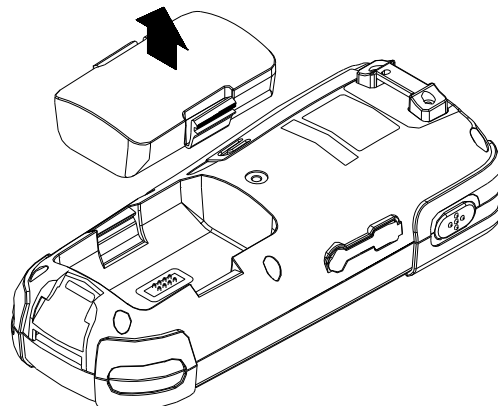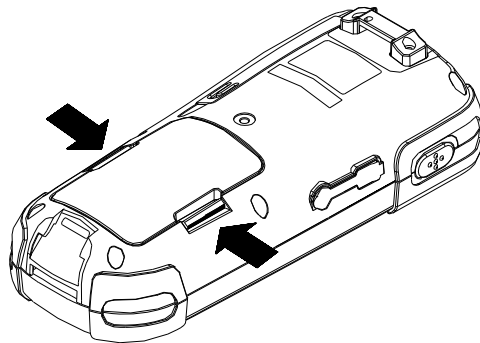


Charging the Battery


The Li-ion rechargeable battery can be charged while inserted in the device itself or independently via the recharging slot at the back of the cradle.


Charging by cable

Connect the charging cable and AC adaptor as shown.

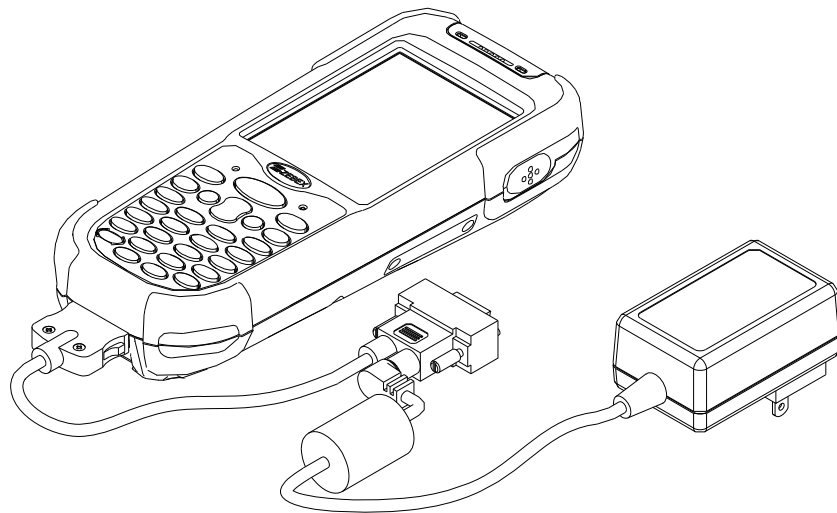

Charging by cradle

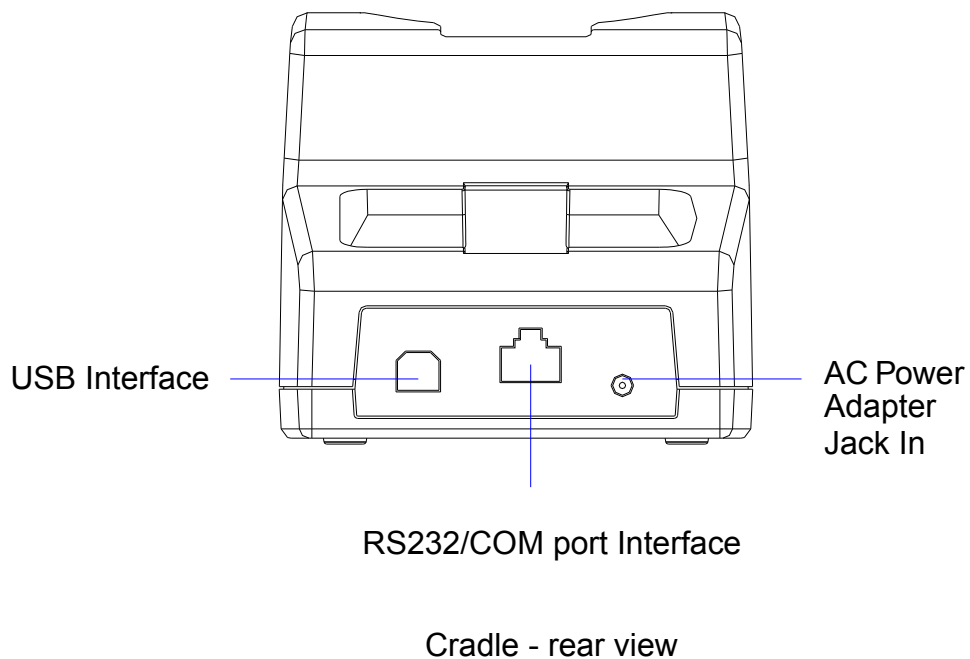

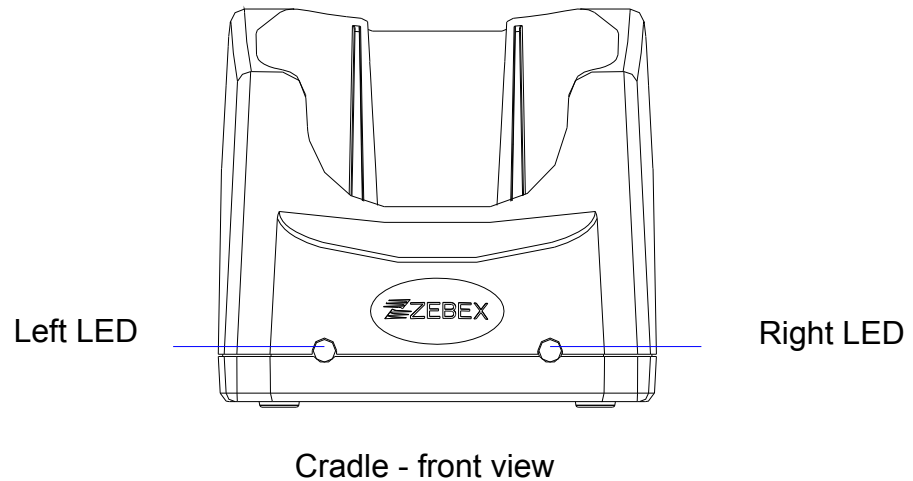


Cradle LEDs

Left LED - The LED lit when a battery is inserted into the rear battery slot of the cradle for recharge. It remains lit until the charge is complete.


Right LED - The LED lit when the cradle is connected to AC power.

Charging the battery separately in the cradle

Insert the battery into the compartment at the rear of the cradle.

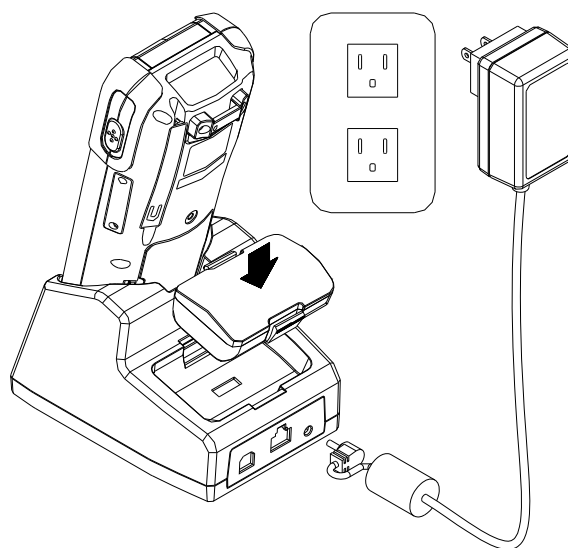

Connect the power jack to the cradle and plug AC adapter into the socket.

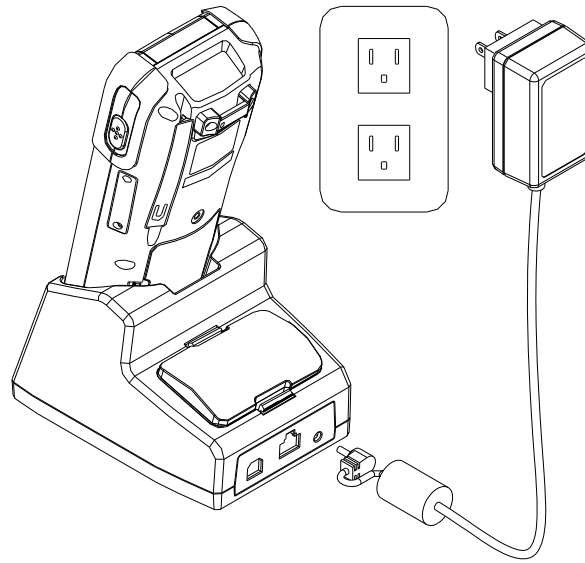

NOTES


When charging the battery for the first time, charge for at least 12 hours prior to use.

System Reset

Using the Warm reset function

Warm reset function allows you to return the device to the default settings, while not wiping all data from the memory.

Insert the needle into the reset hole as shown and press down gently, to reset the device.

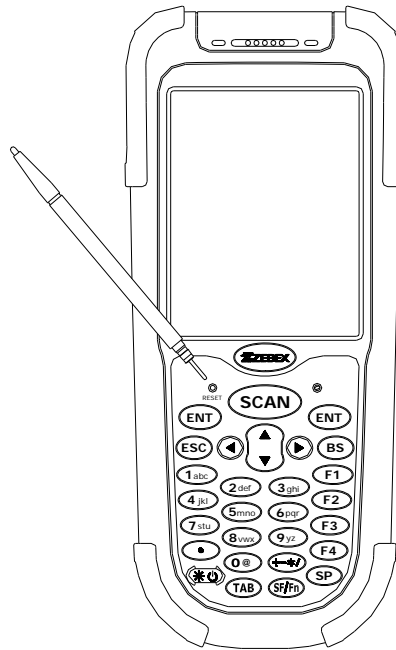

Using the Cold reset function

Cool reset function allows you to return the device to the factory settings, while wiping all data from the memory.

Press down and hold the power key and Insert the needle into the reset hole to cold reset the device.



WARNING

Cold reset will erase ALL pre-configured data on the scanner. Check carefully to make sure you have uploaded all important files to your PC before proceeding with the reset.

PC System Requirements

Windows XP Operating System
64 MB RAM
50 MB free HDD space
Interface : USB / RS-232 ports
WLAN transmitter (optional)
Bluetooth transmitter/receiver (optional)


Connecting To a PC

In order to use the software supplied with the Z-2060, the mobile data terminal must be connected to a PC.

Connecting via the RS232


In order for the sync software to work properly, the cradle must be connected to your computer's COM port. Attach one end of the RS232 cable to the RS232/COM interface connector on the cradle and the other to the COM1 port on your PC.

1. Or can use attach one RS-232 cable to connect with your computer's COM port directly.

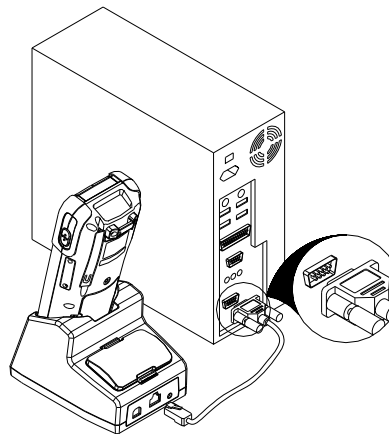


Connecting via USB Cradle

The cradle must also be connected via one of your PC's USB ports. Attach one end of the cable to the USB interface on the cradle and the other to your PC.

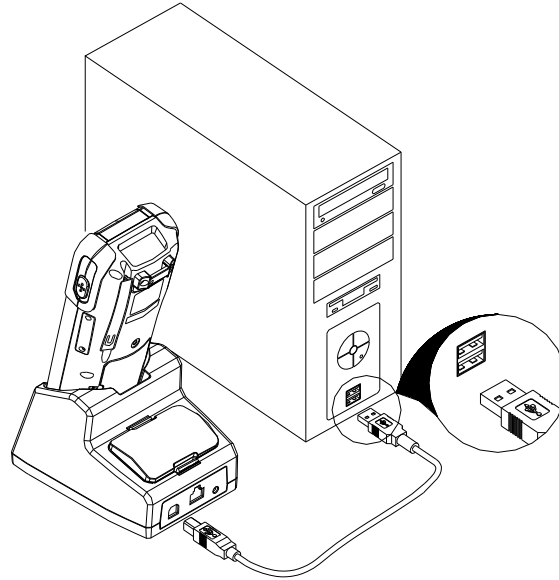


Connecting the Z-2060 directly via Mini USB

You can connect the Z-2060 directly to your PC, without the need for the cradle, using the Mini USB cable, attaching it to the port on the left hand side of the device.

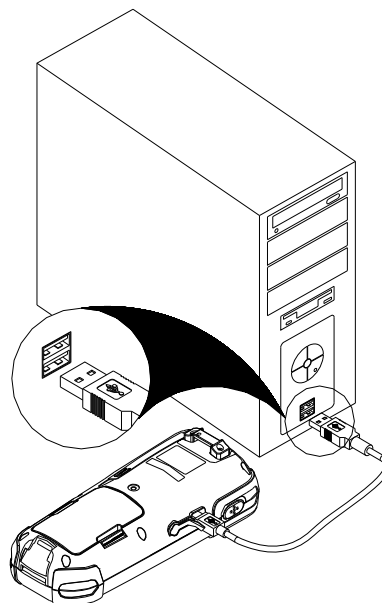


Inserting SD Card

1. Make sure the power is turn off.
2. Open the SD Slot cover as shown, Insert the SD card.
3. Close the SD slot Cover.

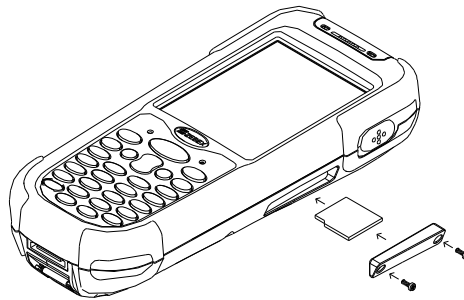

Remove the SD Card

1. Make sure the power is turn off.
2. Open the SD Slot cover as shown, Take off the SD card.
3. Closed the SD slot cover.

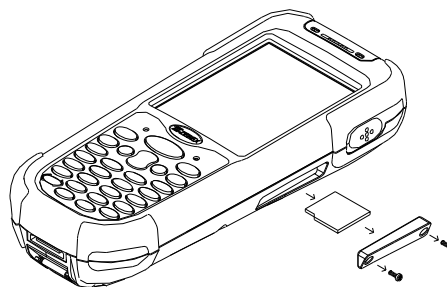

About The Product

The Z-2060 is a compact, ergonomic and durable portable data terminal. It is designed with an integrated wireless communication and 1D/2D barcode data capture touch screen and 29-key keypad. The design is ideal for the mobile worker as it simple and easy to use anywhere along a supply chain. It complies with IP64 regulations, and also supports the WLAN communication model by Z-2060WL.

The Z-2060 features a Intel PXA-270 processor (520MHz) and Windows CE.NET version 5.0 operation system. This combination delivers high performance, low power consumption and the diversity of a wireless networking platform. Compared with other systems currently available on the market, Z-2060 is the most cost-effective to offering optimum performance.

Prerequisites

Skills Required

The following skills are required by developers aiming to develop application software for the ZEBEX Z-2060 series.

- Windows programming
- Good knowledge of one or more of the following:
 - * Visual C++
 - * Visual Basic .NET
 - * Visual studio .NET
 - * Visual C#
 - * Active Server Pages and web programming

The following skills or experiences are also desirable.

- Windows CE devices
- ActiveSync
- Something networking experience.

Hardware Required

The following models of the ZEBEX Z-2060 series and the dedicated options are available.

Available models and the features:

Model name	Barcode scanner	Bluetooth	IEEE802.11b/g
Z-2060BA	1D Laser scanner	No	No
Z-2060WL	1D Laser scanner	Integrated	Integrated
Z-2062BA	2D image scanner	No	No
Z-2062WL	2D image scanner	Integrated	Integrated

Specifications

Model	Z-2060 series
System	
CPU	Inter PXA 270 processor (Max. 520MHz)
RAM	128 Mbyte
F-ROM	64 Mbyte
LCD Display	3.5", QVGA 240 X 320 TFT color panel with touch screen
Operating System	Microsoft Windows CE.NET 5.0
Power Management	
Main Battery	3.7V5,000mAH Li-ion rechargeable battery
3.7V 2,200 mAH Li-ion rechargeable	3.7V, 120mAH, Li-Poly rechargeable battery
Battery Life	8 hours (without wireless communication activated)
Scanning Performance	
Scan Engine	Symbol SE-955 1D laser engine Symbol SE-4400 2D image engine (optional)
Light Source	650 nm visible Laser Diode
Scan Rate	100 scans per second
Print Contrast	30% @ UPC/EAN 100%
Decoding Capability	
Barcode Symbolologies	UPC/ EAN/ JAN, Code 128/EAN 128, Code 39, Code 93, Interleaved 2 of 5, Discrete 2 of 5, Codabar, MSI/Plessey
Card Slots	1 x Mini SD I/O card
Communications / Interfaces	
Bluetooth	Bluetooth Class 2
IrDA	Standard IrDA 1.3
USB	USB 2.0
RS-232	Programmable up to 115,200 bps
WLAN	802.11b/g (optional)
Dimensions	190.5 mm (L) x82..8 mm (W) x 50.5 mm (H)
Weight	Approx. 480 g (battery included)
Environmental	
Operating Temp.	0°C ~ 50°C
Storage Temp	-10°C ~ 60°C
Operating Humidity	10% ~ 70% (non-condensing)
Storage Humidity	5% ~ 70% (non-condensing)
Drop Durability	Withstand 1.2m (4 feet) drop to concrete
Environmental Sealing	IP64 rated sealing
Regulatory Approvals	CE & FCC Part 15B, 15 C,CE RF,LVD,ESD
Cradle	Single slot USB / RS-232 charging cradle with spare battery slot
Software &Development	Microsoft VC 6.0 development environment Supports SDK for program development

Using Barcode Scanner


Scanning Barcodes

The Z-2060 is a highly versatile tool that can scan a wide range of barcodes but it is imperative that it is used in the correct manner.

To scan a barcode:

1. Hold the Z-2060 horizontally and point it directly at the barcode you wish to scan.
2. Once in the correct position, press the **SCAN** button.

An audible alarm is heard and the barcode digits will appear on the LCD screen if the scan is successful.

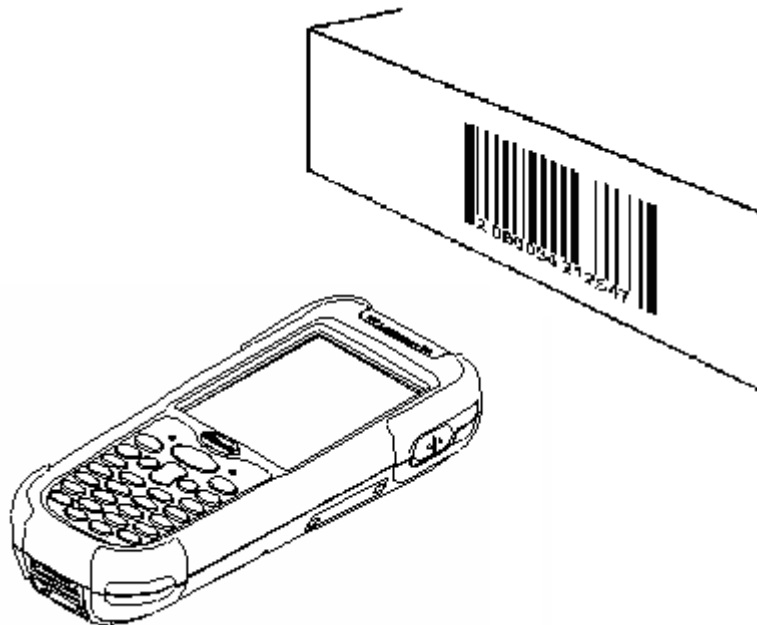

Using the Zebex PowerPack

To save your time and effort in developing applications on Z-2070, ZEBEX provides its own design system management tool called "PowerPack" to let you control it directly.


The PowerPack management tools which install in each of our WinCE product. It is free charge for you. We offer several functions for let you control your device without any programming.

Backlight

This application is set up the Backlight of LCD Panel and Key pad. It allows operators to set backlight duration, and also backlight can be set up as On & Off.

The Backlight Setting screen including 3 parts:

1. LCD
2. Keypad
3. Brightness Control Bar

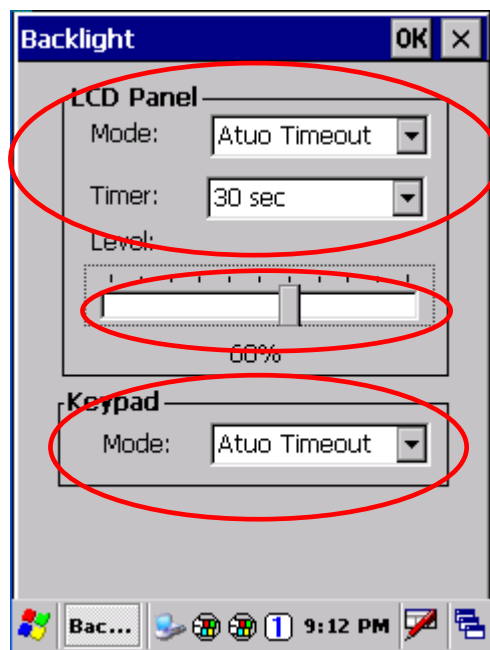


1. LCD

The LCD backlight setting.

Auto Mode: This function can be set up the LCD backlight to be auto off as Device hasn't been activated for certain interval.
You can set up the Auto off time from 15 sec to 15 min.

Always ON: This function can set up the backlight to be always on
Until the system into suspend mode.

Always OFF: This function can set up the backlight to be always off.

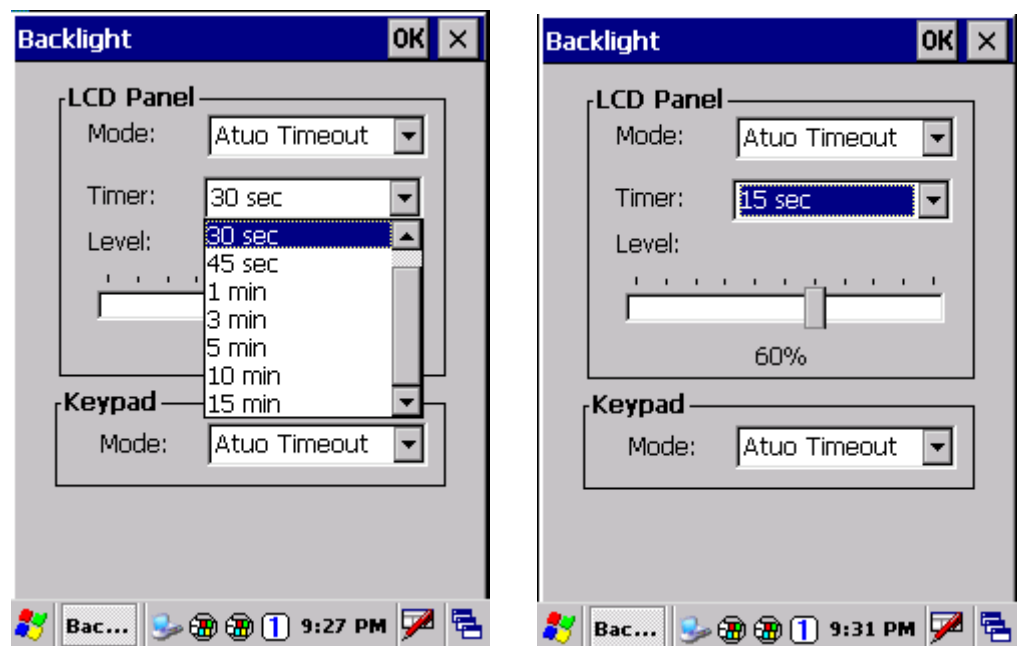

2. Keypad

The Keypad Backlight setting.

Auto Mode: This function can be set up the keypad backlight to be auto off as device hasn't been activated for certain interval.
The interval of the time for auto off was fixed on 5 seconds.

Always ON: This function can set up the keypad backlight to be always on until the system into suspend mode.

Always OFF: This function can set up the backlight to be always off.

3. Brightness Control Bar

The brightness of the backlight can be changed via control bar. Put up to light and put down to dark.

Calculator

This calculator function allows operators to add, subtract, multiply, and divide that simply provide basic logistic function in our daily basis.

The upper zone of the display area displays the memory content, and the lower zone is key pad.




Button description:

- MC : Clear buffer of memory.
- MR : Got the value of buffer.
- MS : Storage the value to buffer.
- M+ : Append the value to the buffer.
- CE : Clear the display area to "0", but keep the value in buffer.
- C : Clear the display and the buffer of memory.
- +/- : Change the value sign form Plus to Minus or Minus to Plus.
- 0~9 : Numeric key.
- / : Division function.
- * : Multiplication function.
- : Subtraction function.
- + : Addition function.
- . : A decimal point of dot.
- = : To be equal to, The amount.

File Transfer

File Transfer is a simple file transferring function tool, the tool can transfer file to another devices via blue tooth. Communication agreement of file transferring was adopted with OBEX agreement which shared with cell phone or Notebook PC. So you can simply use this function to transfer file to cell phone or Notebook PC, or doing file transferring between two terminals.

File Transfer is capable to auto-search devices with Bluetooth communication, so all devices within valid range will be listed in window of “**1. Select Remote Device.**”

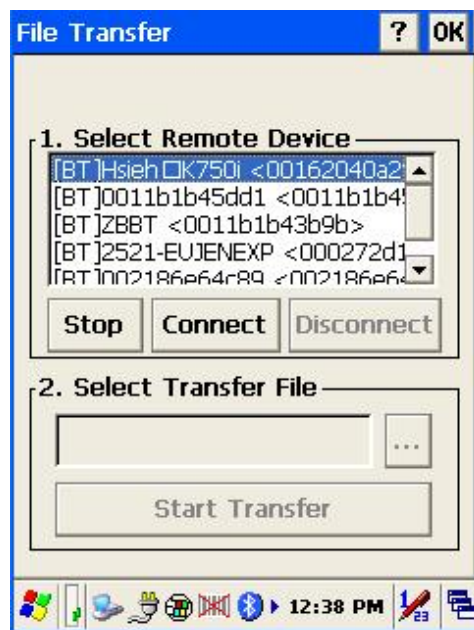


Function Instructions:

1. Select Remote Device

All devices with Bluetooth Communication functions are listed on the display.

- | | | |
|-------------------|----------|--|
| Query | : | For searching usable devices. |
| Stop | : | Stop searching. |
| Connect | : | For connecting with one device. |
| Disconnect | : | For disconnecting with current devices. |

2. Select Transfer File

Select file need to be transferred, press  bottom for selecting file.


- | | | |
|-----------------------|----------|---|
| Start Transfer | : | Start transferring file to targeted devices. |
|-----------------------|----------|---|

Ex. File Transferred Operation By Using Bluetooth


1. File Transferring by using Bluetooth:

Make sure Bluetooth devices was activated, Bluetooth Communication devices can be activated under Switch Function within PowerPack software utilities.


- 1.1 Select “**Query**” for searching Bluetooth devices, below window will pop up on display.

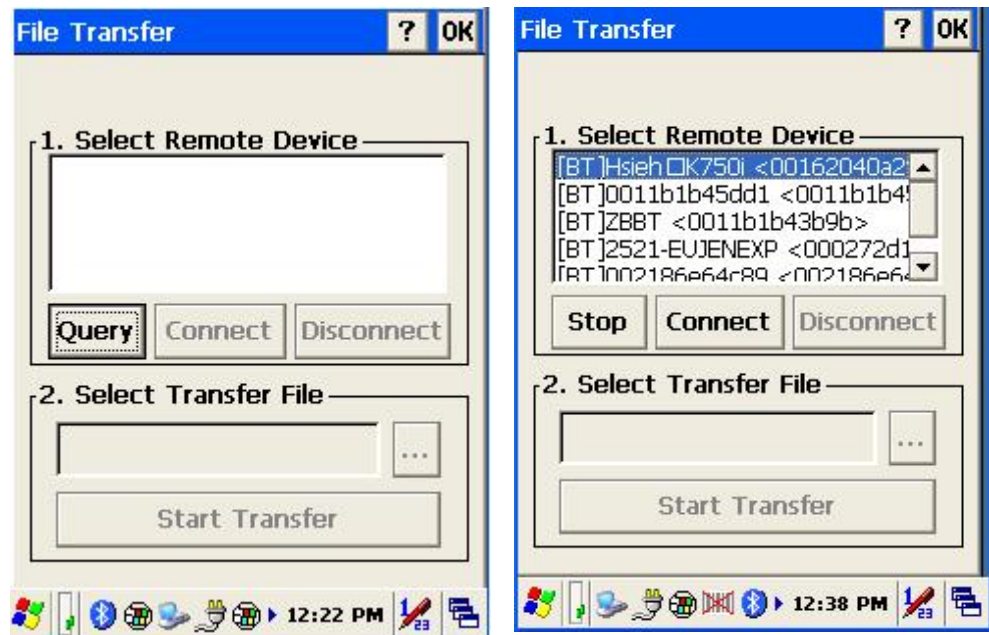


- 1.2 Select Bluetooth devices for receiving file, select “**Connect**” for connecting with devices, or select “**Disconnect**” to disconnect with current devices.

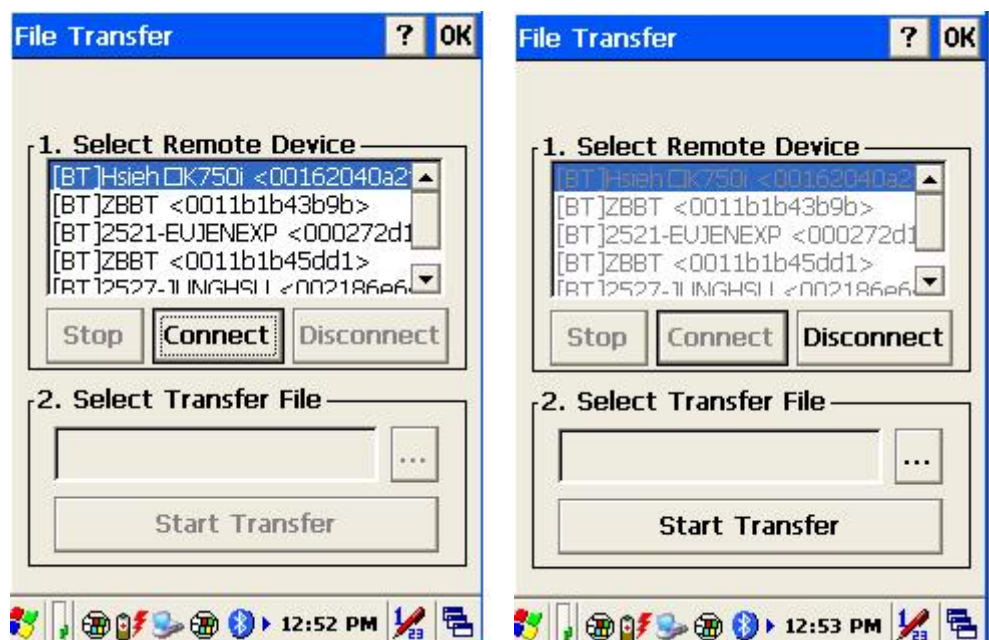

- 1.3 Click " ..." bottom to select the file need to be transferred, then click "OK" bottom to confirm.

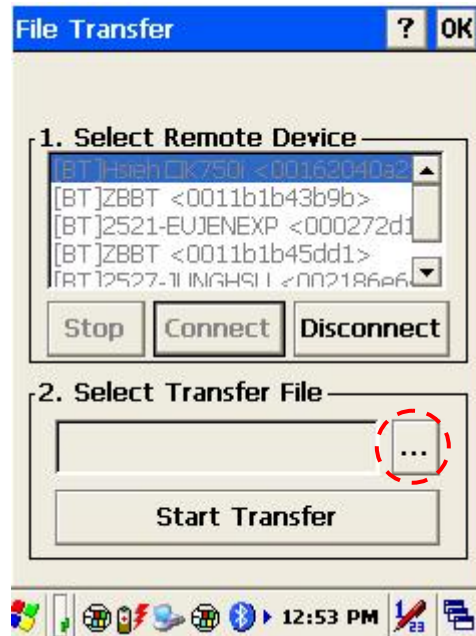


- 1.4 Select "Start Transfer" bottom to start file transferring.

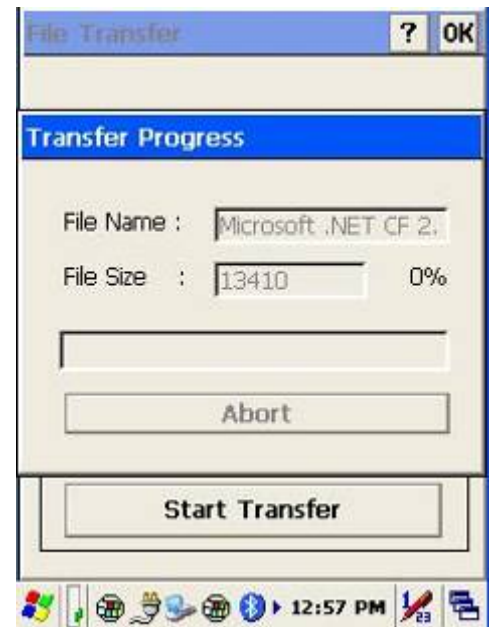

Preload Manager

The Preload Manager is an auto execution program for ZEBEX's WinCE device. You may set programs into the Preload list box and running the program by automatically or manually.

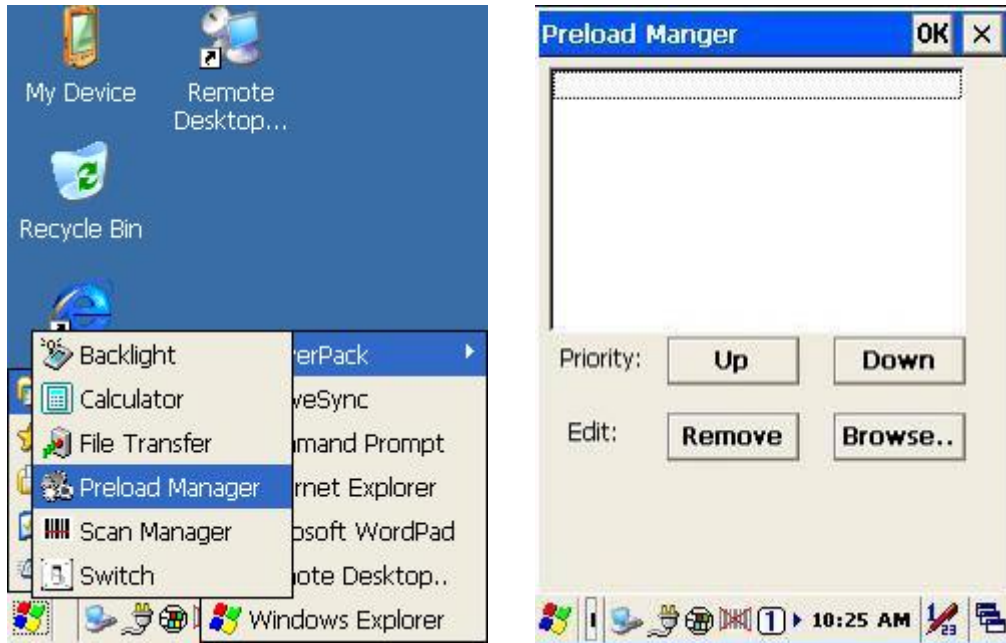


1. Modify Window located on top of display, providing functionalities of Priority, Remove and Browse.
2. Priority : Providing “UP ”and “DOWN ” two bottoms for adjusting priority on the lists.
1. Edit : Providing ”Remove “ 與 “Browse..” two functionalities , below are instructions:
Remove : Deleting selected functionalities.
Browse. : Selecting program for preloading, files can be selected from window by clicking Browse bottoms.


Preload Operation

1. Selected Program:

1.1 By clicking "**Browse..**" , Below menu will appear, select preload program by using folder. Programs can be selected more than once.

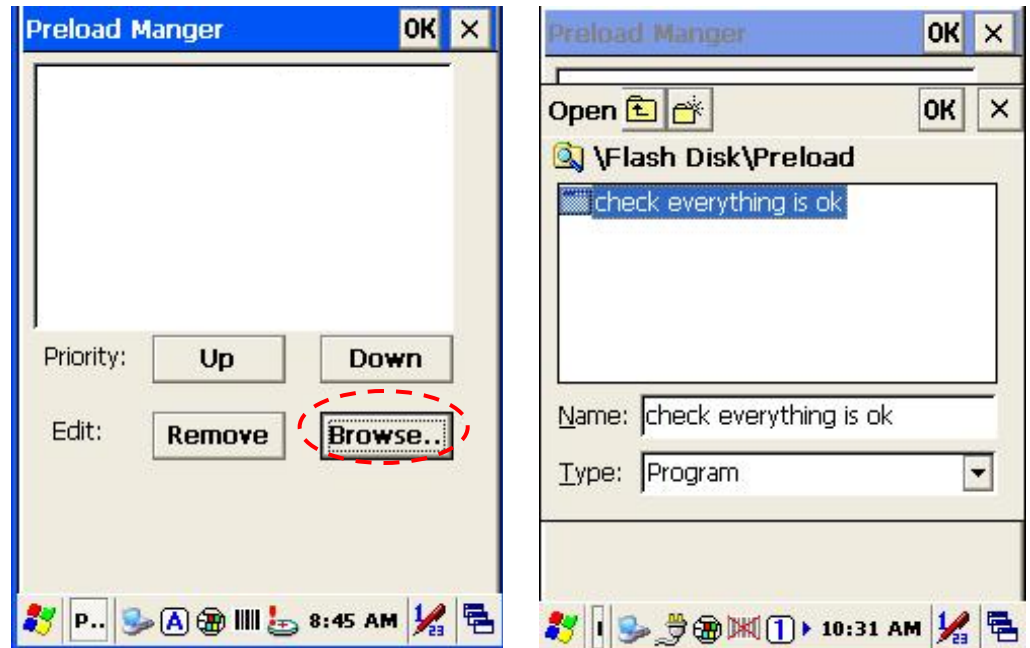

Confirming file by clicking "**OK**" will get back to Preload Manager main page. Then complete its process.

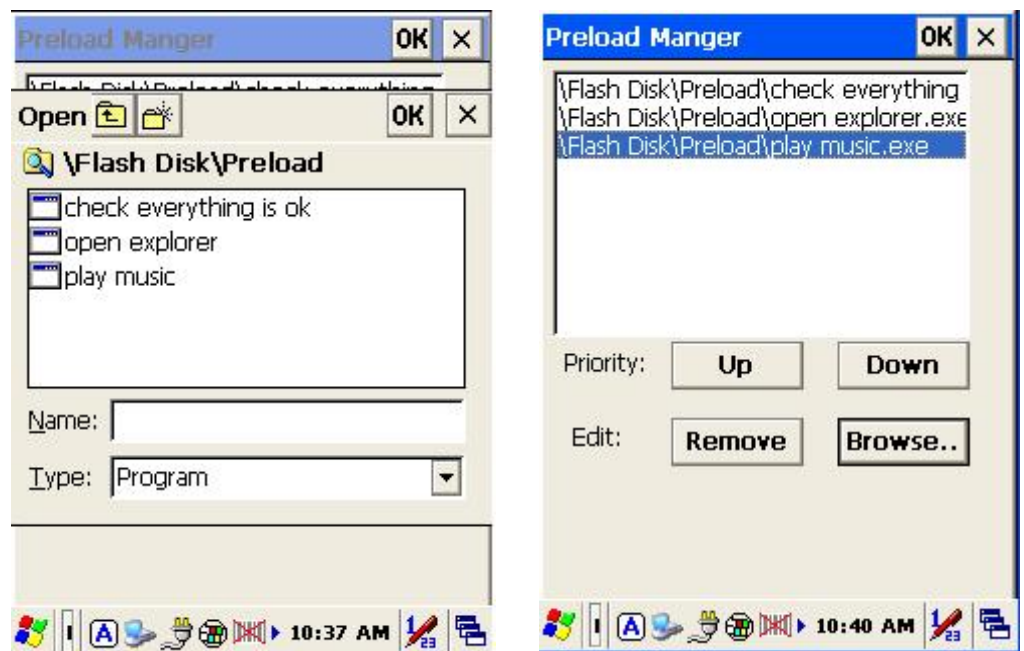

2. Reset preload priority:


If the preload priority need to be set up as below :

(1)play music -> (2)open explorer -> (3)check everything

Follow steps listed below :

2.1 Select by clicking play music.exe program and click” **Up** ” bottom, Therefore, play music.exe will be shifted up.

2.2 Then select by clicking check everything program and click “**Down**” bottom. Therefore, check everything program will be shifted down.

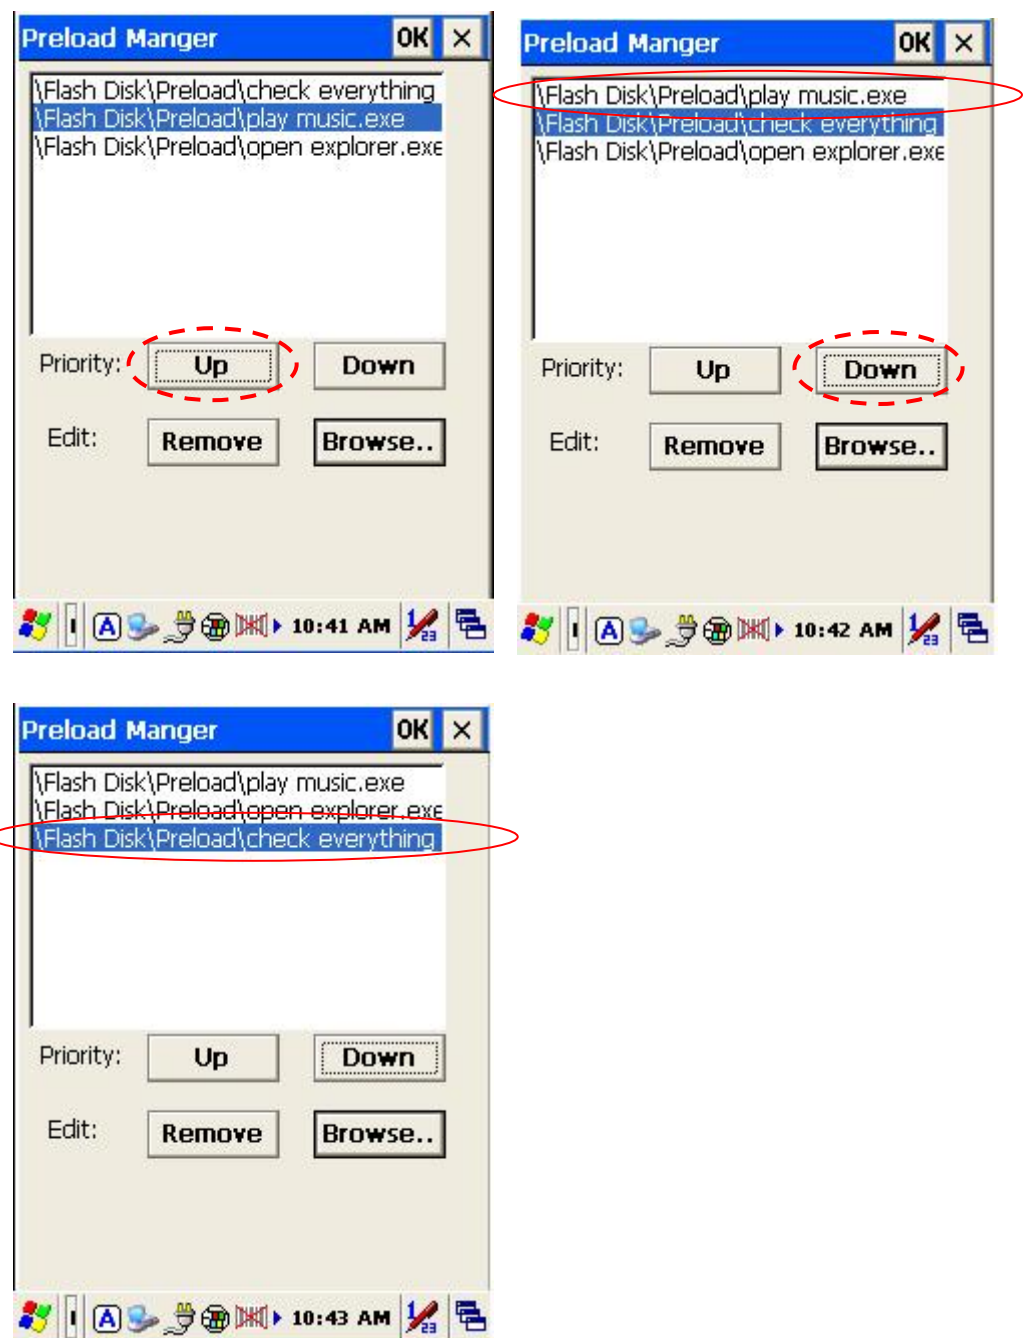


3. Remove a program:

In order to remove “open explorer” program, select by clicking program, then select “Remove” by clicking on bottom to finish command.



Switch



The WiFi & Bluetooth switch utility. This application provides as a switch function to let you easy turn on or off the function and power for WiFi and Bluetooth interface.

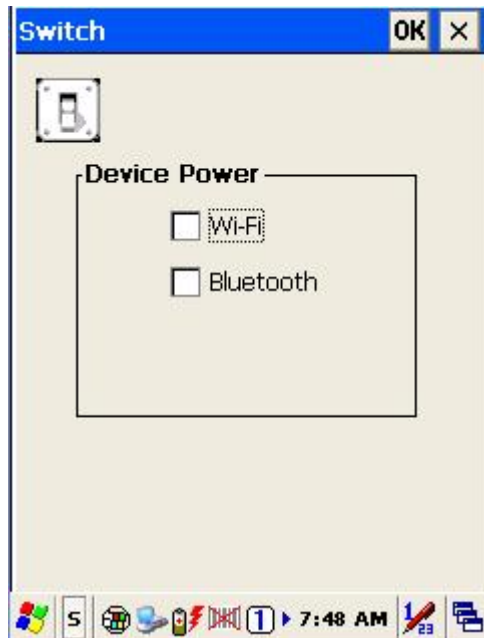

The available wireless network access point will be searching automatically when you check the selection for enable WiFi function. You can select an access point and press “ **Connect** ” button to connect with that network.




Double-click the "Add New..." on the list box will add a new wireless network, or double-click an existed access point on the list box for open the wireless properties for setting. You also can use "◀" or "▶" button for display more information for network setting.

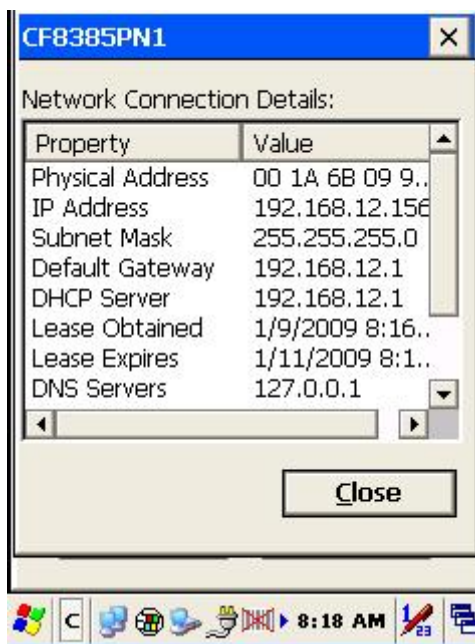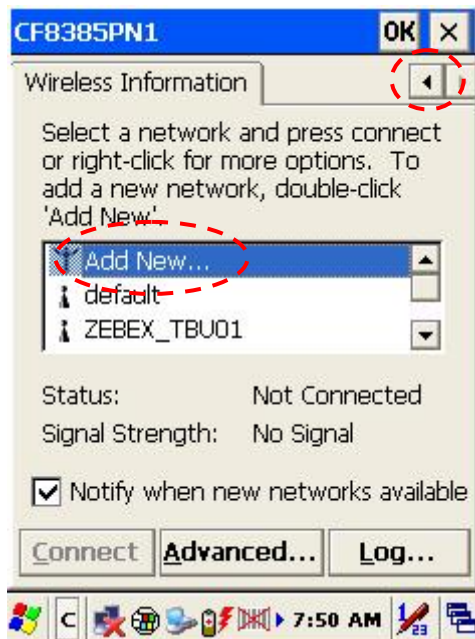

TrayScan


The TrayScan program is a barcode reader set up program, it offer you an easy way to enable or disable the barcode scanner, and also offer you to set up each barcode symbolic properties.

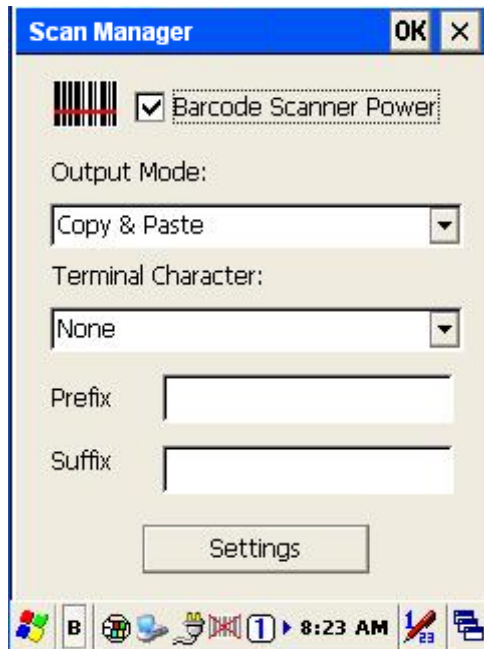

Below are instructions of functions on main page:

1. Output Mode

Providing three output methods such as Copy & Paste / Key Emulation / None (Copy to Clipboard).

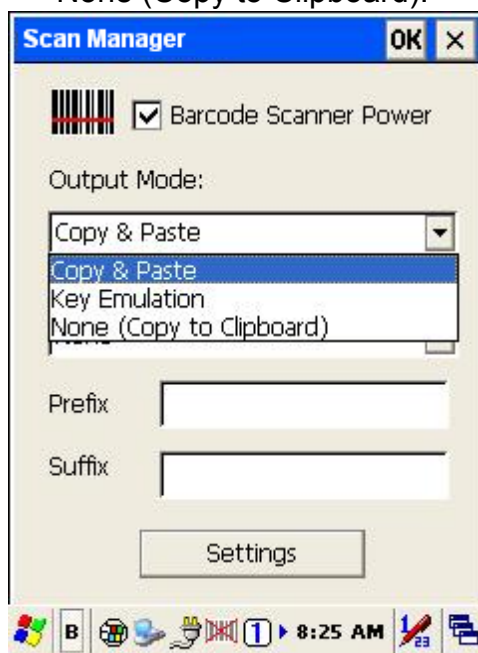

1.1 Copy & Paste

Copy and paste the barcode information into application that need to execute data as input. (ex. WordPad) ,

1.2 Key Emulation


Transfer barcode information via Key Emulation to executed software's edit window. Key Emulation function can also be used for barcode scanning under conditions of Terminal Emulation, Command Prompt and some other program without touch panel. Read data will be transferred to application program.

1.3 None(copy to clipboard)

Function provide required barcode information to application program, after this function was activated, scanner will read barcode information and save data into clipboard.

2. Terminal Character

Set the terminator control code with barcode data. We offer "Enter", "Space", "Tab", and "None" for selections. Terminator control code will be sent every time when barcode was read.

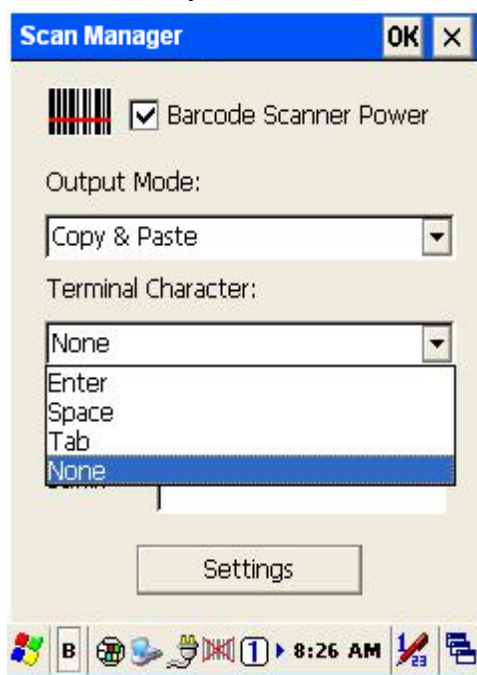

3. Suffix


Set the suffix character with barcode data.

4. Prefix

Set the preamble character with barcode data.

5. Setting


To set the barcode parameter value of each kind of barcode for barcode scanner. Press the "Setting" button in TrayScan application to start the barcode setting.

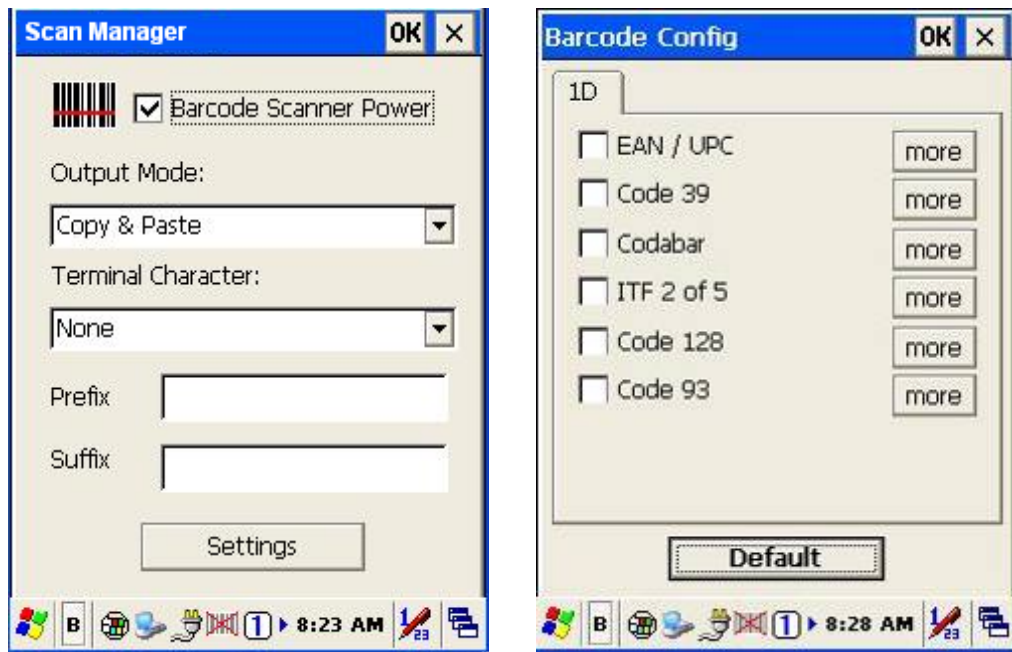


To check the barcode type selection for enable the type of barcode for read.

Press " **more** " button to setting the barcode parameter value of each kind of barcode.


Press " **Default** "button to use system default value to set up the barcode parameter. The default value was show in below pictures.

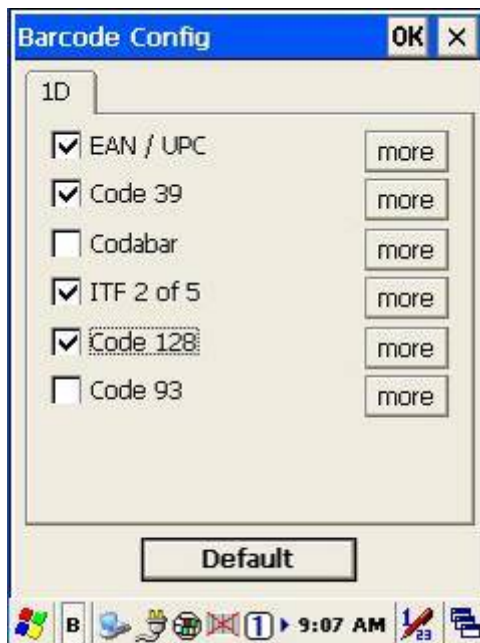

The default values of EAN/UPC code and Code39.

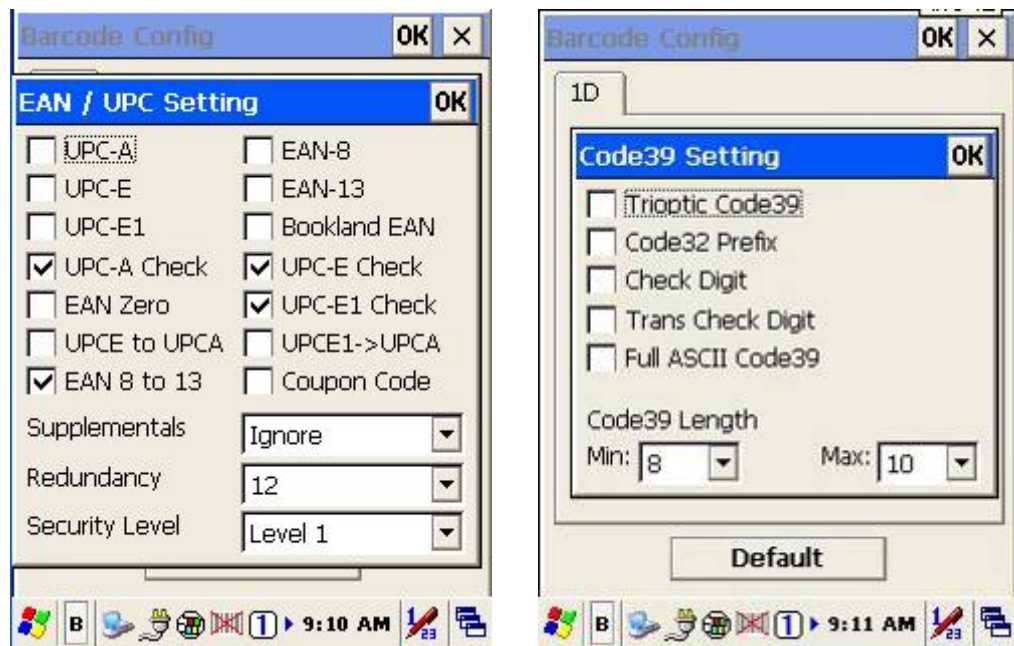


The default values of ITF 2 of 5 code and Code128.

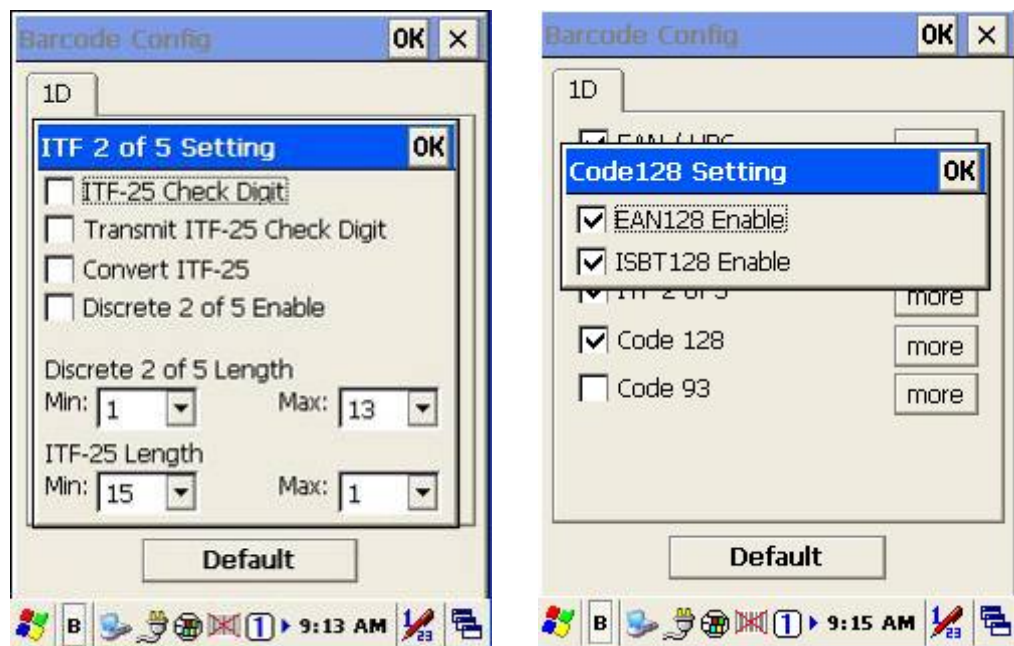


Backup/Restore


You can find this application is located on path "settings\control Panel".

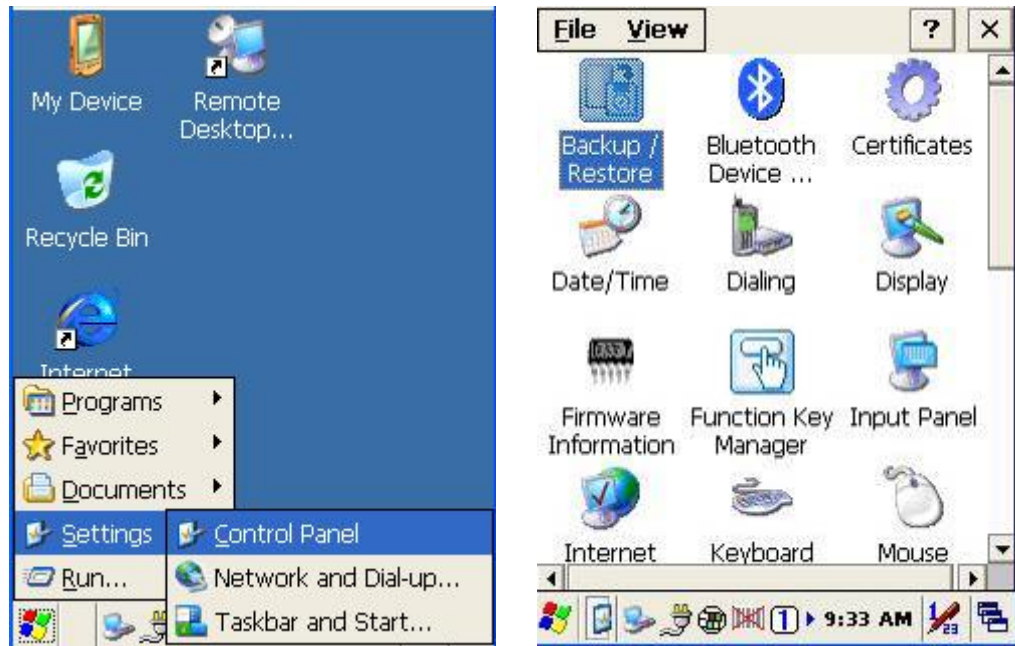

This application provides you an easy way to backup or restore the device setting information into Flash Disk and storage card. Application also provides selection of Flash Disk when there is no storage card. When Mini SD Card was installed into devices, program will auto-search and provides selection of SD Card from menu.

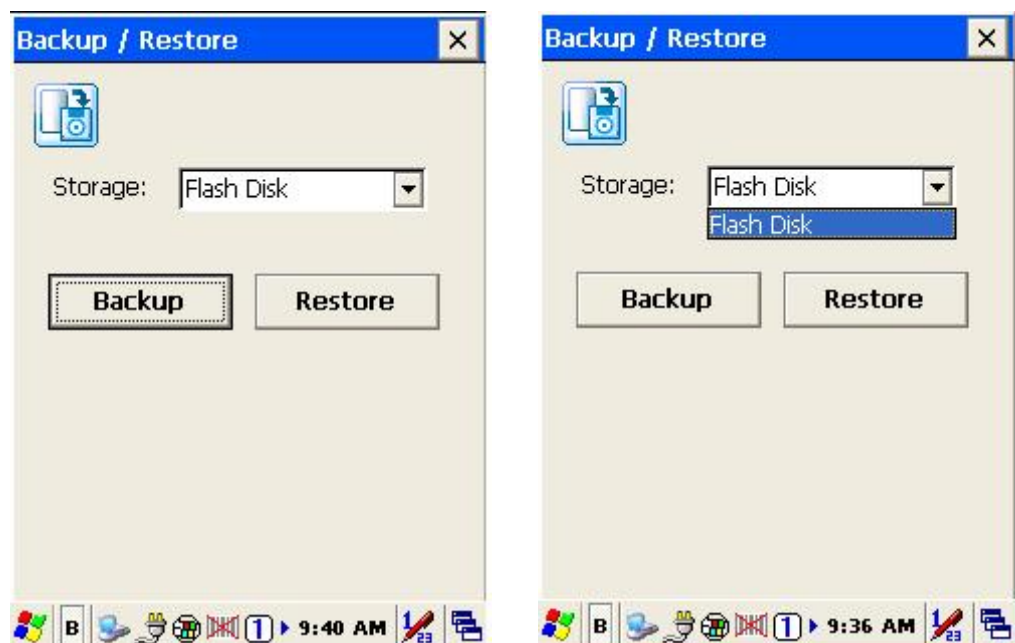


Backup : Select backup data as saved devices, press ” **Backup** ” bottom to proceed backup. Display will restore when backup was finished.

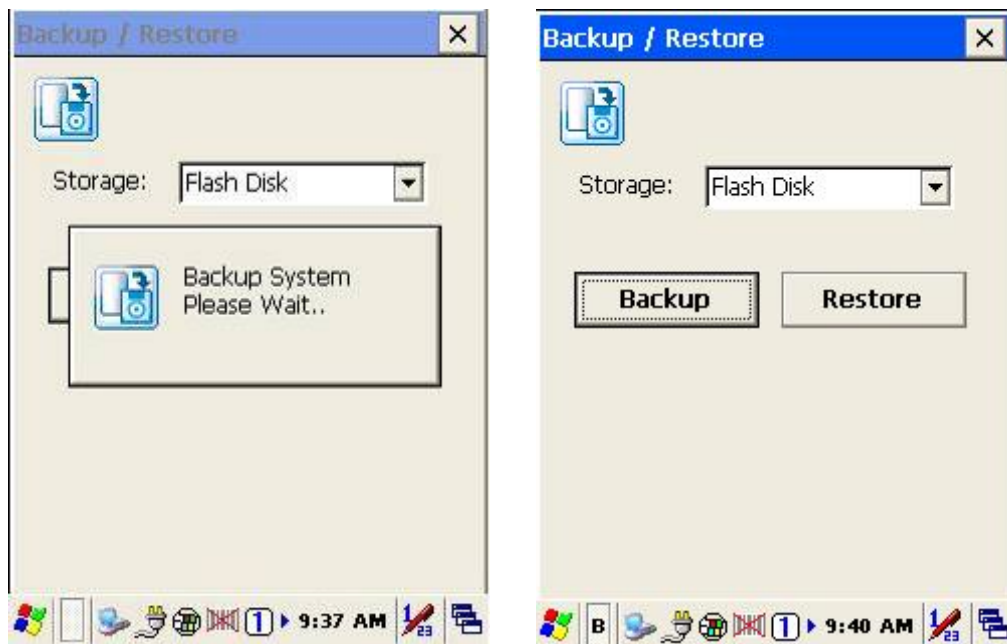


Firmware Information

This application will check and display the version information of the device's operation system and PowerPack utility.

You can find this application is located on path " \settings\control Panel\".

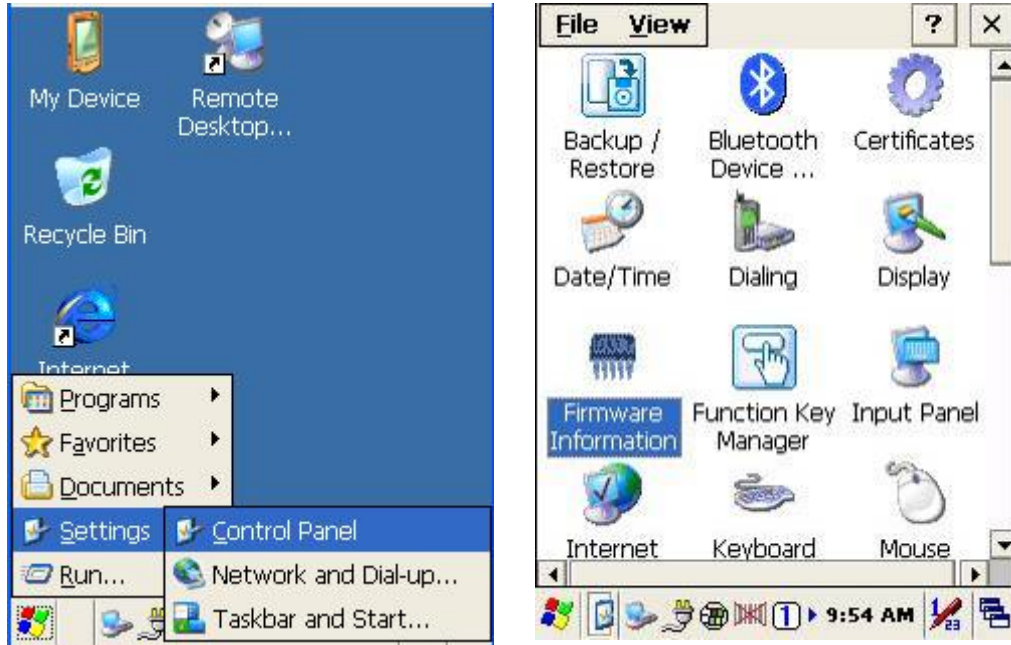


This information is good for identify device firmware version for future update or maintenance.

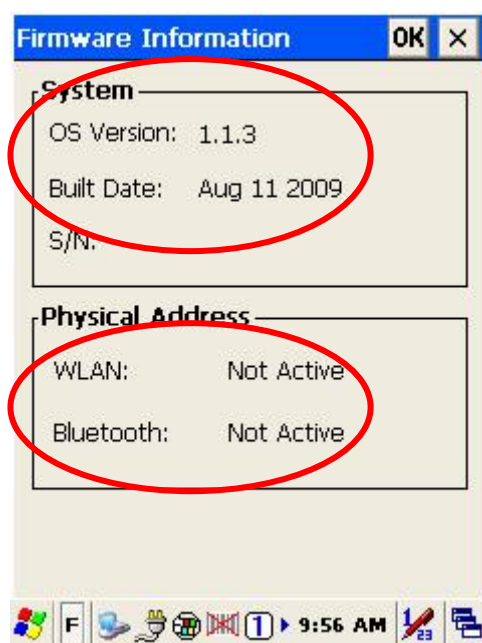

Function Key Manager


This application utility provides you an easier way to set up function key for your device. Through using this function key set up utility you will easily and quickly to start the application program like, Window Media Player, Calculator... etc, or your own designed application program, and even the windows system function, like increasing or decreasing the volume or doing the adjustment of brightness on LCD panel.

You can find this application is located on path “\settings\control Panel\”.

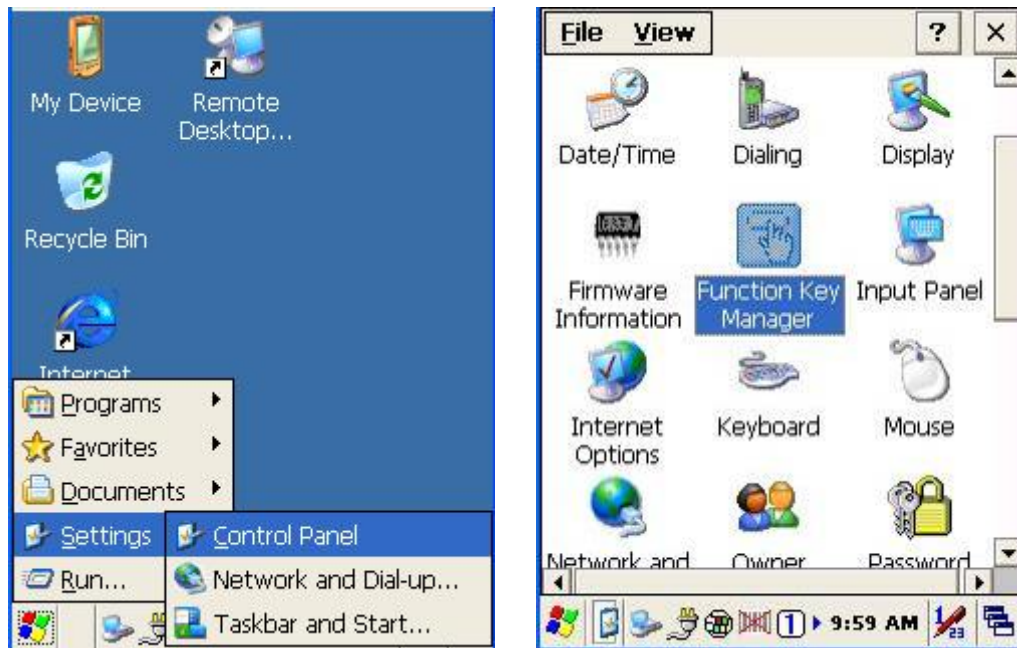


Program provides eight different function key (F1~F8) for set up, default setting was shown as below:

- F1: SIP ON/OFF ◦
- F2: Backlight Manager ◦
- F3: Power Switch ◦
- F4: Calculator.exe ◦
- F5: Volume + ◦
- F6: Volume - ◦
- F7: Backlight + ◦
- F8: Backlight - ◦

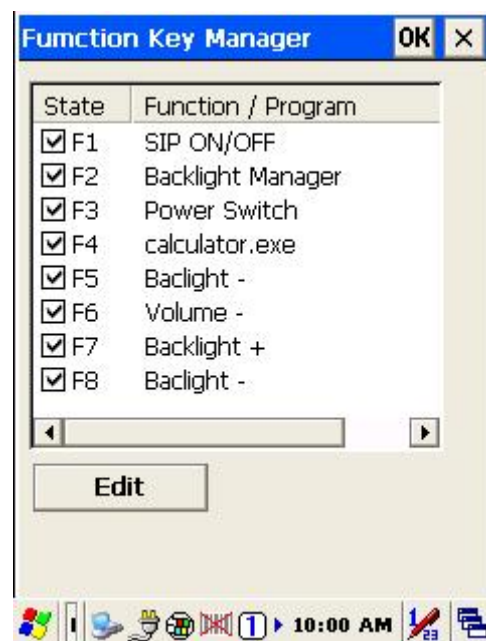

Function Key Manager Set Up Instruction:

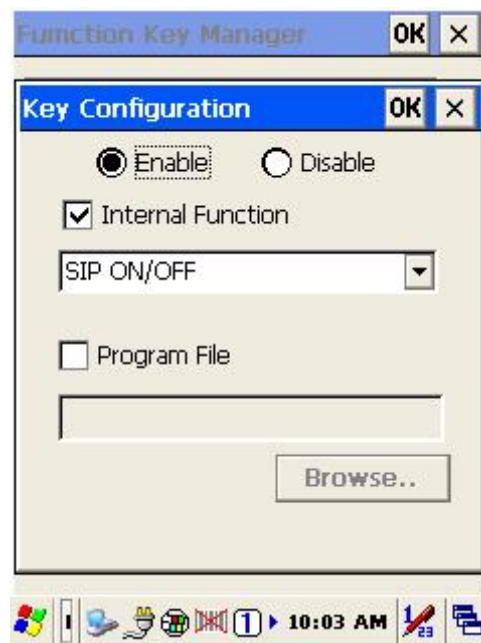

Enable/ Disable : Enable or Disable Function Key

Provide two set up methods of Internal Function and Program File


Internal Function : Provide following options,

- SIP ON/OFF
- Backlight Manager
- Power Switch
- Stylus Calibration
- Wi-Fi ON/OFF
- Bluetooth ON/OFF
- Volume +
- Volume –
- Backlight +
- Backlight –
- Cut
- Copy
- Paste


Program File : Install application program according to demand, this function can be used for setting up auto-execution.

1. Edit Internal Function items :

1.1 Select items need to be modified, select by clicking " **Edit** " bottom to enter set up window as below:

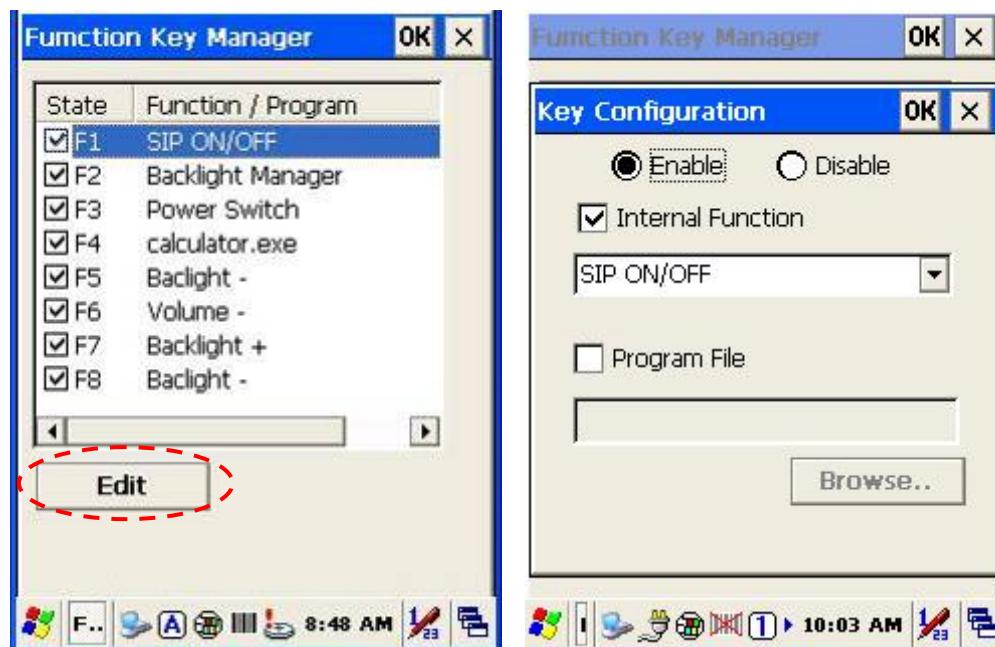


1.2 Select new functional item and complete editing.

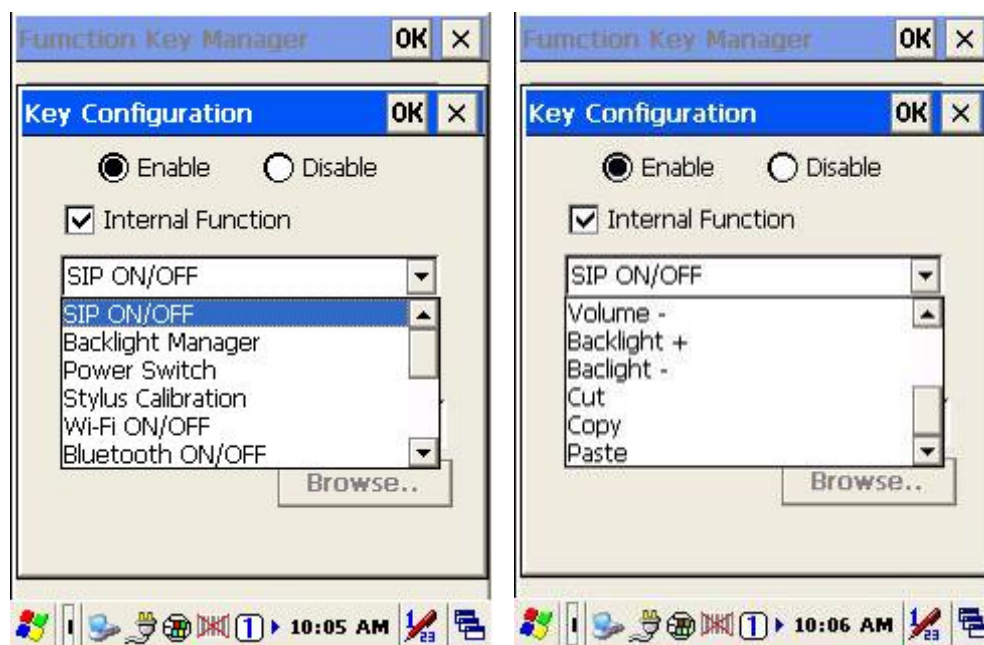


2. Edit application software for auto-execution :


2.1 Select Program File item , then click ” **Browse** ” bottom to enter File Opening Window.

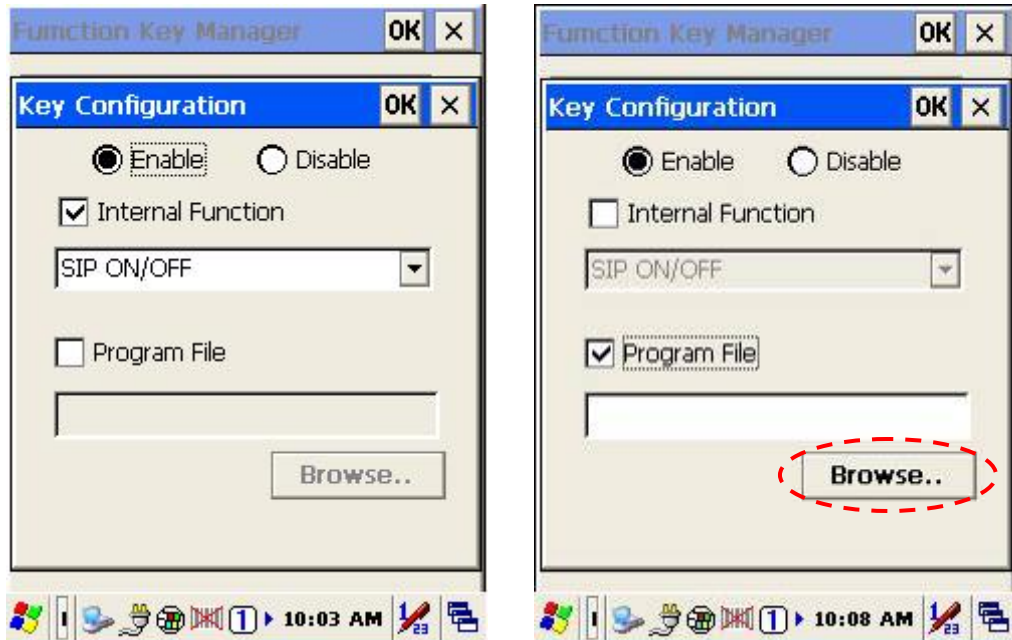

2.2 Select software required auto-execution, then select ” **OK** ” bottom to complete selecting process.

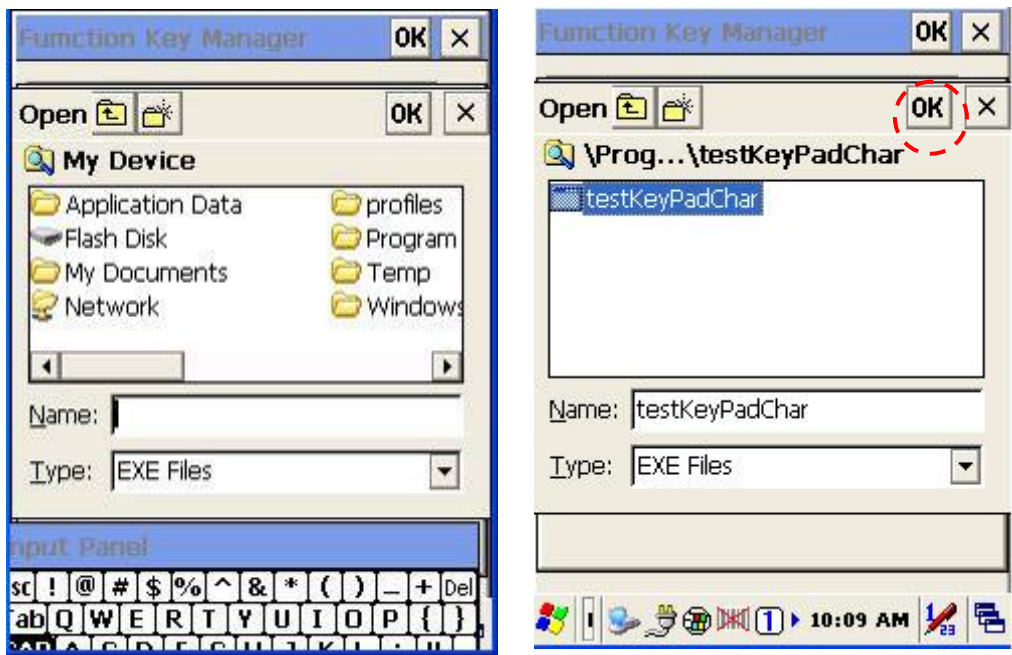

2.3 Confirmed Function / Program had been updated within column. Select by clicking " **OK** " bottom to complete editing process. When Function Key Manager Main Page reappear on the display, F1 on function key item lists had been updated to testkeypadChar.

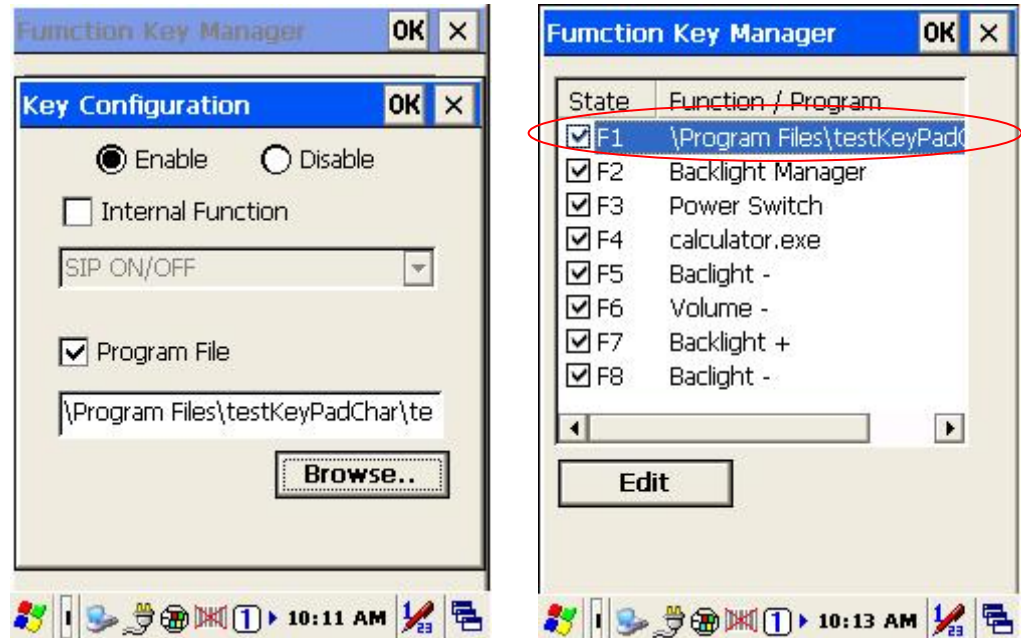

How to order

Please offer Part Number or Model Name for next purchase.

1. Z-2060 Series Windows CE.NET Handheld Computer Set.

Part Number	Model Name	Description
882-6000R9-000	Z-2060BA	Windows CE.NET Handheld Computer, W/1D engine/RS-232 DB9(F) cable / Mini USB interface
882-60WLR9-000	Z-2060WL	WindowsCE.NET Handheld Computer, W/Wireless LAN/BT module/1D engine/RS-232 DB9(F) cable / Mini USB interface
Standard Accessories		
170-70R449-180	RS-232 Cable	RS232 charging cable for Z-2050/2060
173-0U0000-150	MINI USB Cable	Terminal to PC USB port
862-206002-400	Battery Pack	Lithium-Ion rechargeable battery pack, 3.7V 5000 mAh
560-820500-741	Stylus Pen	Length: 95.7cm, including reset thimble
623-220500-061	Sling	Sling for stylus pen
623-220600-051	Hand Strip	Z-2060 hand strip and stylus pen holder
560-020600-891	Hand Strip Holder	Z-2060 hand strip holder
11S-900180-008	AC Adapter	AC 100~240V 50/60HZ 0.6A, DC 9V/2A
11S-000000-008	Integrated Plug head	for 11S-900180-008 Type: Britain/ U.S./Australia/Europe

2. CRD-60 Communication and Battery charging Cradle Set.



Part Number	Model Name	Description
-------------	------------	-------------

882-60CR00-000

CRD-60

Z-2060 communication and battery charging cradle

Standard Accessories



174-1RF050-150

RS-232 Cable

RS232 cable connect from CRD-60 to PC RS-232 Dsub port.



PIN-OUT configuration	
DB-9(F)	
1	CD (Carrier detect)
2	TxD (Transmit data)
3	RxD (Receive data)
4	DSR (Data set ready)
5	GND (Signal ground)
6	DTR(Data terminal ready)
7	CTS (Clear to send)
8	RTS (Request to send)
9	RI (Ring indicator)



PIN-OUT configuration	
1	NC
2	TxD (Transmit data)
3	RxD (Receive data)
4	NC
5	GND (Signal ground)
6	NC
7	CTS (Clear to send)
8	RTS (Request to send)
9	NC
10	GND(Signal ground)









173-0U3000-150

USB Cable

RJ45 USB type B cable connect from CRD-60 to PC USB port.



3. Z-2060 Series Optional Accessories

	Part Number	Model Name	Description
	170-70R449-180	RS-232 cable	RS232 charging cable for Z-2050/2060
			PIN-OUT configuration
			DB-9 (Female)
			1 CD (Carrier detect)
			2 TxD (Transmit data)
			3 RxD (Receive data)
			4 DSR (Data set ready)
			5 GND (Signal ground)
			6 DTR (Data terminal ready)
			7 CTS (Clear to send)
	173-0U0000-150	MINI USB Cable	Terminal to PC USB port
	174-1RF050-150	RS-232 Cable	RS-232 cable connect from CRD-60 to PC RS-232 Dsub port.
	173-0U3000-150	USB Cable	RJ45 USB type B cable connect from CRD-60 to PC USB port.
	862-206002-400	Battery Pack	Lithium-ion rechargeable battery pack, 3.7V, 5000mAh
	560-820500-741	Stylus Pen	95.7mm, including reset thimble

	Part Number	Model Name	Description
	623-220500-061	Sling	Sling for stylus pen
	623-220600-051	Hand Strip	Z-2060 hand strip and stylus pen holder
	560-020600-891	Hand Strip Holder	Z-2060 hand strip holder
	862-206002-400	AC Adapter	AC 100~240V 50/60HZ 0.6A, DC 9V/2A
	11S-000000-008	Adapter Head	Britain type head ,interchangeable plug, for 11S-900180-008 AC adapter
	11S-000001-008	Adapter Head	U.S. type head ,interchangeable plug, for 11S-900180-008 AC adapter
	11S-000002-008	Adapter Head	Australia type head ,interchangeable plug, for 11S-900180-008 AC adapter
	11S-000003-008	Adapter Head	Europe type head ,interchangeable plug, for 11S-900180-008 AC adapter

<< MEMO >>