

# **Programming Guide**

**Advanced 2D Image Scanner**



This Programming Guide is intended for:

- **2D Image Scan Module: Z-5652 Plus**

### Revision History

Changes to the original manual are listed below:

Version	Date	Description of Version
1.0	2018-01-30	Initial release
1.1	2018-08-10	Updated Continue Mode, Auto Scan Mode, JAN, GS1, QR Code

# Important Notice

No warranty of any kind is made in regard to this material, including, but not limited to, implied warranties of merchantability or fitness for any particular purpose. We are not liable for any errors contained herein nor for incidental or consequential damages in connection with furnishing, performance or use of this material. We shall be under no liability in respect of any defect arising from fair wear and tear, willful damage, negligence, abnormal working conditions, failure to follow the instructions and warnings, or misuse or alteration or repair of the products without written approval. No part of this document may be reproduced, transmitted, stored in a retrieval system, transcribed, or translated into any human or computer or other language in any form or by any means electronic, mechanical, magnetic, optical, chemical, biological, manual or otherwise, except for brief passages which may be quoted for purposes of scholastic or literary review, without express written consent and authorization. We reserve the right to make changes in product design without reservation and without notification. The material in this guide is for information only and is subject to change without notice. All trademarks mentioned herein, registered or otherwise, are the properties of their various, ill, assorted owners.

## ***General Handling Precautions***

- Do not dispose the scanner in fire.
- Do not put the scanner directly in the sun or by any heat source.
- Do not use or store the scanner in a very humid place.
- Do not drop the scanner or allow it to collide violently with other objects.
- Do not take the scanner apart without authorization

## ***Guidance for Printing***

This manual is in A5 size. Please double check your printer setting before printing it out. When the barcodes are to be printed out for programming, the use of a high-resolution laser printer is strongly suggested for the best scan result.

## **Firmware Notice**

**To use all functions in this guide please update to the latest firmware.**

Copyright © 2018 ZEBEX INDUSTRIES INC. All rights reserved.

## Table of Contents

Important Notice.....	ii
General Handling Precautions.....	ii
Guidance for Printing.....	ii
Using the Scanner .....	1
Beeper Indication.....	1
Settings and Programming.....	2
Program Set Up Flow.....	2
User Preferences .....	3
Show Version.....	3
System Settings .....	3
Customer's Factory Default.....	4
Scan Mode .....	5
Standby Time for Auto Scan Mode and Continue Scan Mode.....	6
Auto Scan Mode behavior.....	9
Auto Scan Mode (Smart) Motion Detect Sensibility-Main conditions.....	11
Auto Scan Mode (Smart) Motion Detect Sensibility- Secondary conditions.....	13
Auto Scan Mode (Illumination LED Standby off) Gain.....	14
Same Code Delay Time for Auto Scan Mode and Continue Scan Mode.....	15
Interface Switch.....	16
Good Read Beep On/ Off.....	17
Good Read Beep Length.....	18
Good Read Beep Frequency.....	19
Aiming Pattern .....	20
Illumination.....	21
Terminal Character.....	22
RS232 Baud Rate.....	23
USB Speed.....	25
Country Code.....	26
Readable Symbologies .....	31
All Symbologies .....	31
UPC-A.....	32
UPC-E.....	33
EAN-8.....	34
EAN 13.....	35
JAN code for Books.....	36
Code 128.....	37
Code 39.....	38
Code 93.....	39
Code 32.....	40
Code 11.....	41
Codabar.....	42
Plessey.....	43
MSI/Plessey.....	44
Interleaved 2 of 5.....	45

IATA 2 of 5 .....	46
Matrix 2 of 5 .....	47
Straight 2 of 5 .....	48
RSS 14 .....	49
RSS Expanded .....	50
RSS Limited .....	51
Component CC-A .....	52
Component CC-B .....	53
Component CC-C .....	54
PDF417 .....	55
Micro PDF417 .....	56
Data Matrix .....	57
QR Code .....	58
Micro QR Code .....	59
GS1-2D AIM ID .....	60
GS1-128 AIM ID .....	61
Aztec .....	62
MaxiCode .....	63
Symbology Features .....	64
UPC / EAN .....	64
UPC-A .....	65
UPC-E .....	67
EAN 8 .....	69
EAN 13 .....	70
JAN code for Books Separator .....	73
Code 39 .....	75
Codabar .....	77
Interleaved 2 of 5 .....	79
MSI / Plessey .....	81
Code 11 .....	83
Data Matrix .....	85
QR / Micro QR .....	87
QR / Micro QR Japanese Language Encoding Support .....	89
Aztec .....	90
Data Editing (Prefix) .....	91
Prefix Set Up Flow .....	91
All Prefix .....	92
UPC / EAN Prefix .....	93
Code 128 Prefix .....	95
Code 39 Prefix .....	96
Code 93 Prefix .....	97
Code 32 Prefix .....	98
Code 11 Prefix .....	99
Codabar Prefix .....	100
Plessey Prefix .....	101
MSI Prefix .....	102

Interleaved 2 of 5 Prefix .....	103
IATA 2 of 5 Prefix .....	104
Matrix 2 of 5 Prefix .....	105
Straight 2 of 5 Prefix .....	106
RSS 14 Prefix .....	107
RSS Expanded Prefix .....	108
RSS Limited Prefix .....	109
Component CC-A Prefix .....	110
Component CC-B Prefix .....	111
Component CC-C Prefix .....	112
PDF 417 Prefix .....	113
Micro PDF 417 Prefix .....	114
Data Matrix Prefix .....	115
QR Prefix .....	116
Micro QR Prefix .....	117
Aztec Prefix .....	118
MaxiCode Prefix .....	119
Data Editing (Suffix) .....	120
Suffix Set Up Flow .....	120
All Suffix .....	121
UPC-A Suffix .....	122
UPC-E Suffix .....	123
EAN 8 Suffix .....	124
EAN 13 Suffix .....	125
Code 128 Suffix .....	126
Code 39 Suffix .....	127
Code 93 Suffix .....	128
Code 32 Suffix .....	129
Code 11 Suffix .....	130
Codabar Suffix .....	131
Plessey Suffix .....	132
MSI Suffix .....	133
Interleaved 2 of 5 Suffix .....	134
IATA 2 of 5 Suffix .....	135
Matrix 2 of 5 Suffix .....	136
Straight 2 of 5 Suffix .....	137
RSS 14 Suffix .....	138
RSS Expanded Suffix .....	139
RSS Limited Suffix .....	140
Component CC-A Suffix .....	141
Component CC-B Suffix .....	142
Component CC-C Suffix .....	143
PDF-417 Suffix .....	144
Micro PDF-417 Suffix .....	145
Data Matrix Suffix .....	146
QR Code Suffix .....	147

- Micro QR Suffix .....148
- Aztec Suffix.....149
- MaxiCode Suffix .....150
- Code Settings .....151
  - Set Lengths for Codes.....151
  - Set Lengths for Code 128 .....153
  - Set Lengths for Code 39 .....154
  - Set Lengths for Code 93 .....155
  - Set Lengths for Codabar.....156
  - Set Lengths for Interleaved 2 of 5 .....157
  - Set Lengths for Code 11 .....158
  - Set Lengths for MSI .....159
  - Set Lengths for Matrix 2 of 5.....160
  - Code Identifiers.....161
  - Code Identifiers Table .....162
  - Keyboard Caps Lock State .....163
  - Function Key Mapping .....164
  - ASCII Code.....165
- USB Virtual COM Driver Installing.....186
- JavaPOS Setting .....187
  - JavaPOS .....187
  - JavaPOS Version .....188
  - Install the Java2 Runtime Environment.....188
  - Install the Service Object and JavaPOS files .....188
  - How to use RS232 scanner with JavaPOS Driver .....188
  - Use barcodes to configure the scanner .....189
  - Running the JavaPOS Test utility .....190
  - How to use JavaPOS driver at your application.....190
  - How to use USB scanner with JavaPOS Driver .....191
  - Install the Java RXTXcomm API .....192
  - Running the JavaPOS Test utility .....192
  - How to Use JavaPOS Driver at your application .....193



# Using the Scanner

## Beeper Indication

---

Beeps	Indication
3 beeps in a series from low to high pitch	Power up
1 short beep	A barcode has been successfully decoded
2 short beeps	The scanner has entered program mode
1 long beep	A setting has been programmed
3 beeps in a series from low to high pitch	The scanner has exited program mode
3 short beeps	Error setting the scanner

# Settings and Programming

Scan selected barcodes in this manual to affect setup and programming of your 2D image barcode scanner. Decoding options and interface protocols can be tailored to a specific application.

Setup parameters are stored in non-volatile memory in the scanner and are retained even when power is off. Setup parameters change only when you reset them. You may need to hide adjacent code patches with your hand when scanning.

## ***Program Set Up Flow***

Scan "Set" to set up --> Scan selected barcode --> Scan "End" to confirm the setup.

# User Preferences

---

## ***Show Version***


Scan this barcode to display firmware version.



Read device information

## ***System Settings***


Scan this barcode to return all parameters to the default values.

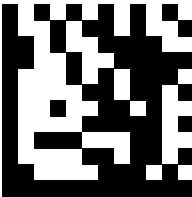

Set




Factory default settings

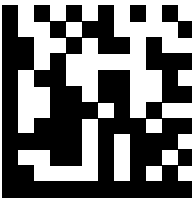


End

### ***Customer's Factory Default***

Scan barcodes below to set or delete customer's factory default.

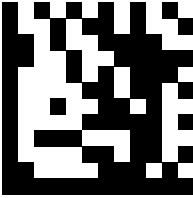


Set

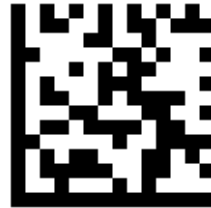

Save customer's factory default



Delete customer's factory default

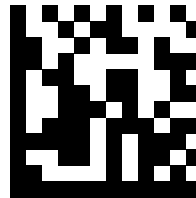

End


## Scan Mode

Scan a barcodes below to set the scanner to different modes.


**Trigger Mode:** The scanner becomes inactive as soon as the data is transmitted by pressing the trigger button.

**Auto Scan Mode:** The scanner is still active after the data is transmitted but the successive transmission of the same code is not allowed.

**Continue Scan Mode:** scans periodically non-stop (ex. Scans once a second).

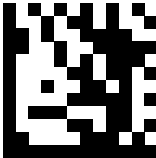


Set

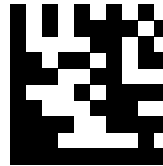


Trigger Mode



Auto Scan Mode (Default)

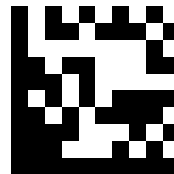


Continue Scan Mode

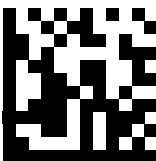


End

### Standby Time for Auto Scan Mode and Continue Scan Mode


Use the barcodes below to set the standby time for Auto Scan Mode and Continue Scan Mode.

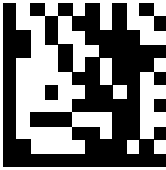

Set

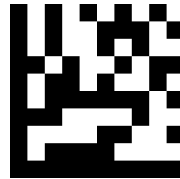

1 minute (Auto Scan Mode Default)

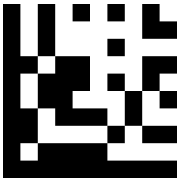


3 minutes




5 minutes



10 minutes

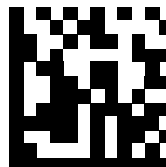

End

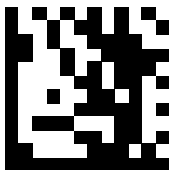

Set



15 minutes




20 minutes




25 minutes




30 minutes

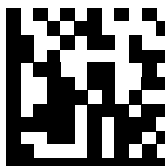


End

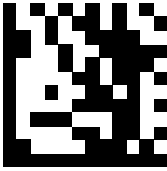

Set

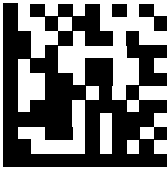

End

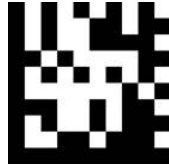

Never (Continue Scan Mode Default)




### ***Auto Scan Mode behavior***

Scan a barcodes below to change Auto Scan Mode behavior.

**Default:** The default behavior.

**Smart:** Motion detection level is adjustable under this mode.

**Illumination LED Standby off:** Illumination LED is OFF while standby; short blink after good read as indicator.

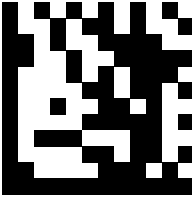

Set




Default (Default)



Smart



Illumination LED Standby off

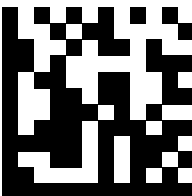

End


Auto Scan Mode description	Default mode	Smart mode	LED Standby Off mode
Illumination LED behavior for Motion Detection	On	Off	Off
Motion Detection condition setting	Default, no other condition support	2 Conditions and multi-levels support	Motion Detection is NOT Support
Barcode scan with Illumination LED ON	Yes	Yes	No
Gain level setting for image quality	Not Support	Not Support	Yes
Low environment light application	Yes	Yes	Not recommended

#### Auto Scan Mode descriptions:

1. Default mode: For general use. The illumination LED lights on based on default motion detection settings.
2. Smart mode: For certain environments, the illumination LED may light on too easily with the default motion detection settings. Smart mode can be used to adjust the conditions. You may change the sensibility as needed.
3. LED Standby Off mode: In this mode, the illumination LED is OFF when the device is in standby and a short blink is given after a good read as indicator. Motion detection is NOT supported in this mode so the use of this mode in low light environment is NOT recommended.

**Auto Scan Mode (Smart) Motion Detect Sensibility-Main conditions**

Set the motion detection sensibility level. Main conditions set the full image screen motion detection mode. The higher the level the more sensitive the condition becomes.

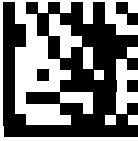

Set



Level 1 (Low)



Level 2




Level 3




Level 4



Level 5 (Default)

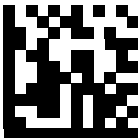

End

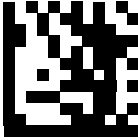

Set



Level 6



Level 7




Level 8



Level 9




Level 10 (High)

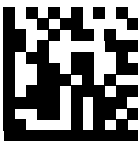

End

***Auto Scan Mode (Smart) Motion Detect Sensibility- Secondary conditions***

Set the motion detection sensibility level. Secondary conditions enhance image screen motion detection by focusing on center area mode. The higher the level the more sensitive the condition becomes.

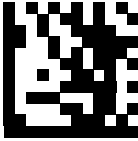

Set



Level 1 (Low)



Level 2




Level 3 (Default)



Level 4




Level 5 (High)

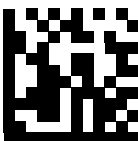

End

### ***Auto Scan Mode (Illumination LED Standby off) Gain***

Set Gain level for captured image quality. When the lighting is low, the higher gain level can enhance the captured image quality for better scanning performance.

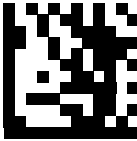

Set



Level 1 (Low)



Level 2 (Default)




Level 3



Level 4




Level 5 (High)

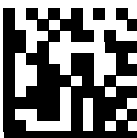

End

**Same Code Delay Time for Auto Scan Mode and Continue Scan Mode**

Scan a barcode below to select the duration of the delay time for Auto Scan Mode and Continue Scan Mode.

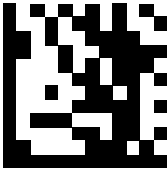

Set



500 msec (Default)




1 sec



1.5 sec




2 sec

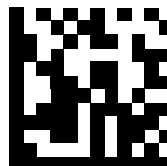


End

### Interface Switch


Your 2D Imager supports interfaces such as USB HID, RS232 serial, and USB virtual COM. To switch the interface, simply select the appropriate cable and configure the proper interface by following interface selection.

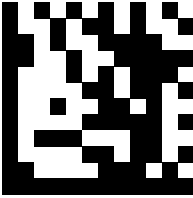


Set

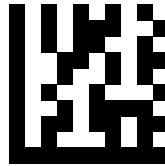

RS-232

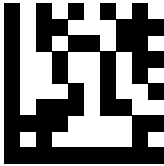


USB Keyboard

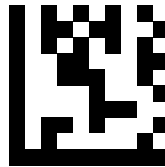

USB Virtual COM Port

\*Driver required

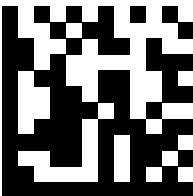


End




## ***Good Read Beep On/ Off***

Scan a barcode below to turn on/off good read beep.

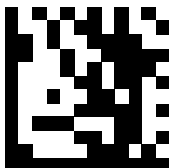


Set

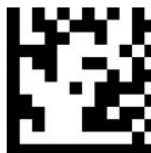

On (Default)




Off

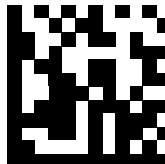

End

### Good Read Beep Length

Scan a barcode below to select the duration of the beep signal after a good decode.

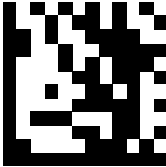

Set



50 msec (Default)




100 msec



150 msec




200 msec

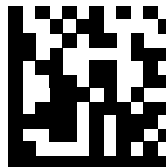

End

## ***Good Read Beep Frequency***

Scan a barcode below to select the beep tone of the beep signal after a good decode.

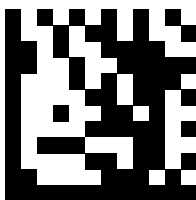

Set




Low



Medium (Default)




High

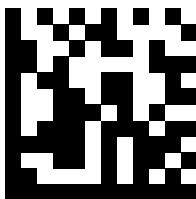

End

### ***Aiming Pattern***


Aiming pattern works as an aiming system to aid in barcode reading. Use the following settings to enable or disable this function. This function is for supporting models only.

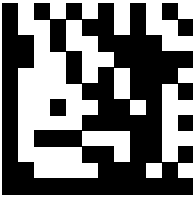

Set




Auto

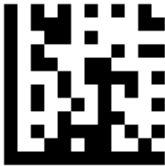

Always On




Always Off

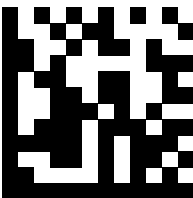

End

## ***Illumination***

Set Illumination to aid in barcode reading. Use the following settings to configure this function.

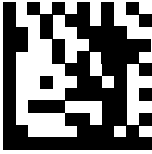

Set




On



Always On



Off

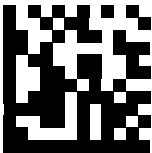


End


### Notes:

- Not all models can support this function.


### Terminal Character

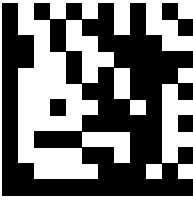


Set

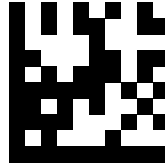


None

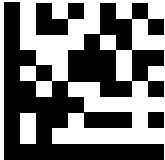


CR/LF (Default)

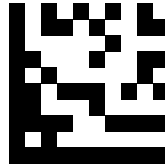

CR

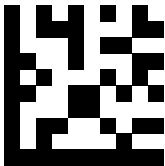


TAB

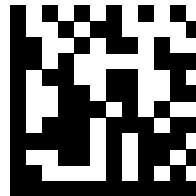


End

## RS232 Baud Rate


Baud rate is the number of bits of data transmitted per second. Set the imager's baud rate to match the baud rate setting of the host device. Otherwise, data may not reach the host device or may reach it in distorted form.

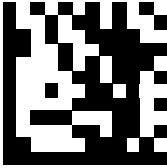


Set

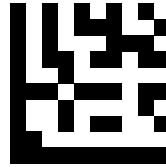


9600

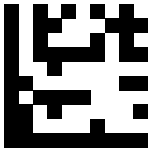


19200

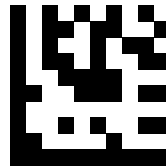


38400

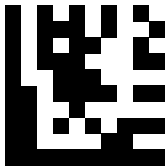


57600

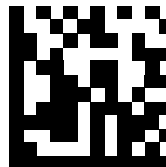


End

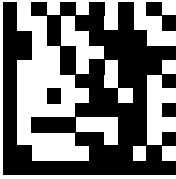

Set

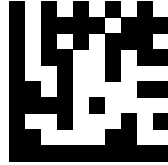

115200 (Default)

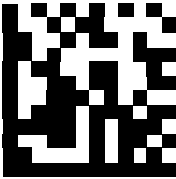


End



## USB Speed

Scan a barcode below to set USB speed.

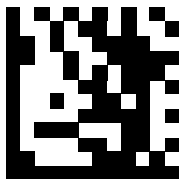


Set



USB 2.0




USB 1.1 (Default)

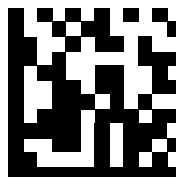

End

### Country Code

Scan the following settings to change the country code.

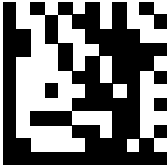

Set



US (Default)




Belgium




Britain



Denmark

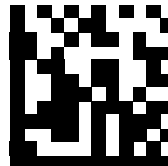

End

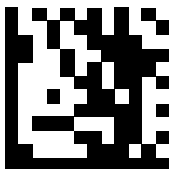

Set



France




Germany




Italy



Norway

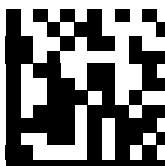

End

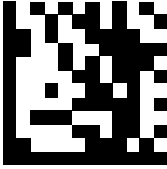


Set



Portugal




Spain

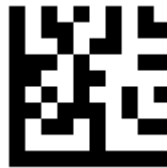


Sweden



Switzerland

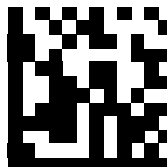


End

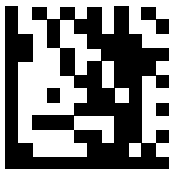

Set



Japan

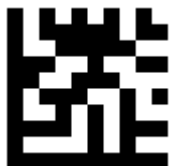


Hungary




Czech Republic



Slovakia

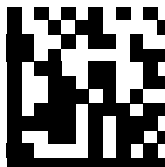

End

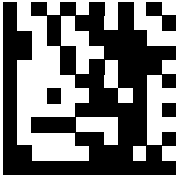

Set



Romania




Croatia



Poland



Finland

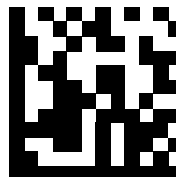


End

## Readable Symbologies

---

This section provides the programming barcodes for enabling and disabling readable symbologies. If the default values suit requirements, programming is not necessary.

### *All Symbologies*

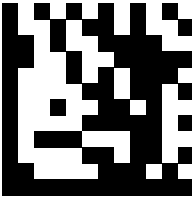


Set



Enable All




Default

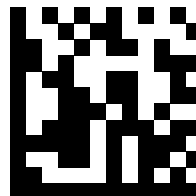

End

**UPC-A**

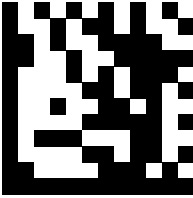


Set



Enable UPC-A (Default)




Disable UPC-A

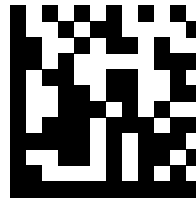

End

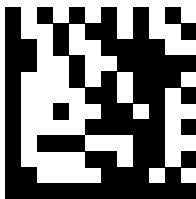

**UPC-E**


Set



Enable UPC-E




Disable UPC-E (Default)

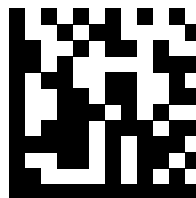

End

**EAN-8**

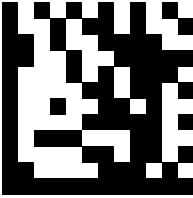


Set




Enable EAN 8 (Default)



Disable EAN 8

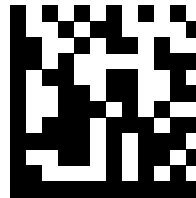

End

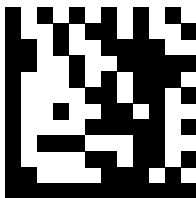**EAN 13**


Set



Enable EAN 13 (Default)




Disable EAN 13

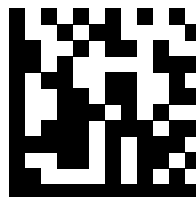


End


*JAN code for Books*

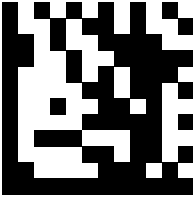


Set

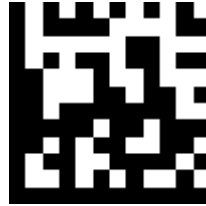


Enable

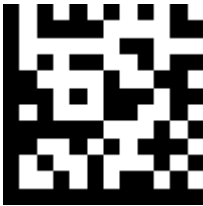

Disable (Default)

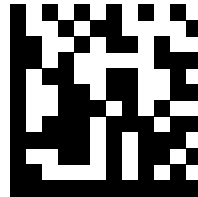

End

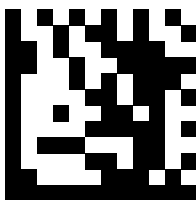**Code 128**


Set



Enable Code 128 (Default)




Disable Code 128

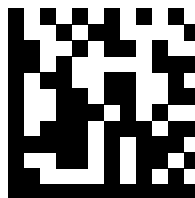

End

**Code 39**

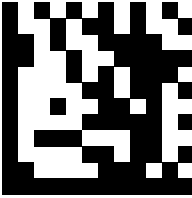


Set




Enable Code 39 (Default)



Disable Code 39

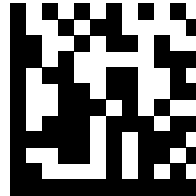

End

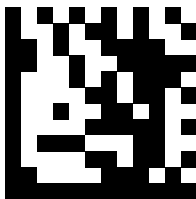**Code 93**


Set



Enable Code 93 (Default)




Disable Code 93

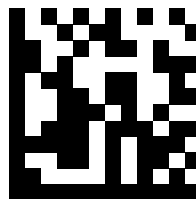

End

**Code 32**

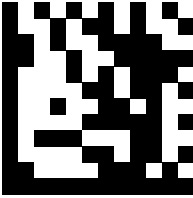


Set



Enable Code 32




Disable Code 32 (Default)

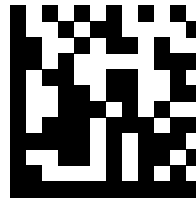

End

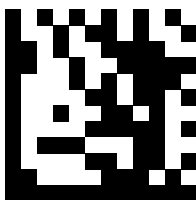

**Code 11**


Set



Enable Code 11




Disable Code 11 (Default)

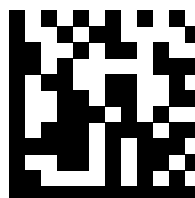

End

## Codabar

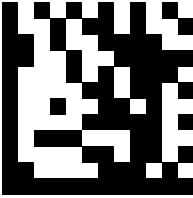


Set



Enable Codabar (Default)




Disable Codabar

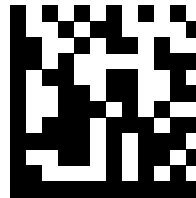

End

## *Plessey*

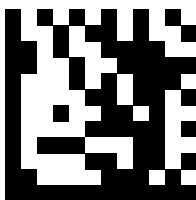


Set



Enable Plessey




Disable Plessey (Default)

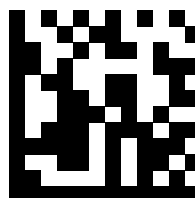

End

*MSI/Plessy*

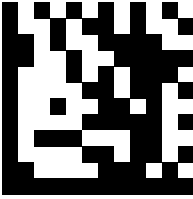


Set



Enable MSI/Plessy




Disable MSI/Plessy (Default)

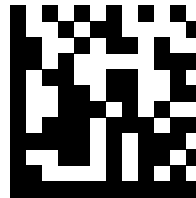

End

## *Interleaved 2 of 5*

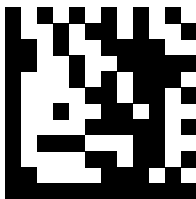


Set



Enable Interleaved 2 of 5 (Default)




Disable Interleaved 2 of 5

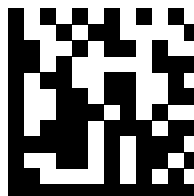

End

## IATA 2 of 5

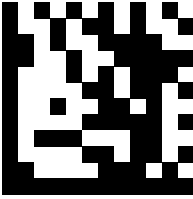


Set



Enable IATA 2 of 5




Disable IATA 2 of 5 (Default)

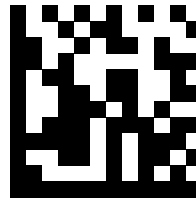

End

## Matrix 2 of 5

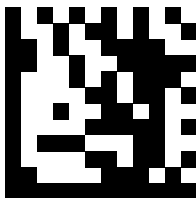


Set



Enable Matrix 2 of 5




Disable Matrix 2 of 5 (Default)

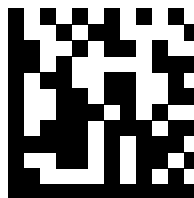

End

## *Straight 2 of 5*

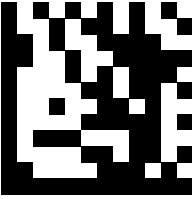


Set



Enable Straight 2 of 5




Disable Straight 2 of 5 (Default)

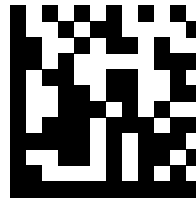

End

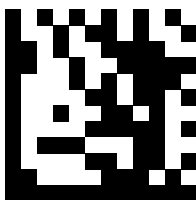

**RSS 14**


Set



Enable RSS 14 (Default)




Disable RSS 14

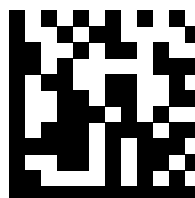

End

*RSS Expanded*

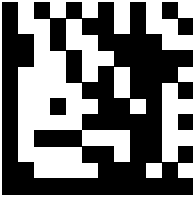


Set



Enable RSS Expanded (Default)




Disable RSS Expanded

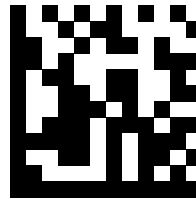

End

## *RSS Limited*

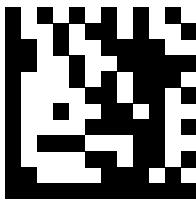


Set



Enable RSS Limited (Default)




Disable RSS Limited

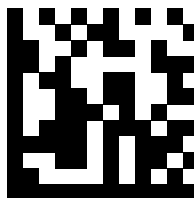

End

## Component CC-A

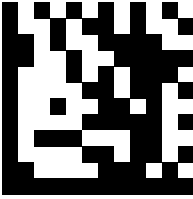


Set



Enable Component CC-A




Disable Component CC-A (Default)

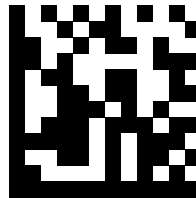

End

## Component CC-B

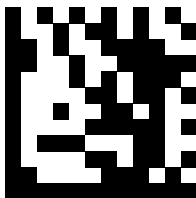


Set



Enable Component CC-B




Disable Component CC-B (Default)

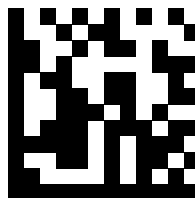

End

### Component CC-C

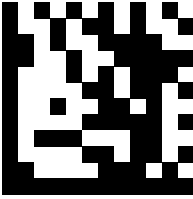


Set




Enable Component CC-C



Disable Component CC-C (Default)

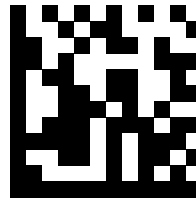

End

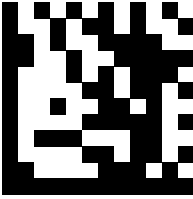**PDF417**


Set



Enable PDF417 (Default)




Disable PDF417

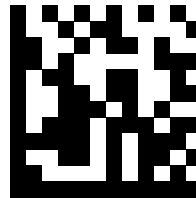

End

**Micro PDF417**

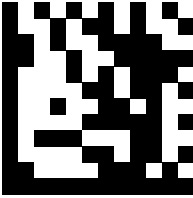


Set



Enable Micro PDF417 (Default)




Disable Micro PDF417

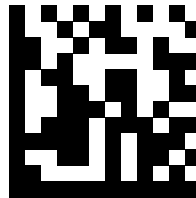

End



## Data Matrix

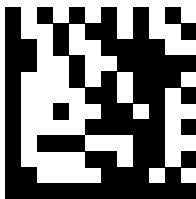


Set



Enable Data Matrix (Default)




Disable Data Matrix

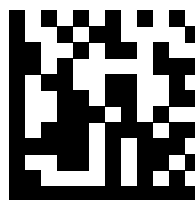

End

## QR Code

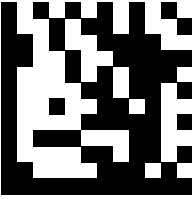


Set



Enable QR Code (Default)




Disable QR Code

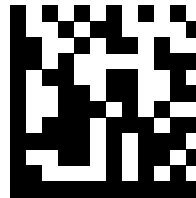


End


## Micro QR Code

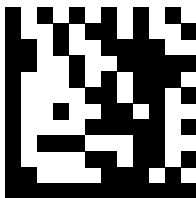


Set

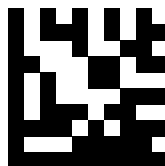

Enable Micro QR Code (Default)

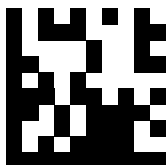


Disable Micro QR Code

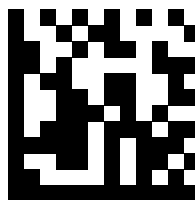

End

### GS1-2D AIM ID

GS1 2D barcodes (GS1 DataMatrix, GS1 QR Code) output AIM ID Setting.

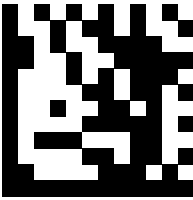


Set



Enable




Disable (Default)

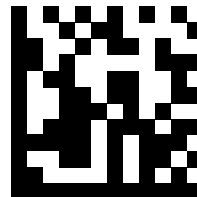

End

**GS1-128 AIM ID**

GS1-128 output AIM ID Setting.

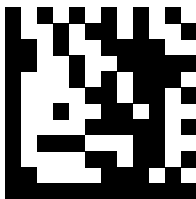


Set



Enable




Disable (Default)

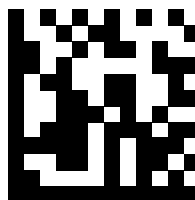

End

# Aztec

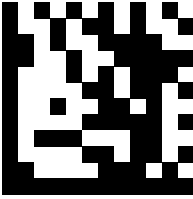


Set



Enable Aztec




Disable Aztec (Default)

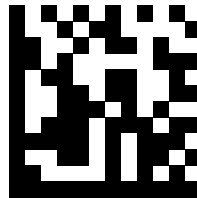

End

## MaxiCode

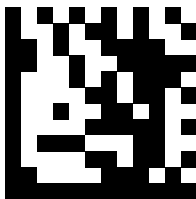


Set



Enable MaxiCode



Disable MaxiCode (Default)

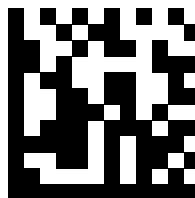


End

# Symbology Features


---

This section provides the programming barcodes for selecting features available to different symbologies.

## *UPC / EAN*

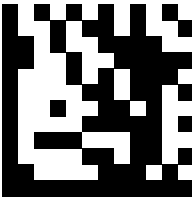


Set

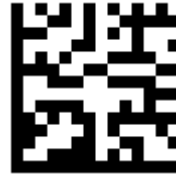

Enable decoding of 2/5-digit supplemental code for UPC-A, UPC-E, EAN-13, and EAN-8




Disable decoding of 2/5-digit supplemental code for UPC-A, UPC-E, EAN-13, and EAN-8 (Default)


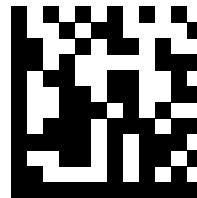


End

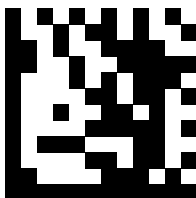


**UPC-A**


Set

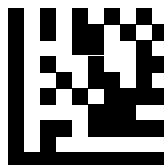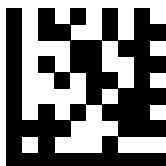Enable UPC-A Number System digit  
(Default)


Disable UPC-A Number System digit

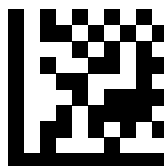


Enable UPC-A check digit (Default)

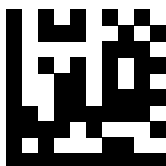


Disable UPC-A check digit

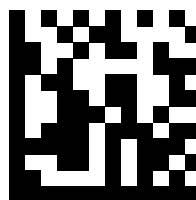


End

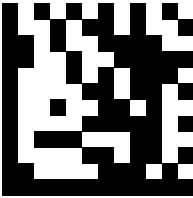


Set

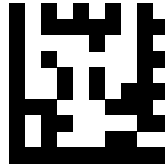


Enable conversion of UPC-A to EAN13

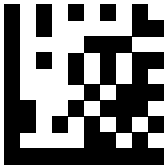



Disable conversion of UPC-A to EAN13  
(Default)

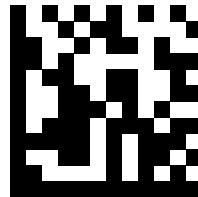


End

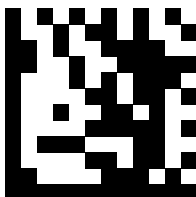**UPC-E**


Set

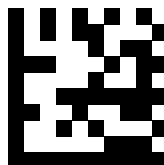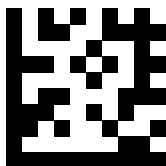Enable UPC-E Number System digit  
(Default)


Disable UPC-E Number System digit

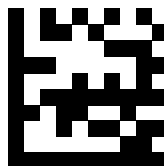


Enable UPC-E check digit (Default)

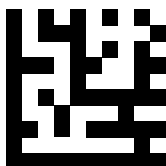


Disable UPC-E check digit

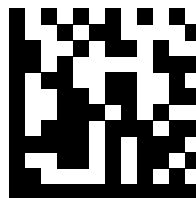


End

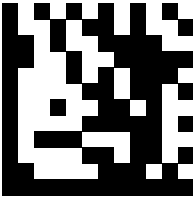


Set

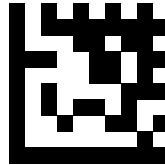


Enable conversion of UPC-E to UPC-A

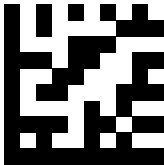


Disable conversion of UPC-E to UPC-A  
(Default)

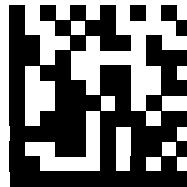


End

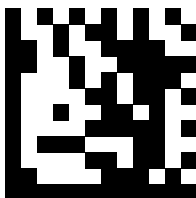**EAN 8**


Set

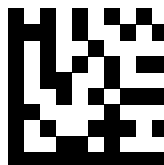



Enable EAN 8 check digit (Default)

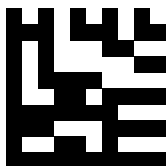

Disable EAN 8 check digit

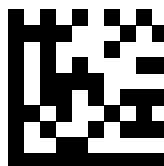


Enable conversion of EAN 8 to EAN 13

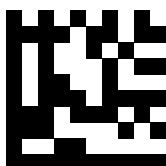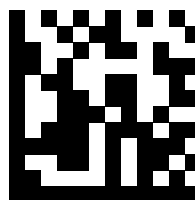
Disable conversion of EAN 8 to EAN 13  
(Default)

End


### EAN 13

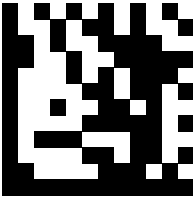


Set

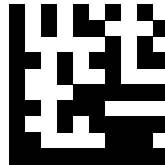


Enable EAN 13 check digit (Default)

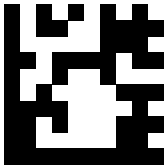


Disable EAN 13 check digit

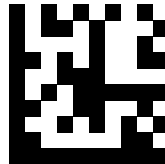


Enable conversion of EAN 13 to ISBN

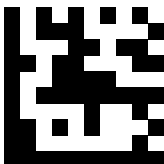


Disable conversion of EAN 13 to ISBN  
(Default)

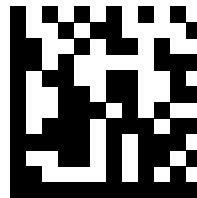


End

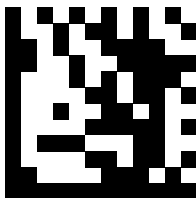


Set

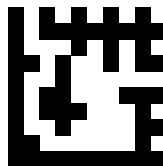


Enable conversion of EAN 13 to ISSN

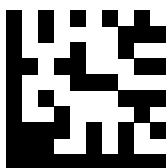


Disable conversion of EAN 13 to ISSN  
(Default)

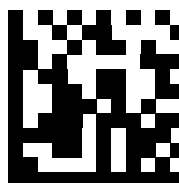


End

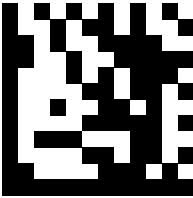


Set

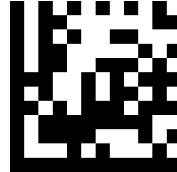

EAN 13 data redundant check = off

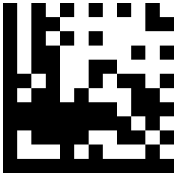


EAN 13 data redundant check = 1  
(Default)

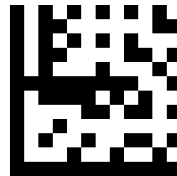

EAN 13 data redundant check = 2




EAN 13 data redundant check = 3

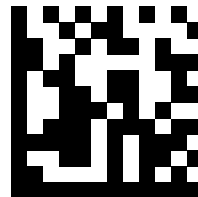

End

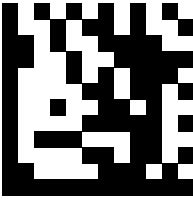

*JAN code for Books Separator*

Set



[TAB] key x 2




[SPACE] key x 3




Others char Separator

For parameters requiring specific numeric values, scan the [PROGRAMMING GUIDE\ASCII Code] appropriately numbered barcode(s).

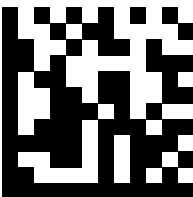


End

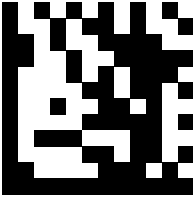


Set




None (Default)

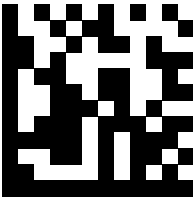


End

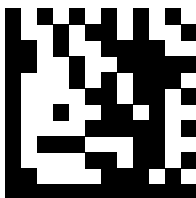**Code 39**


Set

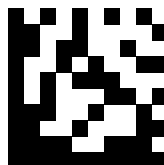


Enable Code 39 full ASCII mode

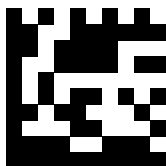


Disable Code 39 full ASCII mode (Default)

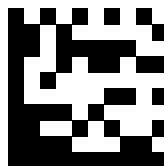


Enable Start and Stop characters

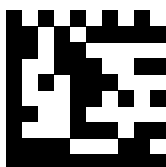


Disable Start and Stop characters (Default)

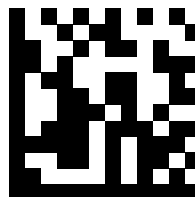


End

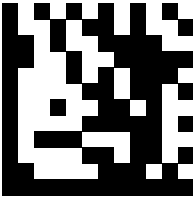


Set

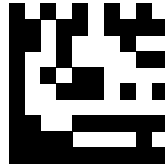


Disable Checksum (Default)

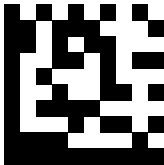


Enable checksum and send check character

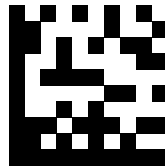


Enable checksum and strip check character

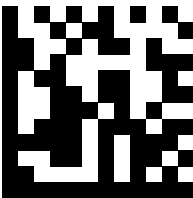


End

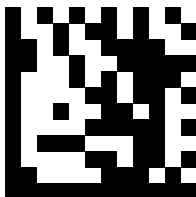**Codabar**


Set

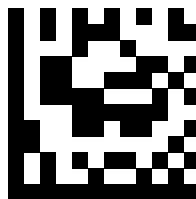


Disable Checksum (Default)

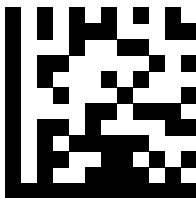


Enable checksum and send check character

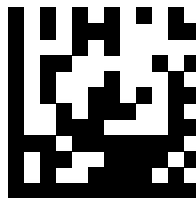


Enable checksum and strip check character

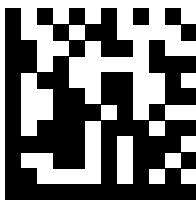


End

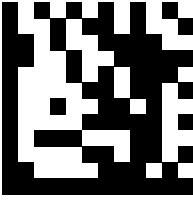


Set

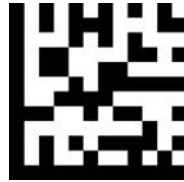

Enable stripping Start and Stop characters

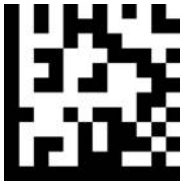


Disable stripping Start and Stop characters  
(Default)

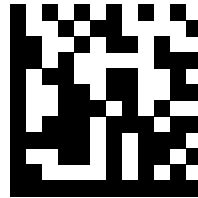


End


## Interleaved 2 of 5

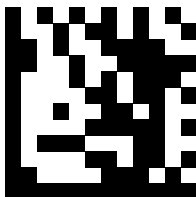


Set

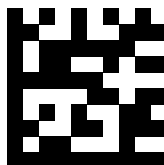


Disable Checksum (Default)

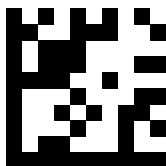


Enable checksum and send check character

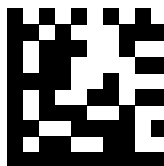


Enable checksum and strip check character

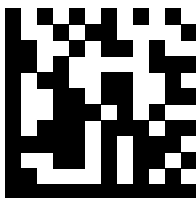


End

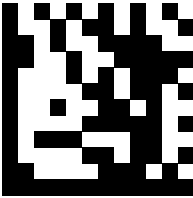


Set

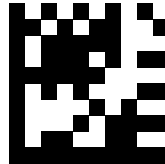

Default quiet zone checking  
No length checking performed (Default)

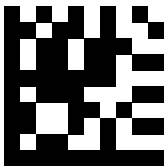

Smaller quiet zone allowed

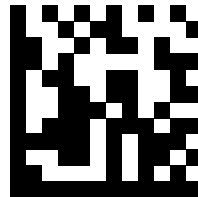


End




*MSI / Plessey*




Set

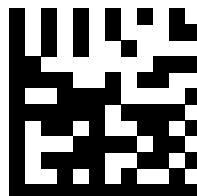


Disable MSI Plessey checksum

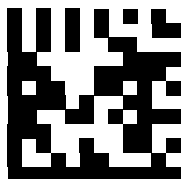

Mod 10 checksum (Default)

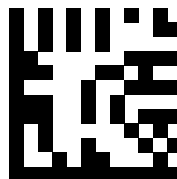


Mod 10/10 checksum

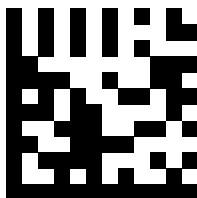


Mod 11/10 checksum




End

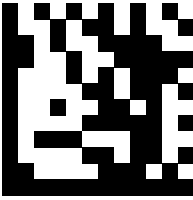


Set

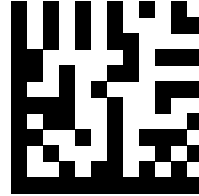


Output checksum character(s) (Default)

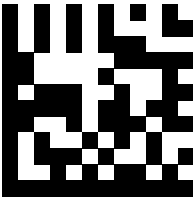


Strip checksum character(s)

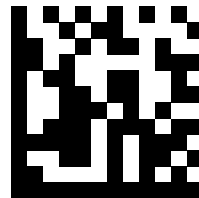


End

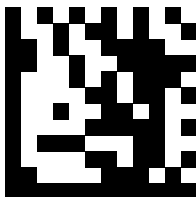**Code 11**


Set

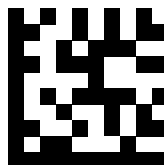


Output checksum character(s)

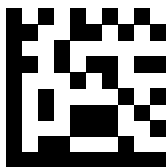


Strip checksum character(s) (Default)

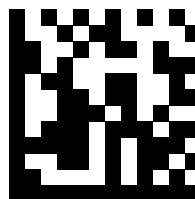


End

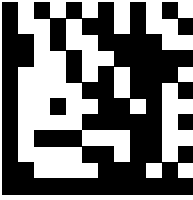


Set

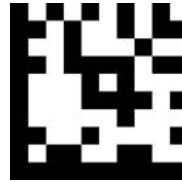


Disable checksum checking

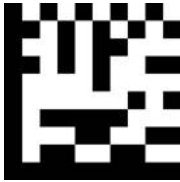

Enable 1-digit checksum checking

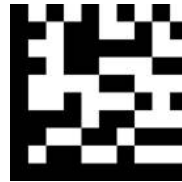


Enable 2-digit checksum checking  
(Default)

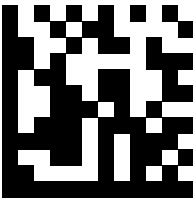


End


## Data Matrix

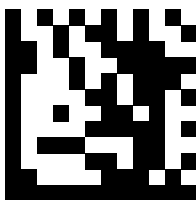


Set

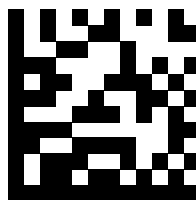


Enable mirror decoding (Default)

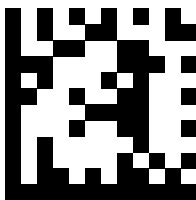

Disable mirror decoding

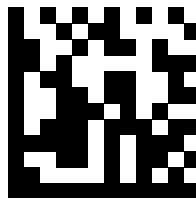

End

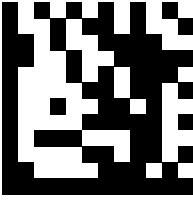


Set




Enable rectangular Data Matrix decoding




Disable rectangular Data Matrix decoding  
(Default)

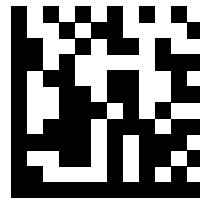


End

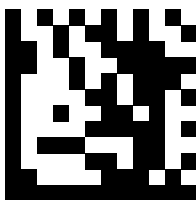**QR / Micro QR**


Set

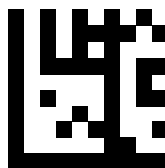


Enable mirror decoding (Default)

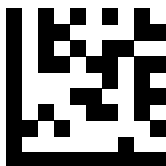

Disable mirror decoding

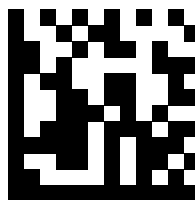

End

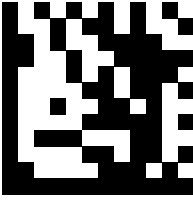


Set



UTF8 conversion for word only




Universal UTF8 conversion (Default)

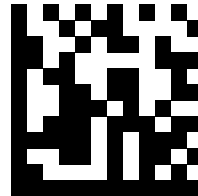

End

**Note:** Please install QR\_UTF8\_Conversion executable file before using this function.

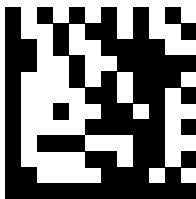

**QR / Micro QR Japanese Language Encoding Support**


Set



Enable




Disable (Default)

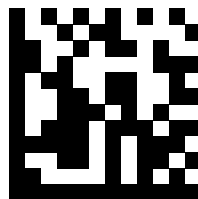


End


**Aztec**

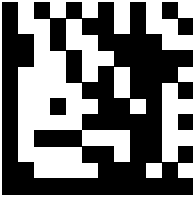


Set

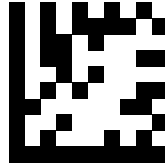

Enable mirror decoding (Default)

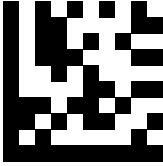

Disable mirror decoding

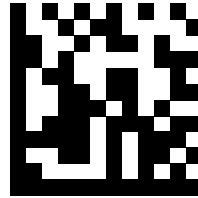

End

## Data Editing (Prefix)

---


Prefix is additional characters that can be sent before the scanned data. Please scan the barcodes in the selection below to set your prefix.

### *Prefix Set Up Flow*


1. Scan Set.
2. Enable barcode type.
3. Scan prefix you would like to add characters within ASCII Table. Up to 4 digits can be added.
4. Scan End.

Ex. If we wish to add "3" as prefix for all barcode type, then follow procedure as below, Scan [Set] to enter setup. Then we select barcode by scanning [Enable All], then we scan [3] as 3 of ASCII HEX. At the end, we scan [End] to completed setup.


*All Prefix*

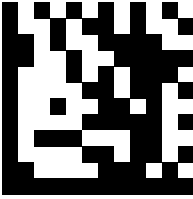


Set

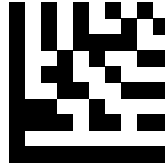


Enable All

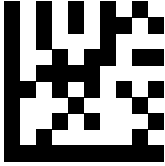


Disable All (Default)

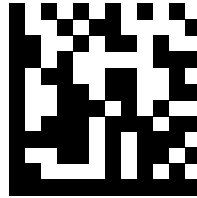


End

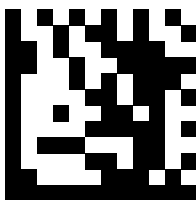*UPC / EAN Prefix*


Set

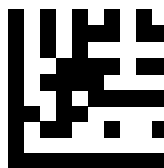


Enable UPC-A

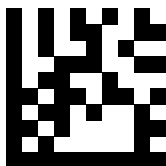


Disable UPC-A

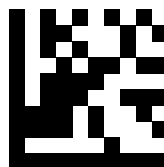


Enable UPC-E

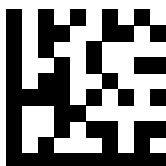


Disable UPC-E

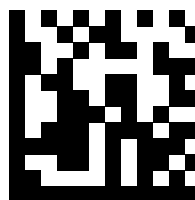


End

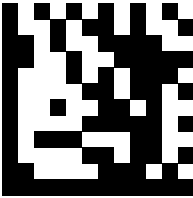


Set

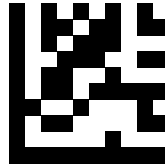


Enable EAN 8

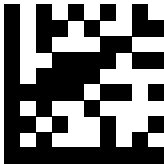


Disable EAN 8

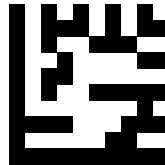

Enable EAN 13

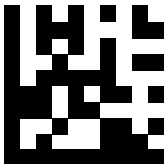


Disable EAN 13

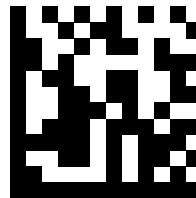


End


## Code 128 Prefix

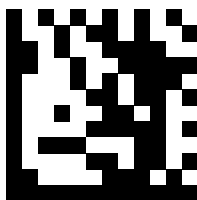


Set

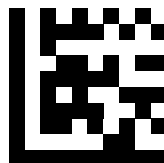

Enable Code 128

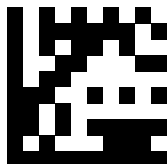


Disable Code 128

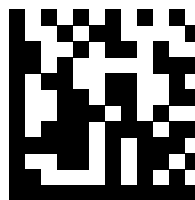


End


**Code 39 Prefix**

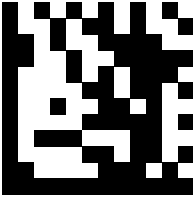


Set

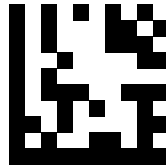

Enable Code 39

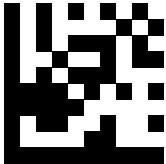


Disable Code 39

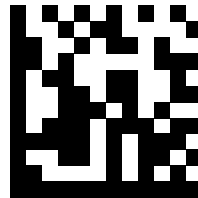


End




## Code 93 Prefix

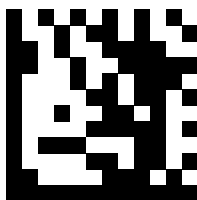


Set

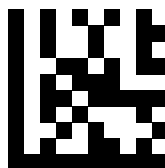

Enable Code 93

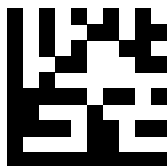


Disable Code 93

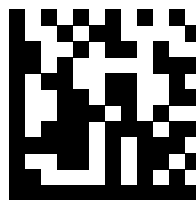


End


**Code 32 Prefix**

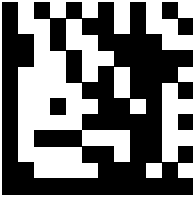


Set

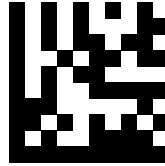

Enable Code 32

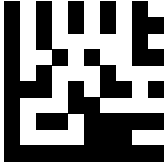


Disable Code 32

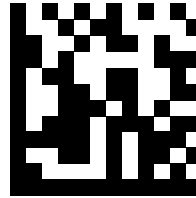


End


## Code 11 Prefix

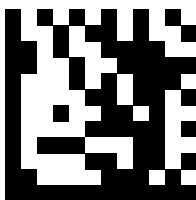


Set

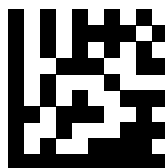

Enable Code 11

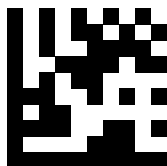


Disable Code 11

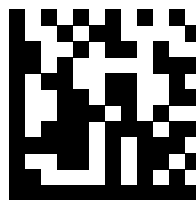


End


### *Codabar Prefix*

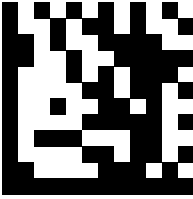


Set

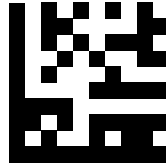

Enable Codabar

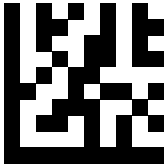


Disable Codabar

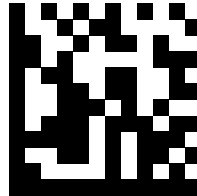


End


## *Plessey Prefix*

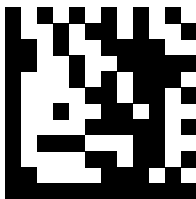


Set

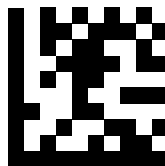

Enable Plessey

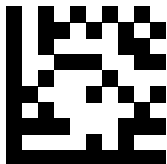


Disable Plessey

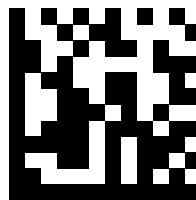


End


*MSI Prefix*

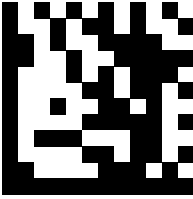


Set

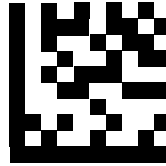

Enable MSI

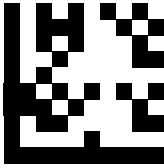


Disable MSI

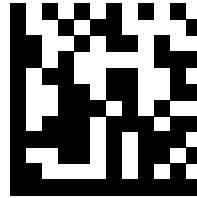


End


## *Interleaved 2 of 5 Prefix*

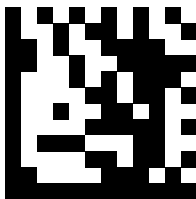


Set

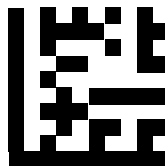

Enable Interleaved 2 of 5

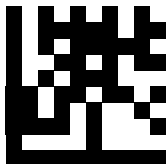


Disable Interleaved 2 of 5

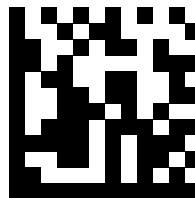


End


*IATA 2 of 5 Prefix*

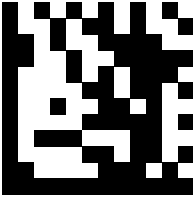


Set

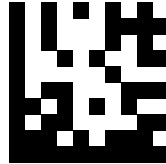

Enable IATA 2 of 5

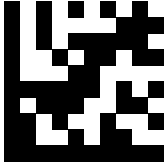


Disable IATA 2 of 5

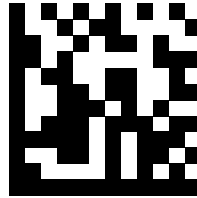


End




## Matrix 2 of 5 Prefix

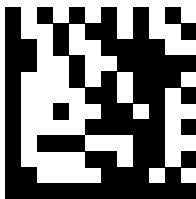


Set

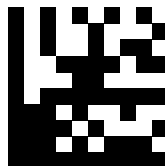

Enable Matrix 2 of 5

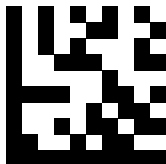


Disable Matrix 2 of 5

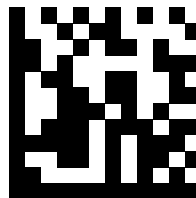


End


*Straight 2 of 5 Prefix*

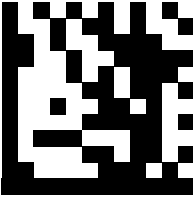


Set

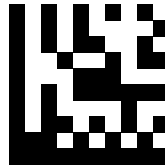

Enable Straight 2 of 5

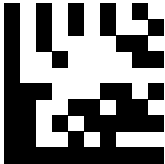


Disable Straight 2 of 5

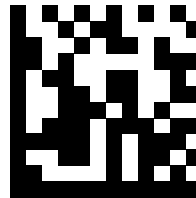


End


## RSS 14 Prefix

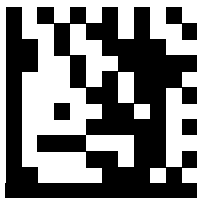


Set

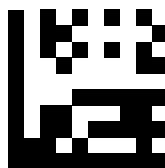

Enable RSS 14

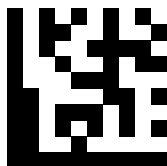


Disable RSS 14

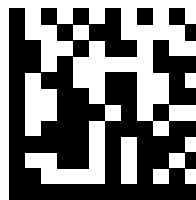


End


*RSS Expanded Prefix*

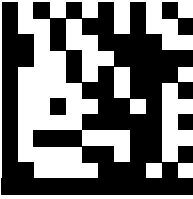


Set

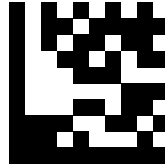

Enable RSS Expanded

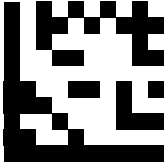


Disable RSS Expanded

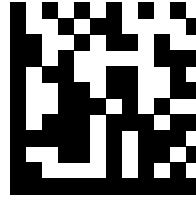


End


## *RSS Limited Prefix*

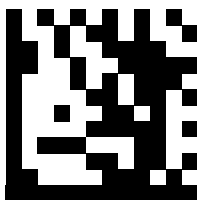


Set

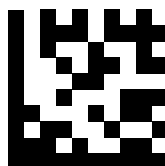

Enable RSS Limited

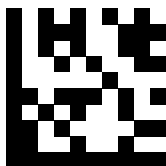


Disable RSS Limited

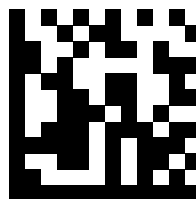


End


*Component CC-A Prefix*

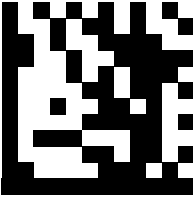


Set

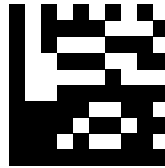

Enable Component CC-A

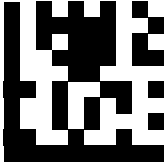


Disable Component CC-A

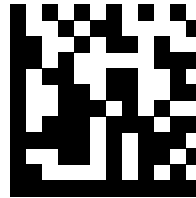


End


## Component CC-B Prefix

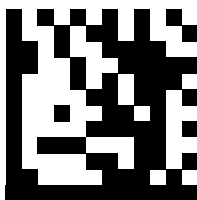


Set

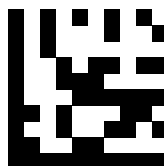

Enable Component CC-B

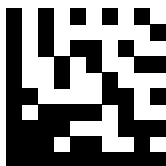


Disable Component CC-B

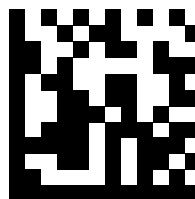


End


*Component CC-C Prefix*

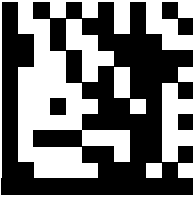


Set

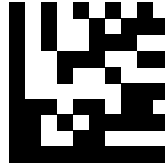

Enable Component CC-C

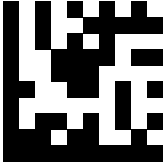


Disable Component CC-C

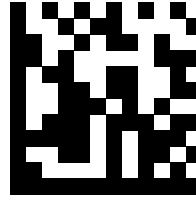


End

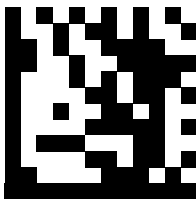


**PDF 417 Prefix**


Set

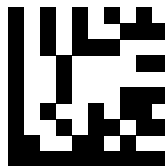

Enable PDF 417

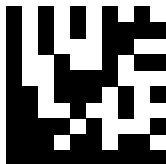


Disable PDF 417

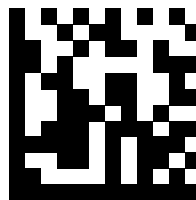


End


*Micro PDF 417 Prefix*

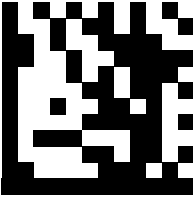


Set

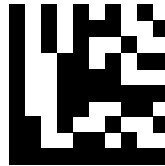

Enable Micro PDF 417

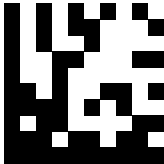


Disable Micro PDF 417

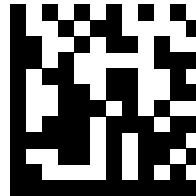


End


## *Data Matrix Prefix*

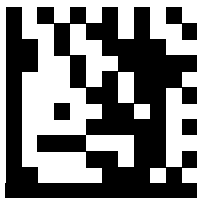


Set

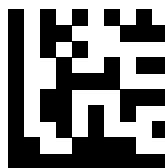

Enable Data Matrix

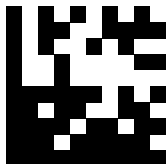


Disable Data Matrix

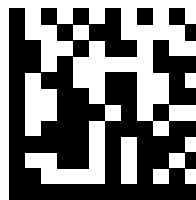


End


**QR Prefix**

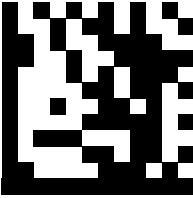


Set

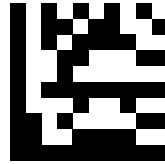

Enable QR Code

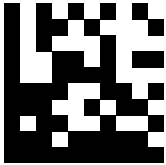


Disable QR Code

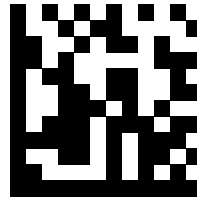


End


## Micro QR Prefix

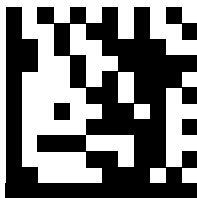


Set

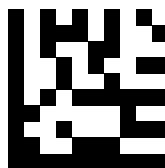

Enable Micro QR

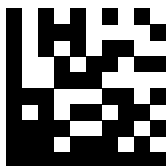


Disable Micro QR

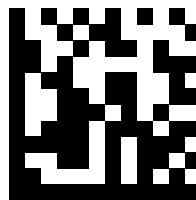


End


*Aztec Prefix*

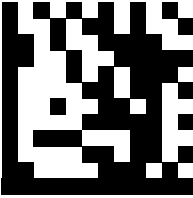


Set

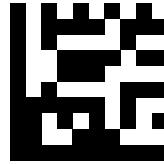

Enable Aztec

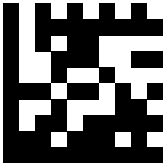


Disable Aztec

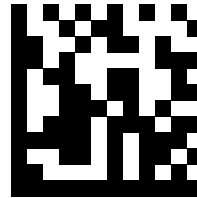


End


## MaxiCode Prefix

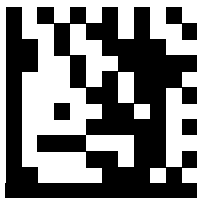


Set

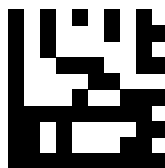

Enable MaxiCode

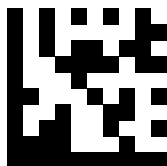

Disable MaxiCode

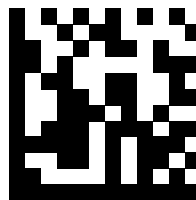

End

## Data Editing (Suffix)

---

Suffix is additional characters that can be sent after the scanned data. Please scan the barcodes in the selection below to set your suffix.


### ***Suffix Set Up Flow***

1. Scan Set.
2. Enable barcode type.
3. Scan suffix you would like to add characters within ASCII Table. Up to 4 digits can be added.
4. Scan End.


Ex. If we wish to add "36" as suffix for all barcode type, then follow procedure as below. Scan [Set] to enter setup. Then we select barcode by scanning [Enable All], then we scan [3] as 3 of ASCII HEX and [6] as 6.




## All Suffix

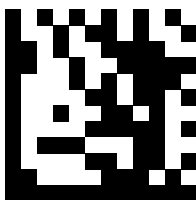


Set

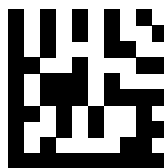

Enable All

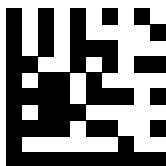


Disable All (Default)

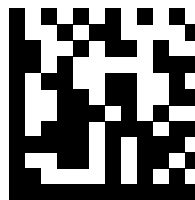


End


*UPC-A Suffix*

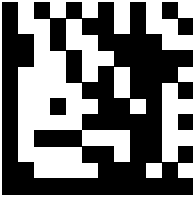


Set

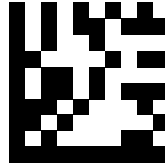

Enable UPC-A

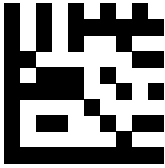


Disable UPC-A

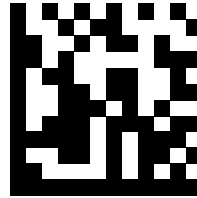


End


## UPC-E Suffix

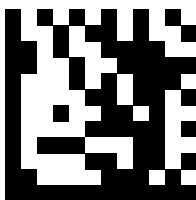


Set

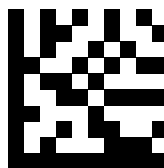

Enable UPC-E

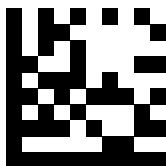


Disable UPC-E

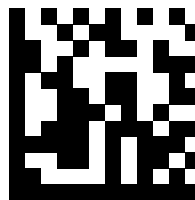


End


### ***EAN 8 Suffix***

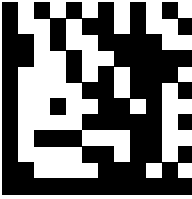


Set

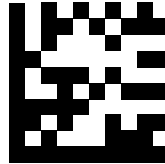

Enable EAN 8

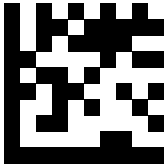


Disable EAN 8

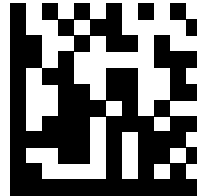


End


## *EAN 13 Suffix*

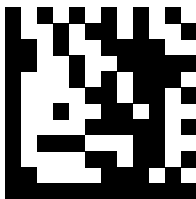


Set

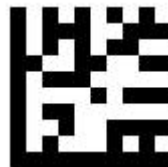

Enable EAN 13

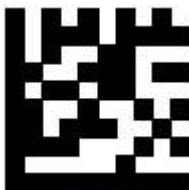


Disable EAN 13

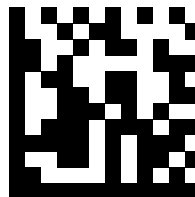


End


### Code 128 Suffix

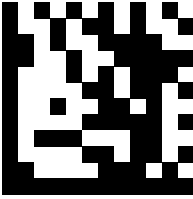


Set

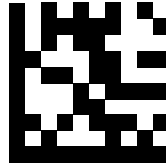

Enable Code 128

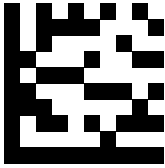


Disable Code 128

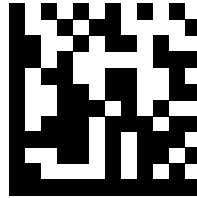


End


## Code 39 Suffix

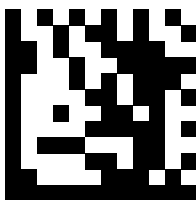


Set

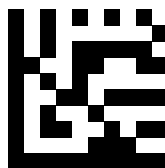

Enable Code 39

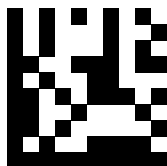


Disable Code 39

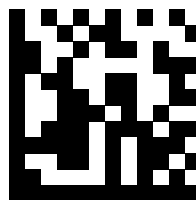


End


### Code 93 Suffix

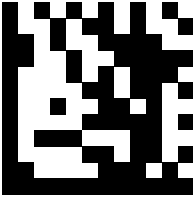


Set

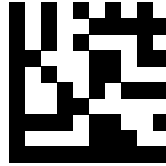

Enable Code 93

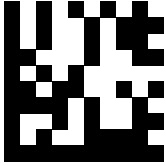


Disable Code 93

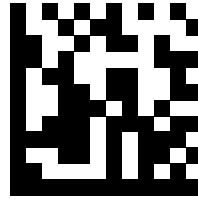


End




## Code 32 Suffix

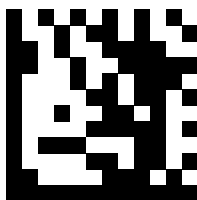


Set

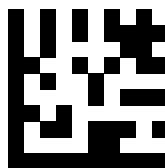

Enable Code 32

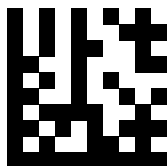


Disable Code 32

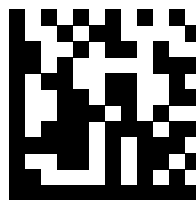


End


**Code 11 Suffix**

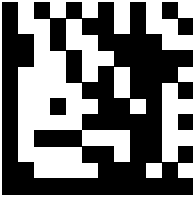


Set

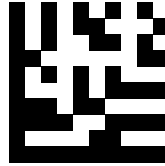

Enable Code 11

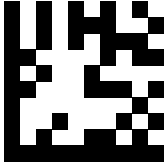


Disable Code 11

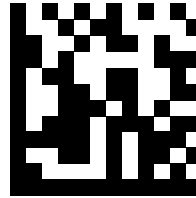


End


## Codabar Suffix

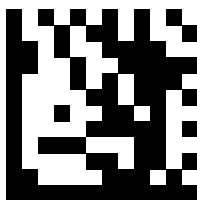


Set

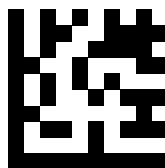

Enable Codabar

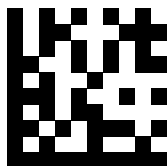


Disable Codabar

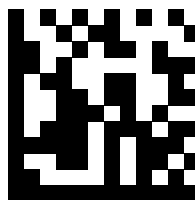


End


### *Plessey Suffix*

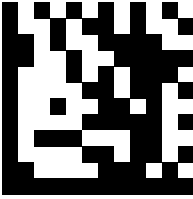


Set

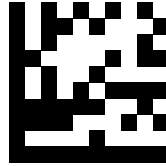

Enable Plessey

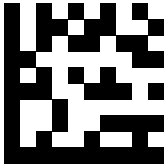


Disable Plessey

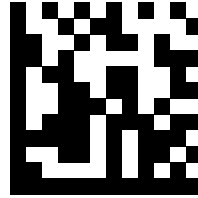


End


## MSI Suffix

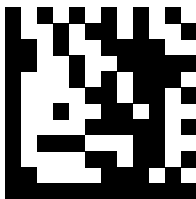


Set

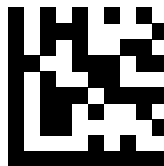

Enable MSI

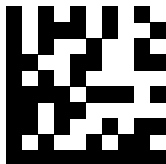


Disable MSI

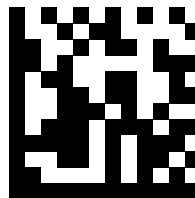


End


### *Interleaved 2 of 5 Suffix*

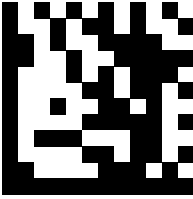


Set

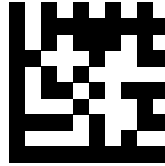

Enable Interleaved 2 of 5

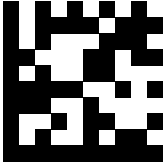


Disable Interleaved 2 of 5

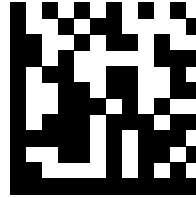


End


## *IATA 2 of 5 Suffix*

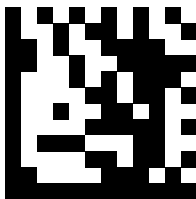


Set

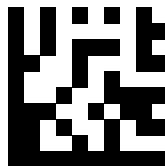

Enable IATA 2 of 5

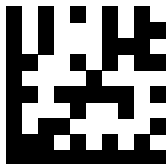


Disable IATA 2 of 5

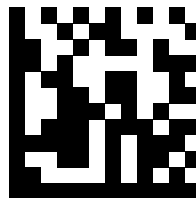


End


### Matrix 2 of 5 Suffix

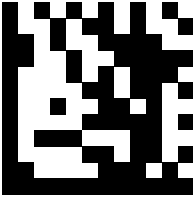


Set

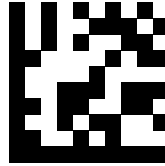

Enable Matrix 2 of 5

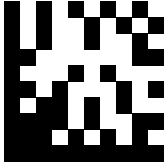


Disable Matrix 2 of 5

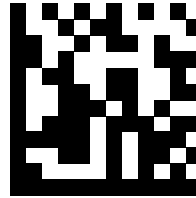


End




## *Straight 2 of 5 Suffix*

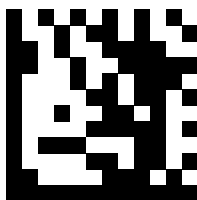


Set

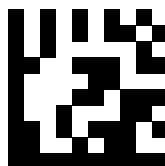

Enable Straight 2 of 5

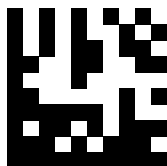


Disable Straight 2 of 5

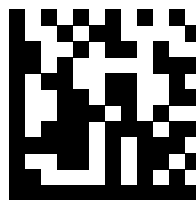


End


### *RSS 14 Suffix*

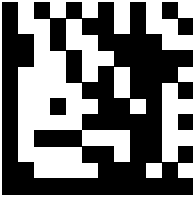


Set

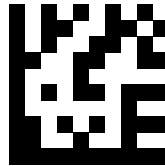

Enable RSS 14

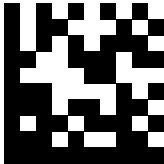


Disable RSS 14

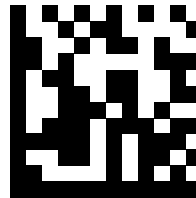


End


## *RSS Expanded Suffix*

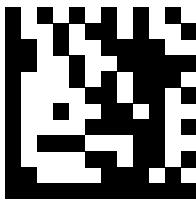


Set

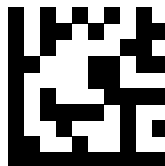

Enable RSS Expanded

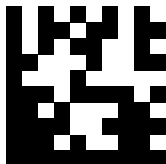


Disable RSS Expanded

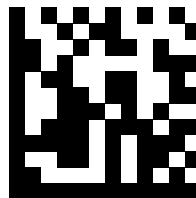


End


*RSS Limited Suffix*

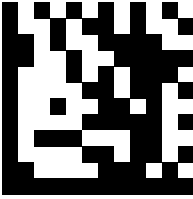


Set

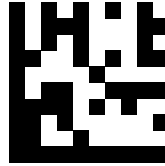

Enable RSS Limited

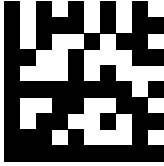


Disable RSS Limited

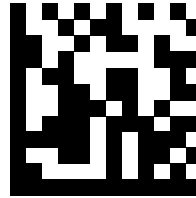


End


## Component CC-A Suffix

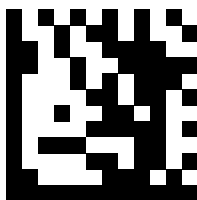


Set

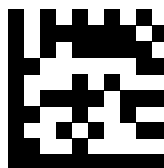

Enable Component CC-A

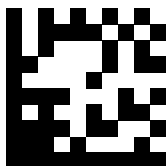


Disable Component CC-A

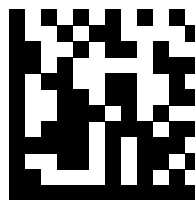


End


**Component CC-B Suffix**

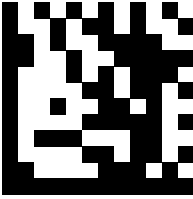


Set

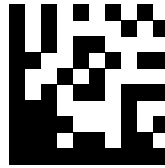

Enable Component CC-B

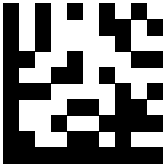


Disable Component CC-B

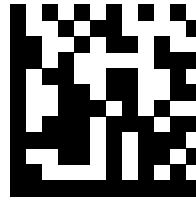


End


## Component CC-C Suffix

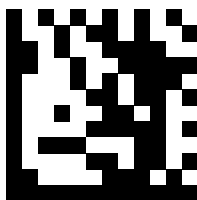


Set

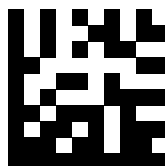

Enable Component CC-C

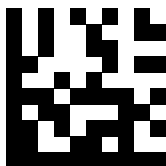


Disable Component CC-C

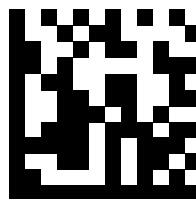


End


*PDF-417 Suffix*

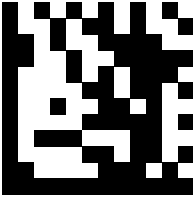


Set

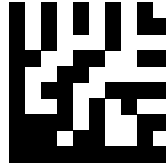

Enable PDF417

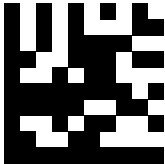


Disable PDF417

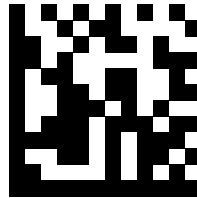


End




## Micro PDF-417 Suffix

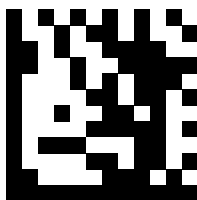


Set

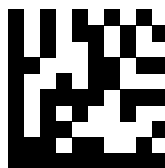

Enable Micro PDF417

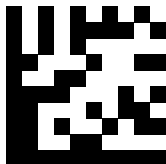


Disable Micro PDF417

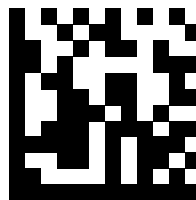


End


***Data Matrix Suffix***

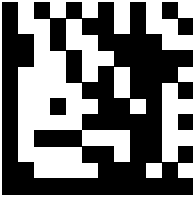


Set

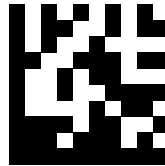

Data Matrix Enable

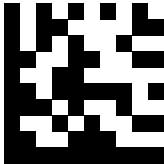


Data Matrix Disable

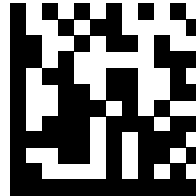


End


## QR Code Suffix

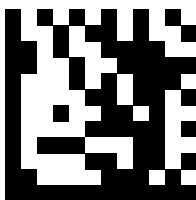


Set

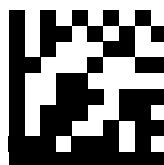

QR Code Enable

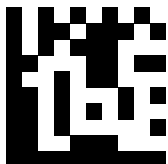


QR Code Disable

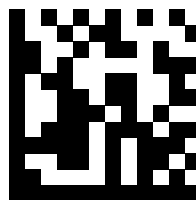


End


### Micro QR Suffix

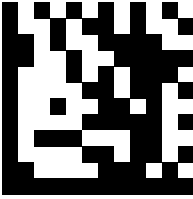


Set

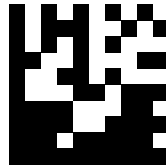

Micro QR Enable

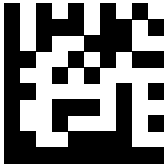


Micro QR Disable

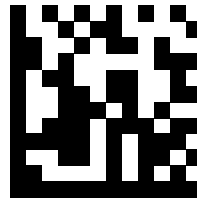


End


## Aztec Suffix

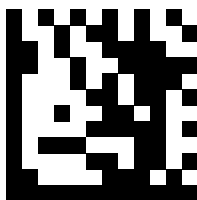


Set

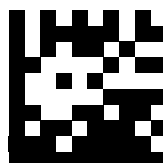

Aztec Enable

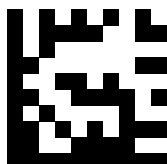


Aztec Disable

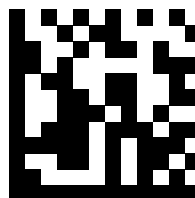


End


### MaxiCode Suffix

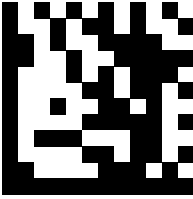


Set

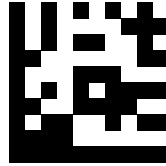

MaxiCode Enable

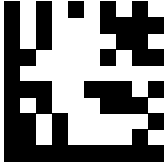

MaxiCode Disable

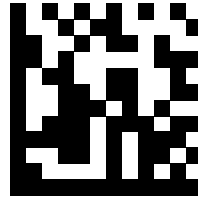

End

# Code Settings

---

## *Set Lengths for Codes*

- One Discrete Length

Select this option to decode the symbol containing a selected length.  
Select the length using the numeric bar codes in ASCII Code Table.

Example 1:

To decode Interleaved 2 of 5 symbols with 8 characters:

- scan Set to set up
- scan Interleaved 2 of 5 One Discrete Length
- scan 8 in ASCII Code Table
- scan End to confirm the setup

Example 2:

To decode Interleaved 2 of 5 symbols with 12 characters:

- scan Set to set up
- scan Interleaved 2 of 5 One Discrete Length
- scan scan 1 followed by 2 in ASCII Code Table
- scan End to confirm the setup

- Two Discrete Lengths

Select this option to decode the symbol containing either of two selected lengths.  
Select lengths using the numeric bar codes in ASCII Code Table.

Example:

To decode Code 128 symbols containing either 8 or 14 characters

- scan Set to set up
- scan Code 128 Two Discrete Length
- scan 0, 8, 1, and then 4 in ASCII Code Table
- scan End to confirm the setup

- Length Within Range

Select this option to decode the symbol with a specific length range. Select lengths using numeric bar codes in ASCII Code Table.

Example:

To decode Codabar symbols containing between 7 and 8 characters,

- a. scan Set to set up
- b. scan Codabar Length Within Range
- c. scan 0, 7, 0, and then 8 in ASCII Code Table
- d. scan End to confirm the setup

- Any Length


Select this option to decode the symbol containing any number of characters within the digital scanner's capability.

Example:

- a. scan Set to set up
- b. scan Matrix 2 of 5 Any Length
- c. scan End to confirm the setup



## Set Lengths for Code 128

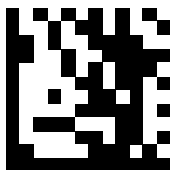

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

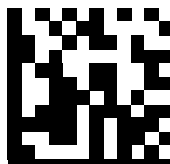

End

### Set Lengths for Code 39

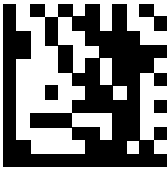

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

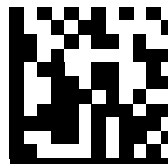

End

## Set Lengths for Code 93

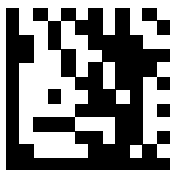

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

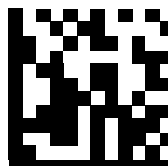


End

### Set Lengths for Codabar

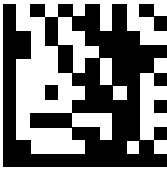

Set

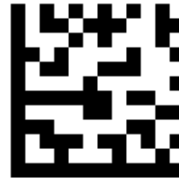

One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

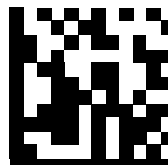

End

## Set Lengths for Interleaved 2 of 5

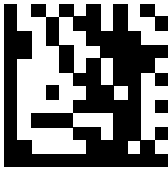

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

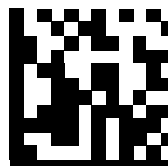

End

### Set Lengths for Code 11

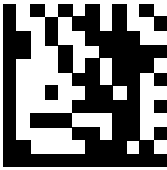

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

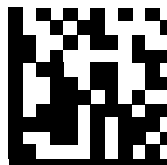


End


## Set Lengths for MSI

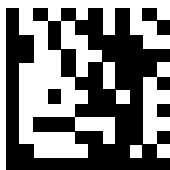

Set

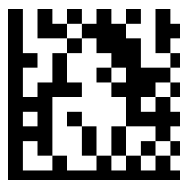

One Discrete Length

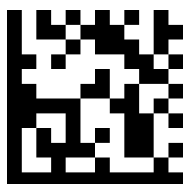


Two Discrete Lengths



Length Within Range




Any Length (Default)

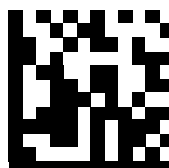

End

### Set Lengths for Matrix 2 of 5

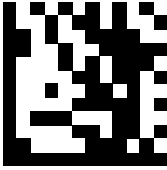

Set



One Discrete Length




Two Discrete Lengths



Length Within Range



Any Length (Default)

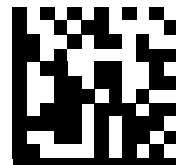


End



## Code Identifiers

Scan the following barcodes to set symbology Identifiers.

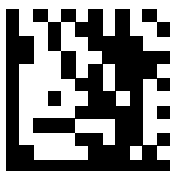


Set




Disable Code ID (Default)



Enable factory standard ID

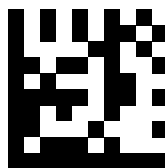

Enable AIM ID

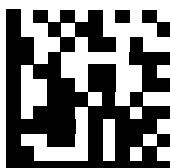


End

**Code Identifiers Table**

<b>Symbology</b>	<b>Factory Standard</b>	<b>AIM</b>
UPC-A	A	E
UPC-E	E	E
EAN 8	FF	E
EAN 13	F	E
Code 128	K	C
Code 39	M	A
Code 93	L	G
Code 32	M	X
Code 11	O	H
Codabar	N	F
Plessey	P	P
MSI / Plessey	a	M
Interleaved 2 of 5	l	l
IATA 2 of 5	Z	R
Matrix 2 of 5	G	X
Straight 2 of 5	S	S
Pharmacode	H	X
RSS 14	RS	e
RSS Expanded	RX	e
RSS Limited	RL	e
Component CC-A	m	e
Component CC-B	n	e
Component CC-C	i	e
PDF417	r	L
Micro PDF417	s	L
Data Matrix	t	d
QR	u	Q
Micro QR	j	Q
Aztec	e	z
MaxiCode	v	U

## Keyboard Caps Lock State

Scan a barcode below to turn Caps on or off.

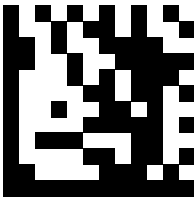


Set



Caps Lock Off (Default)




Caps Lock On

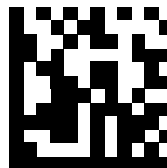

End

### ***Function Key Mapping***

Scan the following barcodes to enable or disable Function Key Mapping.

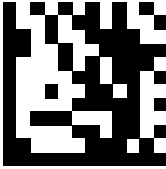


Set



Disable Function Key Mapping (Default)




Enable Function Key Mapping

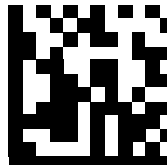


End

## ASCII Code


For parameters requiring specific numeric values, scan the appropriately numbered barcode(s).

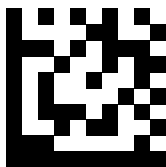


Space

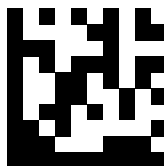


!

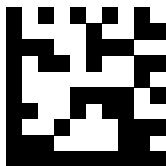


"

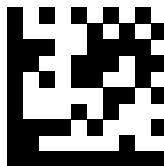


#

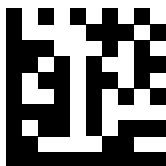


\$

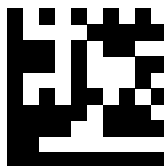


%

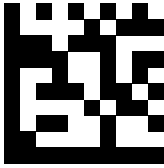


&

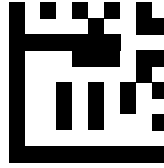


!

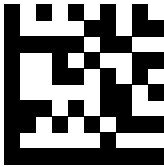


(

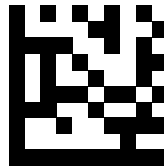


)

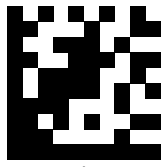


\*

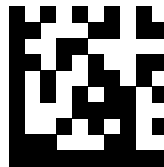


+

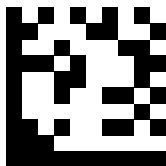


,

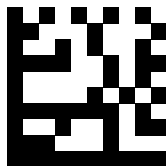


-

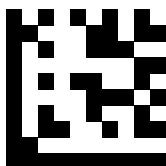


.

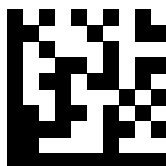


/

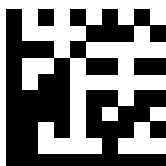


:

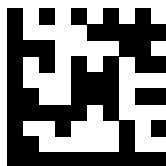


;

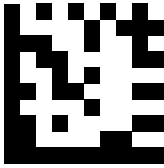


<

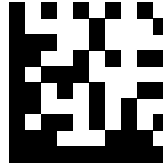


=

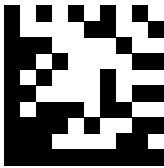

>

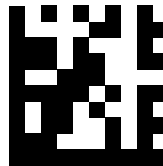


?

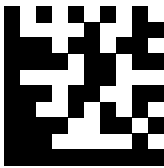


@




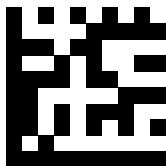


0

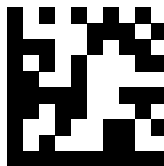


1

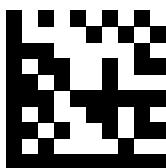


2

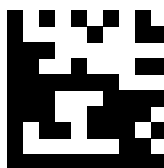


3

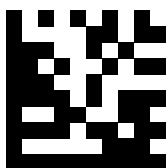


4

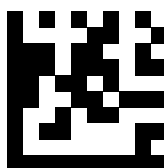


5

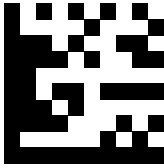


6

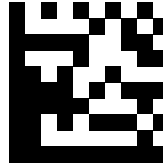


7

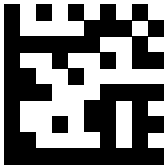

8

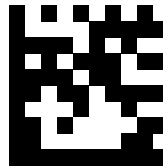


9

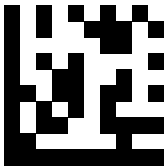


A

(Function Key  
Mapping: Ctrl+a)

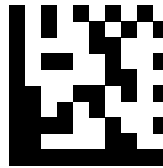


B


(Function Key  
Mapping: Ctrl+b)

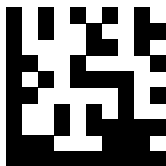


C  
(Function Key  
Mapping: Ctrl+c)

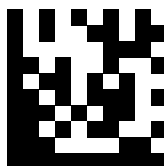


D  
(Function Key  
Mapping: Ctrl+d)

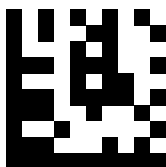


E  
(Function Key  
Mapping: Ctrl+e)

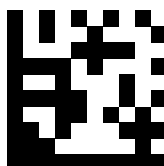

F  
(Function Key  
Mapping: Ctrl+f)

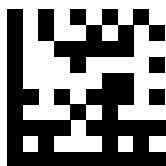


G  
(Function Key  
Mapping: Ctrl+g)

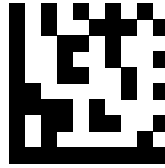


H

(Function Key Mapping: Ctrl+h)

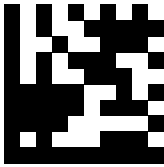


I

(Function Key Mapping: Ctrl+i)

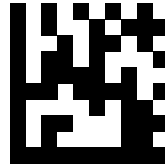


J

(Function Key Mapping: Ctrl+j)

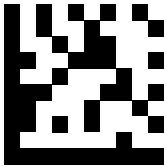


K

(Function Key Mapping: Ctrl+k)

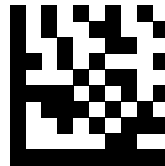


L


(Function Key Mapping: Ctrl+l)

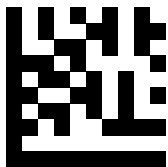


M  
(Function Key  
Mapping: Ctrl+m)

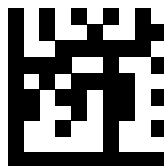


N  
(Function Key  
Mapping: Ctrl+n)

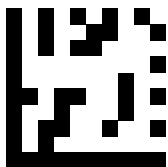


O  
(Function Key  
Mapping: Ctrl+o)

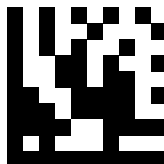


P  
(Function Key  
Mapping: Ctrl+p)

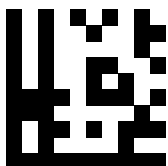


Q  
(Function Key  
Mapping: Ctrl+q)

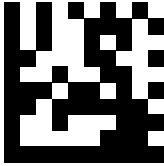


S  
(Function Key  
Mapping: Ctrl+s)

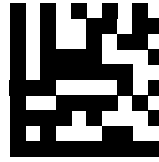


R  
(Function Key  
Mapping: Ctrl+r)

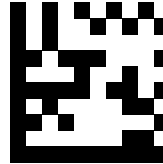


T  
(Function Key  
Mapping: Ctrl+t)

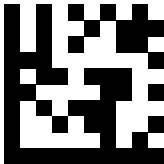


U  
(Function Key  
Mapping: Ctrl+u)

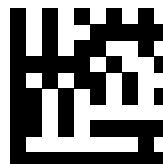


V  
(Function Key  
Mapping: Ctrl+v)

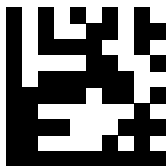


W  
(Function Key  
Mapping: Ctrl+w)

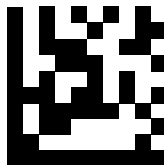


X  
(Function Key  
Mapping: Ctrl+x)

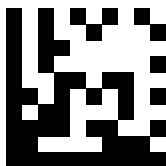


Y  
(Function Key  
Mapping: Ctrl+y)

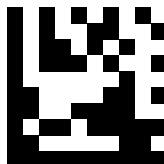


Z  
(Function Key  
Mapping: Ctrl+z)

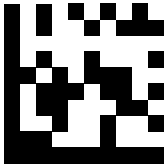


a

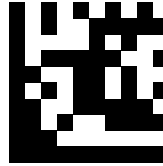


b

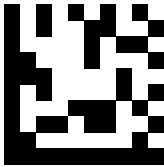


c

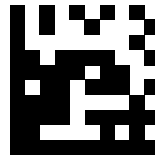

d

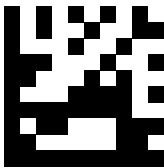


e

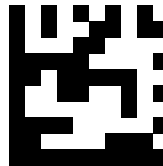


f




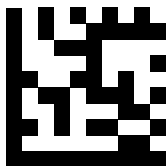


g

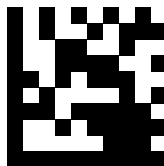


h

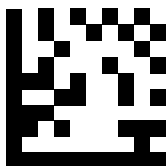


i

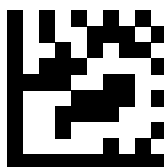


j

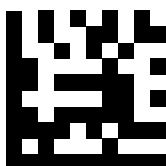


k

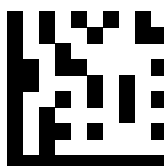


l

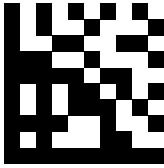


m

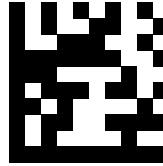


n

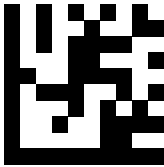


o

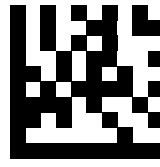


p

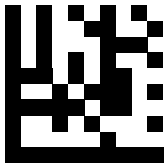


q

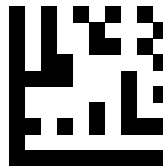


r

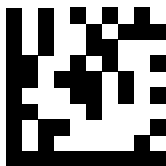


s

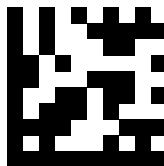


t

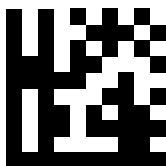


u

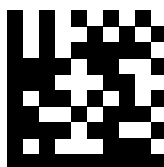


v

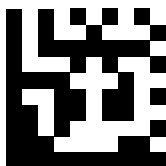


w

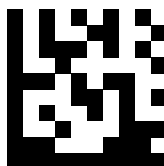

x

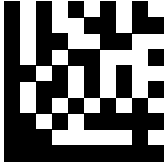

y

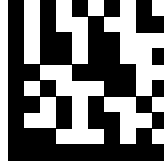

z



Insert



Delete



Home



End



Up arrow



Down arrow



Left arrow



Right arrow



Tab



Backspace



Shift



ESC



Page up



Page down



F1



F2



F3



F4



F5



F6




F7



F8



F9

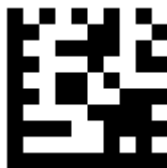

F10





F11




F12

## USB Virtual COM Driver Installing

If you use virtual COM port emulation, follow the steps below to start using the scanner.


1. Execute the driver (ZEBEX VCOM Driver Installation.exe).
2. Connect the scanner USB cable to the host computer.
3. Set the interface to USB Virtual COM Port.

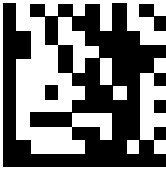

Set



USB Virtual COM Port  
\*Driver required

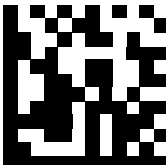

End

4. On the computer, check Device Manager to see if the computer successfully detects the scanner as “Barcode Scanner USB-COM device.” (The COM port number would vary depending on different hardware environment).




# JavaPOS Setting

---

This section provides the programming barcodes for setting JavaPOS and the flow of installing JavaPOS driver.

## *JavaPOS*

Scan the following barcodes to enable or disable JavaPOS.

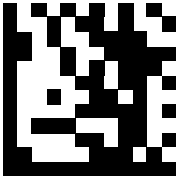


Set



JPOS Enable



JPOS Disable (Default)

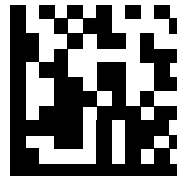

End

## **JavaPOS Version**

Our JavaPOS driver now is compatible with JavaPOS1.7.

## **Install the Java2 Runtime Environment**

The JRE is Java's virtual machine that allows for applications to run on the host computer. To be able to run the JavaPOS application, you need a 1.7 version JRE. Ignore the following steps if you already have a JavaPOS1.7 or a later version in your host computer.

- Go to <http://java.sun.com>, and select this version of Java Runtime Environment.
- Install the program following the instructions.

## **Install the Service Object and JavaPOS files**

In the "\Driver" folder, there are two files: ZbtJavapos.jar and jpos.xml. Please include ZbtJavapos.jar at your CLASSPATH and also copy the related "JPosEntry" option from the jpos.xml to your application's jpos.xml.

## **How to use RS232 scanner with JavaPOS Driver**

Install the Java RXTXcomm API


In the \RXTXcomm folder, there are four files: rtxSerial.dll , rtxParallel.dll, and RXTXcomm.jar. Please do the following steps to install the library.

1. Copy rtxSerial.dll and rtxParallel.dll to C:\Windows\system32.
2. Copy RXTXcomm.jar to your <JRE Install Folder>\lib directory.

## Use barcodes to configure the scanner

JavaPOS configuration barcodes:

Set

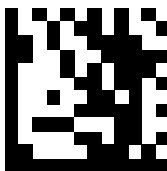


RS-232



JPOS Enable



End

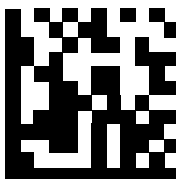

## Running the JavaPOS Test utility

Please run the test application POStest.sh to evaluate your installation.

## How to use JavaPOS driver at your application

1. Add “ZbtJavaPos.jar” from the “\Driver” folder to the CLASSPATH and copy the related “JPosEntry” option from the “jpos.xml”.
2. Modify the jpos.xml based on your COM Port
3. Example of jpos.xml file content

```
<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
        "jpos/res/jcl.dtd">
<JposEntries>
<!--Saved by JavaPOS jpos.config/loader (JCL) version 2.2.0 on 2010/3/11 10:16-->

    <JposEntry logicalName="Z3172P">
        <creation factoryClass="com.zbt.jpos.ZbtJposServiceInstanceFactory"
serviceClass="com.zbt.jpos.ScannerService"/>
        <vendor name="" url=""/>
        <jpos category="Scanner" version="1.7"/>
        <product description="Scanners" name="Scanner" url=""/>

        <!--Other non JavaPOS required property (mostly vendor properties and bus specific
properties i.e. RS232)-->
        <prop name="deviceType" type="String" value="2D"/>
        <prop name="deviceBus" type="String" value="RS232"/>
        <prop name="baudRate" type="String" value="115200"/>
        <prop name="parity" type="String" value="None"/>
        <prop name="portName" type="String" value="COM1"/>
        <prop name="flowControl" type="String" value="None"/>
        <prop name="stopBits" type="String" value="1"/>
        <prop name="dataBits" type="String" value="8"/>
    </JposEntry>

<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
        "jpos/res/jcl.dtd">
<JposEntries>

</JposEntries>
```

Note: The default baud rate : 2D scanner =115200


## How to use USB scanner with JavaPOS Driver

Configuring the Scanner via barcodes:


- Scan the barcodes in the sequence below to configure the scanner to usb-serial mode.

**JavaPOS configuration bar codes:**

Set

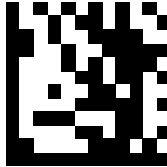


USB Virtual COM Port

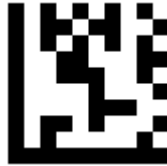

JPOS Enable



End

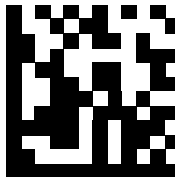

## ***Install the Java RXTXcomm API***

In the \RXTXcomm folder, there are four files: rtxSerial.dll , rtxParallel.dll, and RXTXcomm.jar. Please do the following steps to install the library.

1. Copy rtxSerial.dll and rtxParallel.dll to C:\Windows\system32
2. Copy RXTXcomm.jar to your <JRE Install Folder>\lib directory.

## ***Running the JavaPOS Test utility***

Please run the test application to evaluate your installation.



## How to Use JavaPOS Driver at your application

1. In the “\Driver” folder, copy “ZbtJavaPos.jar” and “jpos.xml” to your work folder.
2. Modify the jpos.xml .
3. Example of jpos.xml file content

```

<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
        "jpos/res/jcl.dtd">
<JposEntries>
<!--Saved by JavaPOS jpos.config/loader (JCL) version 2.2.0 on 2010/3/11 10:16-->

    <JposEntry logicalName="Z3172P">
        <creation factoryClass="com.zbt.jpos.ZbtJposServiceInstanceFactory"
serviceClass="com.zbt.jpos.ScannerService"/>
        <vendor name="" url=""/>
        <jpos category="Scanner" version="1.7"/>
        <product description="Scanners" name="Scanner" url=""/>

        <!--Other non JavaPOS required property (mostly vendor properties and bus specific properties i.e.
RS232)-->
            <prop name="deviceType" type="String" value="2D"/>
            <prop name="deviceBus" type="String" value="RS232"/>
            <prop name="baudRate" type="String" value="115200"/>
            <prop name="parity" type="String" value="None"/>
            <prop name="portName" type="String" value="COM56"/>
            <prop name="flowControl" type="String" value="None"/>
            <prop name="stopBits" type="String" value="1"/>
            <prop name="dataBits" type="String" value="8"/>
    </JposEntry>

<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
        "jpos/res/jcl.dtd">
<JposEntries>
</JposEntries>

```