



Programming Guide

Advanced 2D Image Scanner

This Programming Guide is intended for:

- 2D Image Hands-Free Scanner: Z-8072 Plus

Revision History

Changes to the original manual are listed below:

Version	Date	Description of Version
1.0	2018/08/16	Initial release
1.1	2018/11/16	Added new Code 32, data editing, and phone features
1.2	2018/11/23	Codabar feature descriptions updated
1.3	2018/11/27	RSS descriptions updated; added enter in ASCII code
1.4	2018/12/25	Added Alt mode, more data editing support, continue mode behavior
1.5	2019/04/03	Added Turkey country codes
1.6	2019/5/23	Keyboard Caps Lock State added
1.7	2019/6/18	GS1 decoding added
1.8	2019/07/24	Added beep after good decode setup
1.9	2020/2/7	Default parameters added
1.10	2020/5/15	Micro QR enable/disable code replaced

Important Notice

No warranty of any kind is made in regard to this material, including, but not limited to, implied warranties of merchantability or fitness for any particular purpose. We are not liable for any errors contained herein nor for incidental or consequential damages in connection with furnishing, performance or use of this material. We shall be under no liability in respect of any defect arising from fair wear and tear, willful damage, negligence, abnormal working conditions, failure to follow the instructions and warnings, or misuse or alteration or repair of the products without written approval. No part of this document may be reproduced, transmitted, stored in a retrieval system, transcribed, or translated into any human or computer or other language in any form or by any means electronic, mechanical, magnetic, optical, chemical, biological, manual or otherwise, except for brief passages which may be quoted for purposes of scholastic or literary review, without express written consent and authorization. We reserve the right to make changes in product design without reservation and without notification. The material in this guide is for information only and is subject to change without notice. All trademarks mentioned herein, registered or otherwise, are the properties of their various, ill, assorted owners.

General Handling Precautions

- Do not dispose the scanner in fire.
- Do not put the scanner directly in the sun or by any heat source.
- Do not use or store the scanner in a very humid place.
- Do not drop the scanner or allow it to collide violently with other objects.
- Do not take the scanner apart without authorization

Guidance for Printing

This manual is in A5 size. Please double check your printer setting before printing it out. When the barcodes are to be printed out for programming, the use of a high-resolution laser printer is strongly suggested for the best scan result.

Firmware Notice

To use all functions in this guide please update to the latest firmware.

Copyright © 2020. All rights reserved.

Table of Contents

Important Notice.....	2
General Handling Precautions.....	2
Guidance for Printing	2
Using the Scanner	8
Beeper Indication.....	10
Settings and Programming	11
Program Set Up Flow.....	11
User Preferences	12
Show Version.....	12
System Settings	12
Customer's Factory Default.....	13
Scan Mode	14
Continue Mode behavior	15
Same Code Delay Time for Continue Scan Mode and Presentation Mode.....	16
Interface Switch.....	18
Good Read Beep Length.....	19
Good Read Beep Frequency.....	20
Beep After Good Decode	21
Aiming Pattern	22
Motion Detect Sensibility.....	23
Phone Mode.....	24
Terminal Character	26
RS232 Baud Rate	27
RS232 Parity Bit.....	29
RS232 Stop Bit.....	30
RS232 Data Bit.....	31
USB Speed	32
Country Code	33
Persian/Arabic Language Encoding Support.....	39
Readable Symbologies	40
All Symbologies	40
UPC-A	41
UPC-E.....	42
EAN-8	43
EAN 13.....	44
JAN code for Books.....	45
Code 128	46
Code 39	47
Code 93	48
Code 32	49

Code 11	50
Codabar	51
Plessey	52
MSI/Plessy	53
Interleaved 2 of 5	54
IATA 2 of 5	55
Matrix 2 of 5	56
Straight 2 of 5	57
RSS 14 (GS1 DATABAR 14)	58
RSS Expanded (GS1 DataBar Expanded)	59
RSS Limited (GS1 DataBar Limited)	60
GS1-128 AIM ID	61
GS1-2D AIM ID	62
Component CC-A	63
Component CC-B	64
Component CC-C	65
PDF417	66
Data Matrix	68
QR Code	69
Micro QR Code	70
Aztec	71
MaxiCode	72
GS1 DataBar 14 Stacked	73
GS1 DataBar Expanded Stacked	74
Symbology Features	75
UPC / EAN	75
UPC-A	76
UPC-E	78
EAN 8	80
EAN 13	81
EAN 13 Data Redundant Check	83
JAN code for Books Separator	84
Code 39	86
Code 39 Redundant Check	88
Code 32 (Italian Pharmacode)	89
Codabar	90
Codabar Redundant Check	92
Interleaved 2 of 5	93
MSI / Plessy	95
Code 11	97
Data Matrix	99
QR / Micro QR	101

Japanese Language Encoding Support	103
Aztec.....	104
FNC1 GS Substitution Values.....	105
Data Editing (Prefix)	106
Prefix Set Up Flow	106
All Prefix	107
UPC / EAN Prefix.....	108
Code 128 Prefix.....	110
Code 39 Prefix	111
Code 93 Prefix	112
Code 32 Prefix	113
Code 11 Prefix	114
Codabar Prefix.....	115
Plessey Prefix.....	116
MSI Prefix	117
Interleaved 2 of 5Prefix	118
IATA 2 of 5 Prefix	119
Matrix 2 of 5 Prefix.....	120
Straight 2 of 5 Prefix.....	121
RSS 14 Prefix (GS1 DataBar 14 Prefix)	122
RSS Expanded Prefix (GS1 DataBar Expanded Prefix).....	123
RSS Limited Prefix (GS1 DataBar Limited Prefix)	124
Component CC-A Prefix.....	125
Component CC-B Prefix.....	126
Component CC-C Prefix.....	127
PDF 417 Prefix	128
Micro PDF 417 Prefix.....	129
Data Matrix Prefix	130
QR Prefix	131
Micro QR Prefix	132
Aztec Prefix.....	133
MaxiCode Prefix	134
Data Editing (Suffix).....	135
Suffix Set Up Flow.....	135
All Suffix	136
UPC-A Suffix	137
UPC-E Suffix.....	138
EAN 8 Suffix	139
EAN 13 Suffix.....	140
Code 128 Suffix	141
Code 39 Suffix	142
Code 93 Suffix	143

Code 32 Suffix	144
Code 11 Suffix	145
Codabar Suffix.....	146
Plessey Suffix.....	147
MSI Suffix	148
Interleaved 2 of 5 Suffix	149
IATA 2 of 5 Suffix.....	150
Matrix 2 of 5 Suffix	151
Straight 2 of 5 Suffix	152
RSS 14 Suffix (GS1 DataBar 14 Suffix).....	153
RSS Expanded Suffix (GS1 DataBar Expanded Suffix)	154
RSS Limited Suffix (GS1 DataBar Limited Suffix).....	155
Component CC-A Suffix.....	156
Component CC-B Suffix	157
Component CC-C Suffix	158
PDF-417 Suffix.....	159
Micro PDF-417 Suffix.....	160
Data Matrix Suffix.....	161
QR Code Suffix.....	162
Micro QR Suffix	163
Aztec Suffix.....	164
MaxiCode Suffix	165
Data Editing (Truncate/Return)	166
Set All Symbologies Truncate/Return.....	167
Set UPC-A Truncate/Return.....	169
Set UPC-E Truncate/Return	171
Set EAN-8 Truncate/Return	173
Set EAN 13 Truncate/Return	175
Set Code 128 Truncate/Return.....	177
Set Code 39 Truncate/Return.....	179
Set Code 93 Truncate/Return.....	181
Set Code 32 Truncate/Return.....	183
Set Code 11 Truncate/Return.....	185
Set Codabar Truncate/Return	187
Set Plessey Truncate/Return	189
Set MSI (Modified Plessy) Truncate/Return	191
Set Interleaved 2 of 5 Truncate/Return	193
Set IATA 2 of 5 Truncate/Return	195
Set Matrix 2 of 5 Truncate/Return	197
Set Straight 2 of 5 Truncate/Return	199
Set RSS 14 (GS1 DataBar) Truncate/Return	201
Set RSS Expanded (GS1 DataBar Expanded) Truncate/Return	203

Set RSS Limited (GS1 DataBar Limited) Truncate/Return	205
Set Component CC-A Truncate/Return	207
Set Component CC-B Truncate/Return.....	209
Set Component CC-C Truncate/Return.....	211
Set PDF 417 Truncate/Return	213
Set Micro PDF 417 Truncate/Return	215
Set Data Matrix Truncate/Return.....	217
Set QR Truncate/Return	219
Set Micro QR Truncate/Return	221
Set Aztec Truncate/Return	223
Set MaxiCode Truncate/Return	225
Code Settings	227
Set Lengths for Codes.....	227
Set Lengths for Code 128	229
Set Lengths for Code 39	230
Set Lengths for Code 93	231
Set Lengths for Codabar.....	232
Set Lengths for Interleaved 2 of 5	233
Set Lengths for Code 11	234
Set Lengths for MSI	235
Set Lengths for Matrix 2 of 5.....	236
Code Identifiers.....	237
Code Identifiers Table	238
Keyboard Caps Lock State	239
Function Key Mapping	241
ASCII Code	242
JavaPOS Driver V2.00 for Win32/Win64	263
JavaPOS Version	263
Install the Java2 Runtime Environment.....	263
Install the Service Object and JavaPOS files	263
How to use RS232 scanner with JavaPOS Driver	263
Use barcodes to configure the Handheld scanner	264
Running the JavaPOS Test utility	265
How to use JavaPOS driver at your application.....	265
How to use USB scanner with JavaPOS Driver	266
Install the Java RXTXcomm API	267
Running the JavaPOS Test utility	267
How to Use JavaPOS Driver at your application	268

Default Parameters

The factory default setting table gives the default settings of all the programmable parameters. The default settings will be restored whenever the "Reset" programming label is scanned and the scanner is in programming mode. Default values are highlighted in grey background in the settings.

Factory Default Setting

Scanner Operation

User Preferences	
Parameter	Default
Baud Rate	9600 BPS
Interface	USB Keyboard
Good read beep length	50 msec
Terminal character	CR/LF
Country code	US

Symbologies

Symbology	Default
UPC-A	Enable
UPC-E	Enable
EAN-8	Enable
EAN 13	Enable
JAN code for Books	Disable
Code 128	Enable
Code 39	Enable
Code 93	Enable
Code 32	Disable
Code 11	Disable
Codabar	Enable
Plessey	Disable
MSI/Plessy	Disable
Interleaved 2 of 5	Enable
IATA 2 of 5	Disable
Matrix 2 of 5	Disable
Straight 2 of 5	Disable
RSS 14 (GS1 DATABAR 14)	Enable
RSS Expanded (GS1 DataBar Expanded)	Enable
RSS Limited (GS1 DataBar Limited)	Enable
GS1-128 AIM ID	Disable
GS1-2D AIM ID	Disable
Component CC-A	Disable
Component CC-B	Disable
Component CC-C	Disable
PDF417	Enable
Micro PDF417	Enable
Data Matrix	Enable
QR Code	Enable
Micro QR Code	Enable
Aztec	Disable
MaxiCode	Disable
GS1 DataBar 14 Stacked	Disable
GS1 DataBar Expanded Stacked	Disable

Using the Scanner

Beeper Indication

Beeps	Indication
3 beeps in a series from low to high pitch	Power up
1 short beep	A barcode has been successfully decoded
2 short beeps	The scanner has entered program mode
1 long beep	A setting has been programmed
3 beeps in a series from low to high pitch	The scanner has exited program mode
3 short beeps	Error setting the scanner

Settings and Programming

Scan selected barcodes in this manual to affect setup and programming of your handheld imaging barcode scanner. Decoding options and interface protocols can be tailored to a specific application.

Setup parameters are stored in non-volatile memory in the scanner and are retained even when power is off. Setup parameters change only when you reset them. You may need to hide adjacent code patches with your hand when scanning.

Program Set Up Flow

Scan "Set" to set up --> Scan selected barcode --> Scan "End" to confirm the setup.

User Preferences

Show Version


Scan this barcode to display firmware version.




Read device information

System Settings


Scan this barcode to return all parameters to the default values.

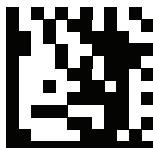

Set

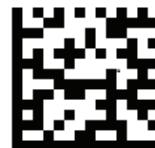


Factory default settings

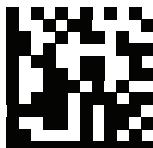

End

Customer's Factory Default


Scan barcodes below to set or delete customer's factory default.

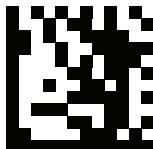


Set



Save customer's factory default

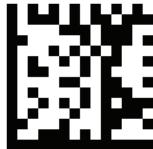

Delete customer's factory default

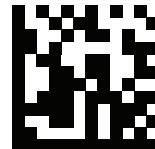


End


Scan Mode

Scan a barcodes below to set the scanner to different modes.

Presentation and Continue Scan modes allow automatic scan when barcodes are present in front of the scanner. In Continue Scan mode, the scan LED stays active and continues to decode. Trigger mode allows triggered scans.

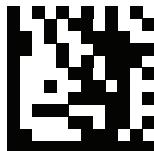


Set

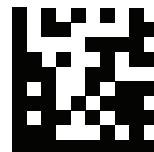

Presentation Mode
(Default)



Continue Scan Mode

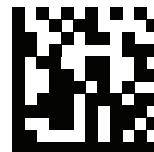

End


Continue Mode behavior

Auto

Default behavior, offers maximum depth of field.

Regular

Set scanner to regular to reduce working range.

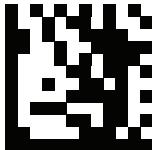


Set



Regular




Auto (Default)

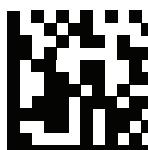


End

Same Code Delay Time for Continue Scan Mode and Presentation Mode


Scan a barcode below to select the duration of the delay time for scan code.

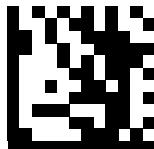

Set

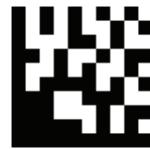

500 msec

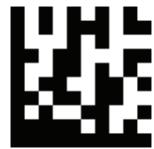


1 sec (Default for Continue Scan Mode)




1.5 sec



2 sec

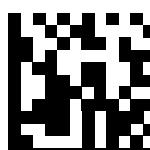

End

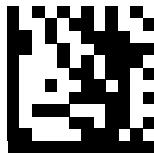


Set



250 msec (Default for Presentation Mode)




Disable

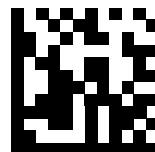


End

Interface Switch


Your 2D Imager supports interfaces such as USB HID, RS232 serial, and USB virtual COM. To switch the interface, simply select the appropriate cable and configure the proper interface by following interface selection.

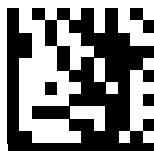


Set

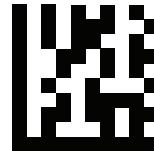

RS-232

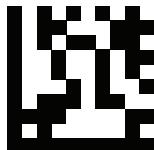


USB Keyboard (Default)

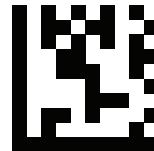

USB Virtual COM Port


*Driver required

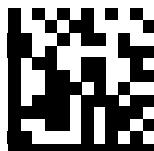

End

Good Read Beep Length


Scan a barcode below to select the duration of the beep signal after a good decode.

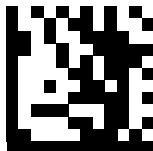


Set




50 msec (Default)

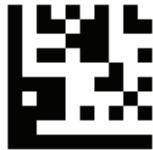


100 msec

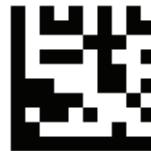

150 msec

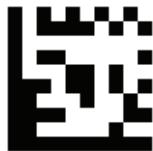


200 msec

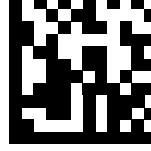

End

Good Read Beep Frequency

Scan a barcode below to select the beep tone of the beep signal after a good decode.

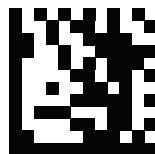

Set




Low



Medium (Default)




High

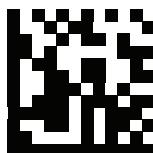


End

Beep After Good Decode

Scan a barcode below to enable or disable beep after a good decode.

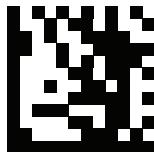


Set

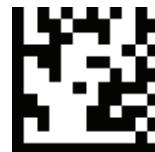

Enable (Default)



Disable

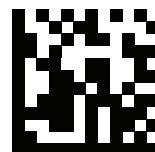

End

Aiming Pattern

Aiming pattern works as an aiming system to aid in barcode reading. Use the following settings to enable or disable this function. This function is for supporting models only.



Set



Auto



Always Off (Default)



End

Motion Detect Sensibility




Set



Level 2



Level 1 (Low)

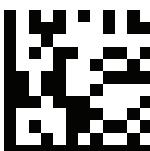


Level 4



Level 3 (Default)



End

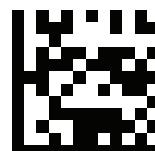


Level 5 (High)

Phone Mode

LED turns to orange when Phone mode is enabled.




Set

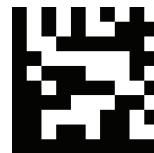


Phone key enable

Trigger key is used for Phone mode switch

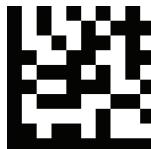

Phone key disable (Default)
Trigger key is used for scanning

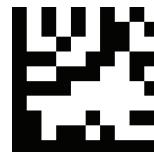


Phone mode enable




Phone mode disable (Default)




End

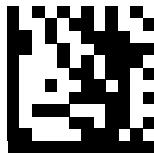


Set

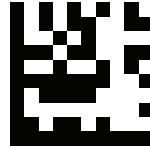

Phone mode enable
(Illumination LED Standby off)

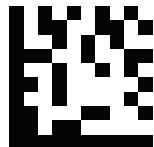


Phone mode enable
(Illumination LED Standby Low)

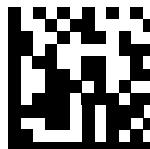


End


Terminal Character

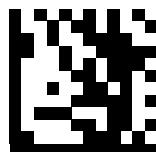


Set

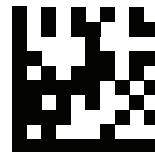


None

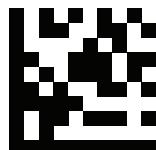


CR/LF (Default)

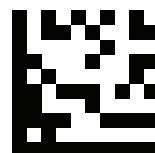

CR

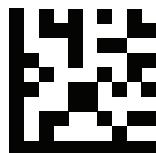


TAB

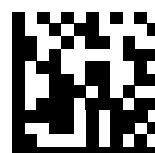


End

RS232 Baud Rate


Baud rate is the number of bits of data transmitted per second. Set the imager's baud rate to match the baud rate setting of the host device. Otherwise, data may not reach the host device or may reach it in distorted form.

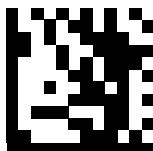


Set

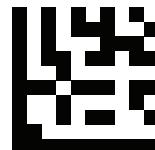


9600 (Default)

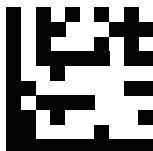


19200

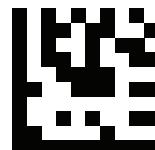


38400

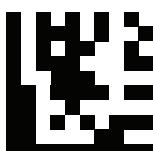


57600

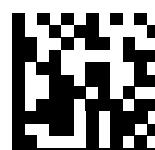


End

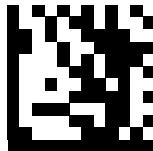

Set

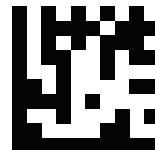


115200

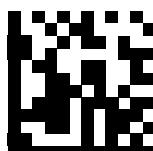


End

RS232 Parity Bit


Parity bit can be added to ensure the total number of the string is even or odd.

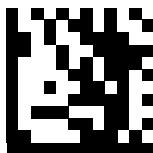


Set

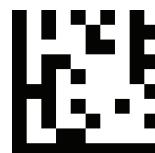


None (Default)

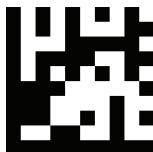

Even parity

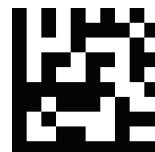


Odd parity

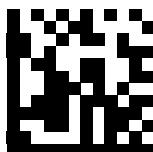


End

RS232 Stop Bit


Stop bit is used to signal the end of a transmission.

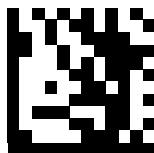


Set

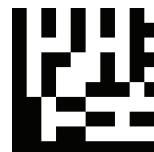

1 Stop Bit (Default)

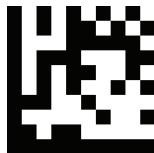


2 Stop Bit

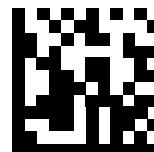

End

RS232 Data Bit

Data bit sets the word length at 7 or 8 bits of data per character.

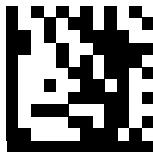


Set



CS7




CS8 (Default)

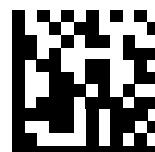

End

USB Speed

Scann the following settings to change the USB speed.

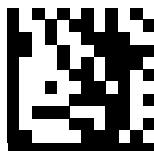


Set



USB 2.0 (For Standard version)




USB 1.1 (For Specific Customer version)

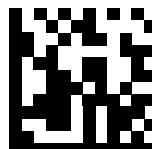

End

Country Code

Scann the following settings to change the country code.

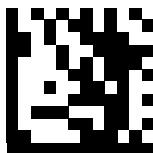

Set



US (Default)




Belgium




Britain




Denmark

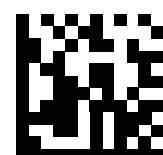

End

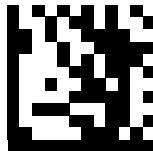

Set

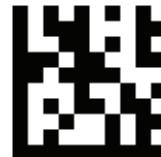

France




Germany




Italy



Norway

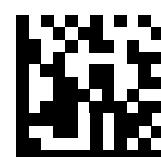

End

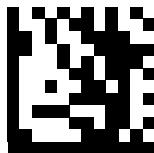


Set



Portugal




Spain

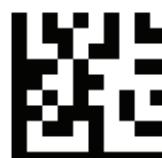


Sweden



Switzerland

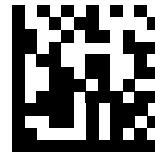

End

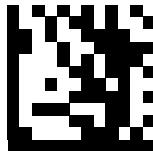

Set



Japan



Hungary




Czech Republic



Slovakia



End

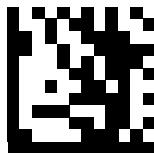


Set




Romania




Croatia

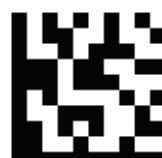

Poland

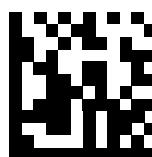International Keyboard mode
(ALT mode)

End

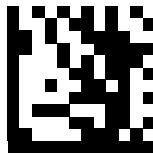


Set



Turkey-Q




Turkey-F

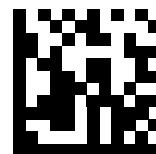

End

Persian/Arabic Language Encoding Support

Scann the following settings to change the encoding options.

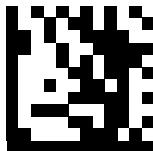

Set




UTF-8 (Default)



ISO 8859-6



CP1256 (WINDOWS-1256)

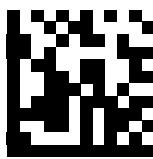


End

Readable Symbologies

This section provides the programming barcodes for enabling and disabling readable symbologies. If the default values suit requirements, programming is not necessary.

All Symbologies

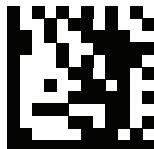


Set




Enable All



Default

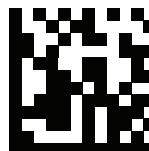

End

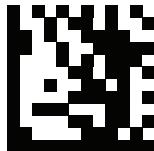UPC-A


Set



Enable UPC-A (Default)




Disable UPC-A

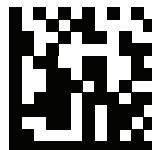

End

UPC-E

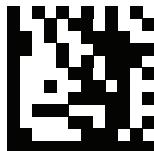


Set




Enable UPC-E (Default)



Disable UPC-E

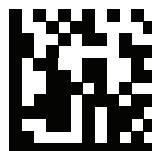

End

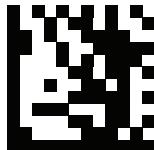EAN-8


Set



Enable EAN 8 (Default)




Disable EAN 8

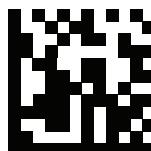

End

EAN 13

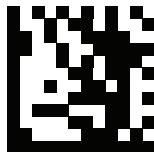


Set




Enable EAN 13 (Default)



Disable EAN 13

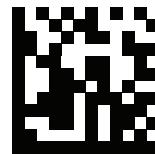


End

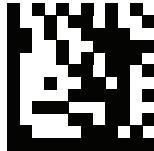JAN code for Books


Set



Enable

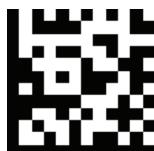


Disable (Default)

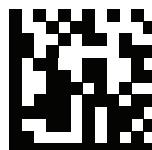

End

Code 128

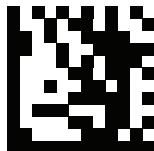


Set




Enable Code 128 (Default)



Disable Code 128

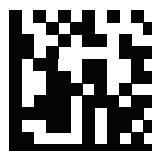

End

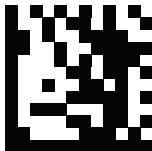Code 39


Set



Enable Code 39 (Default)




Disable Code 39

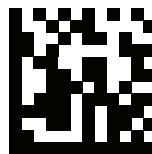

End

Code 93

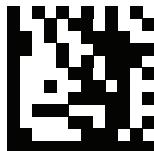


Set




Enable Code 93 (Default)



Disable Code 93

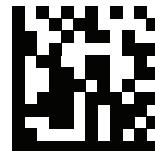

End

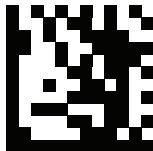Code 32


Set



Enable Code 32




Disable Code 32 (Default)

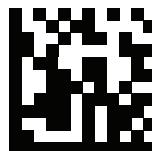

End

Code 11

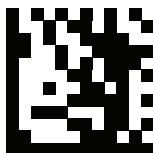


Set



Enable Code 11




Disable Code 11 (Default)

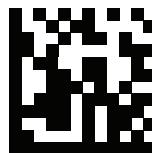

End

Codabar

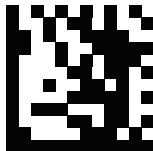


Set



Enable Codabar (Default)




Disable Codabar

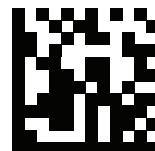

End

Plessey

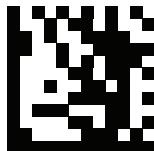


Set




Enable Plessey



Disable Plessey (Default)

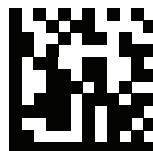

End

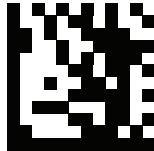MSI/Plessy


Set



Enable MSI/Plessy




Disable MSI/Plessy (Default)

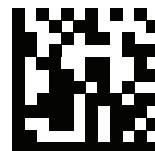

End

Interleaved 2 of 5

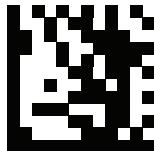


Set




Enable Interleaved 2 of 5 (Default)



Disable Interleaved 2 of 5

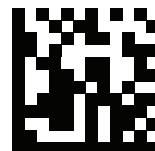

End

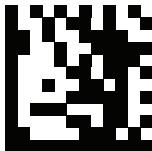IATA 2 of 5


Set



Enable IATA 2 of 5




Disable IATA 2 of 5 (Default)

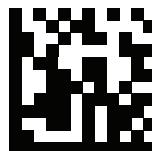

End

Matrix 2 of 5

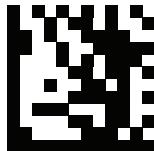


Set




Enable Matrix 2 of 5



Disable Matrix 2 of 5 (Default)

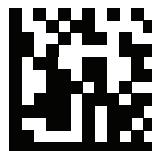

End

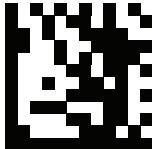Straight 2 of 5


Set



Enable Straight 2 of 5




Disable Straight 2 of 5 (Default)

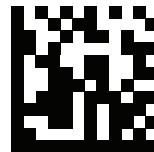

End

RSS 14 (GS1 DATABAR 14)

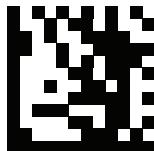


Set




Enable RSS 14 (GS1 DATABAR 14) (Default)



Disable RSS 14 (GS1 DATABAR 14)

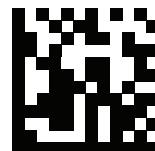

End

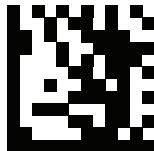RSS Expanded (GS1 DataBar Expanded)


Set



Enable RSS Expanded (GS1 DataBar Expanded) (Default)




Disable RSS Expanded (GS1 DataBar Expanded)

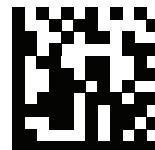

End

RSS Limited (GS1 DataBar Limited)

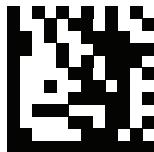


Set




Enable RSS Limited (GS1 DataBar Limited)
(Default)



Disable RSS Limited (GS1 DataBar Limited)

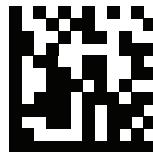

End

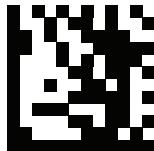GS1-128 AIM ID


Set



Enable




Disable (Default)

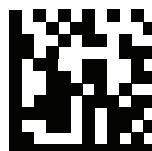

End

GS1-2D AIM ID

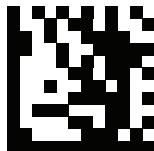


Set




Enable



Disable (Default)

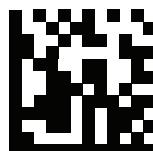

End

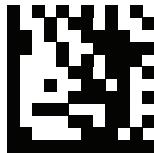Component CC-A


Set



Enable Component CC-A




Disable Component CC-A (Default)

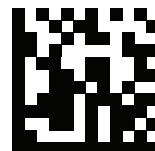

End

Component CC-B

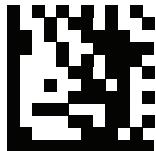


Set




Enable Component CC-B



Disable Component CC-B (Default)

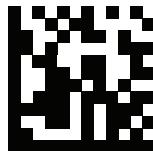

End

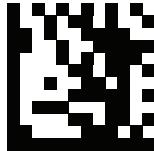Component CC-C


Set



Enable Component CC-C




Disable Component CC-C (Default)

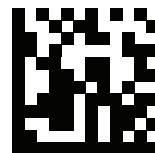

End

PDF417

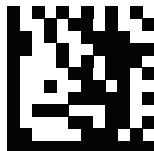


Set




Enable PDF417 (Default)



Disable PDF417

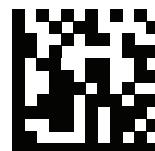

End

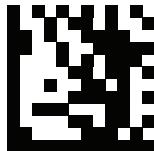Micro PDF417


Set



Enable Micro PDF417 (Default)




Disable Micro PDF417

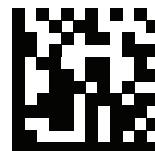

End

Data Matrix

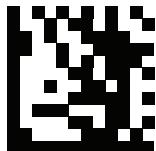


Set



Enable Data Matrix (Default)




Disable Data Matrix

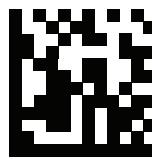


End

QR Code

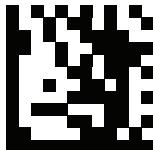


Set

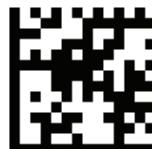

Enable QR Code (Default)




Disable QR Code

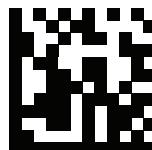


End


Micro QR Code

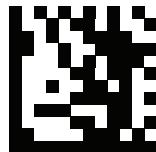


Set

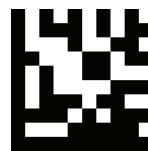


Enable Micro QR Code (Default)

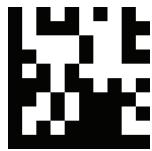

Disable Micro QR Code

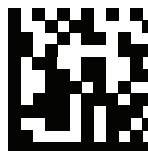

End

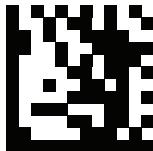Aztec


Set



Enable Aztec




Disable Aztec (Default)

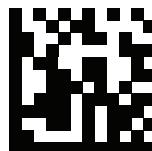

End

MaxiCode

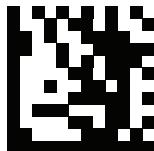


Set




Enable MaxiCode



Disable MaxiCode (Default)

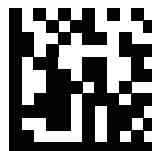

End

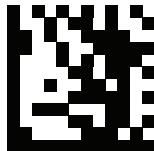GS1 DataBar 14 Stacked


Set



Enable




Disable (Default)

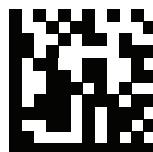

End

GS1 DataBar Expanded Stacked

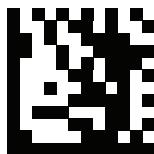


Set



Enable



Disable (Default)

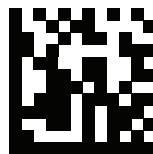


End

Symbology Features

This section provides the programming barcodes for selecting features available to different symbologies.

UPC / EAN

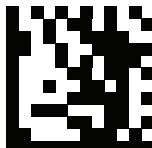


Set



Enable decoding of 2/5-digit supplemental code for UPC-A, UPC-E, EAN-13, and EAN-8




Disable decoding of 2/5-digit supplemental code for UPC-A, UPC-E, EAN-13, and EAN-8 (Default)

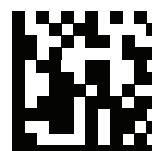


End


UPC-A

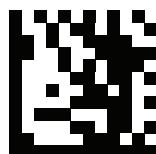


Set

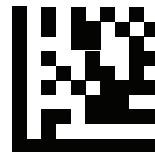


Enable UPC-A Number System digit
(Default)

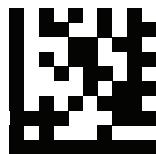


Disable UPC-A Number System digit

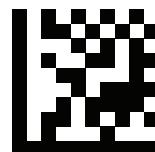


Enable UPC-A check digit (Default)

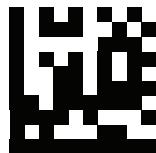


Disable UPC-A check digit

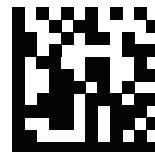



End

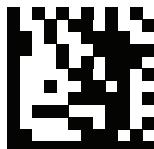

Set

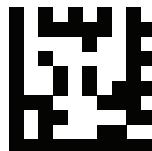


Enable conversion of UPC-A to EAN13

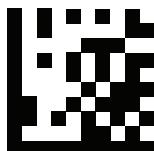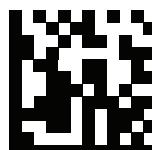
Disable conversion of UPC-A to EAN13
(Default)

End


UPC-E

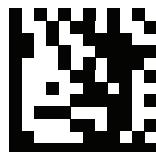


Set

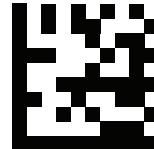


Enable UPC-E Number System digit
(Default)

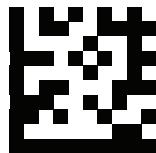


Disable UPC-E Number System digit

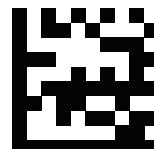


Enable UPC-E check digit (Default)

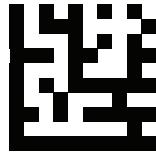


Disable UPC-E check digit

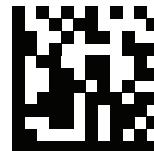



End

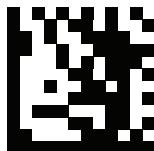

Set

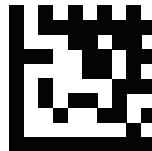


Enable conversion of UPC-E to UPC-A

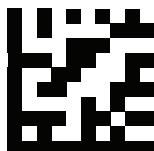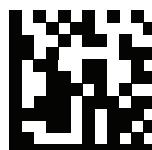
Disable conversion of UPC-E to UPC-A
(Default)

End


EAN 8

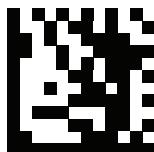


Set

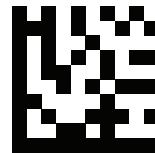


Enable EAN 8 check digit (Default)

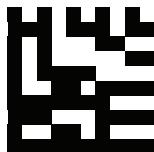


Disable EAN 8 check digit

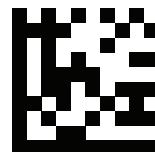


Enable conversion of EAN 8 to EAN 13

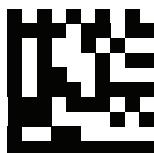


Disable conversion of EAN 8 to EAN 13
(Default)

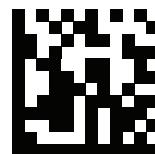


End

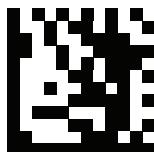EAN 13


Set

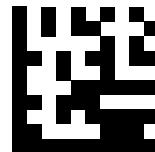



Enable EAN 13 check digit (Default)

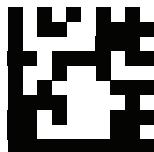


Disable EAN 13 check digit

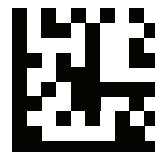


Enable conversion of EAN 13 to ISBN

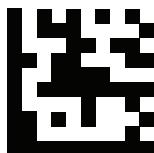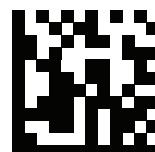Disable conversion of EAN 13 to ISBN
(Default)


End

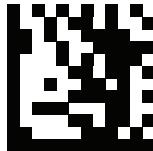


Set

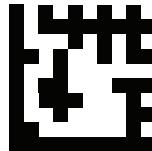


Enable conversion of EAN 13 to ISSN

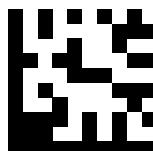


Disable conversion of EAN 13 to ISSN
(Default)

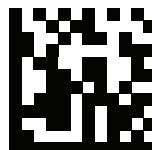


End

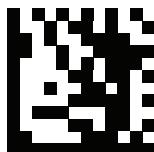EAN 13 Data Redundant Check


Set

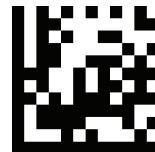

Off

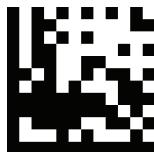


1 (Default)

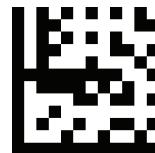

2




3

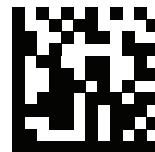

End

JAN code for Books Separator

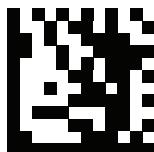

Set




[TAB] key x 2




[SPACE] key x 3



[-] dash char

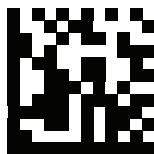

End

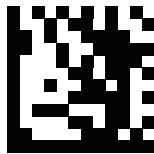

Set




Others char Separator

For parameters requiring specific numeric values, scan the [PROGRAMMING GUIDE\ASCII Code] appropriately numbered barcode(s)




None (Default)

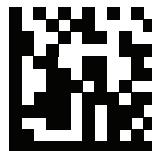


End


Code 39

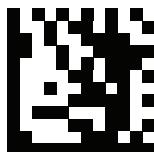


Set

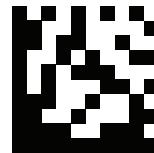


Enable Code 39 full ASCII mode

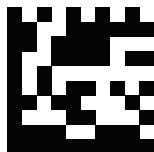


Disable Code 39 full ASCII mode (Default)

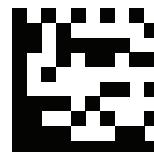


Enable Start and Stop characters

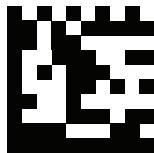


Disable Start and Stop characters (Default)

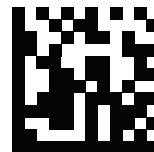




End

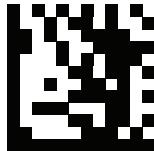

Set

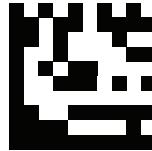


Disable Checksum (Default)

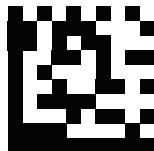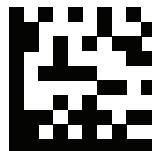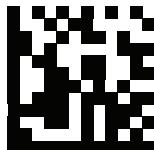Enable checksum and send check
characterEnable checksum and strip check
character

End

Code 39 Redundant Check

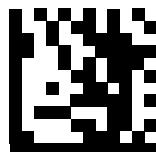

Set



Off




1 (Default)




2




3

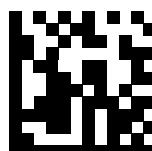

End

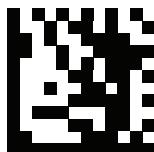
Code 32 (Italian Pharmacode)

Set

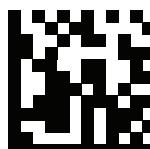
Transmit
Alphabet "A" charDisable Transmit
Alphabet "A" char
(Default)

End


Codabar

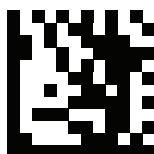


Set

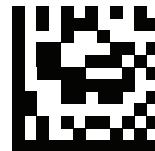


Disable Checksum (Default)

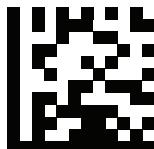


Enable checksum and send check character

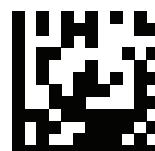


Enable checksum and strip check character

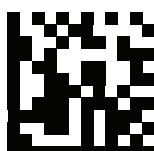


End

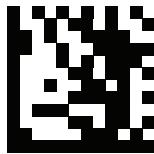


Set

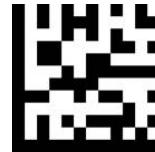

Strip Start/Stop characters

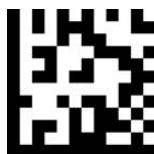


Output Start/Stop characters (Default)

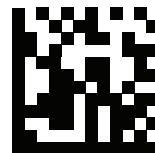

End

Codabar Redundant Check

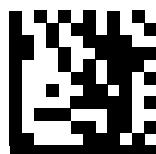

Set



Off




1 (Default)




2




3

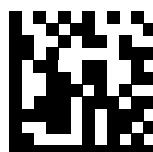




End

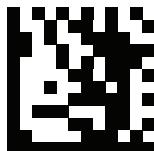Interleaved 2 of 5

Set

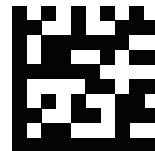


Disable Checksum (Default)

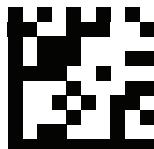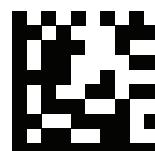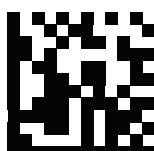Enable checksum and send check
characterEnable checksum and strip check
character


End




Set

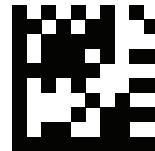


Default quiet zone checking
No length checking performed (Default)

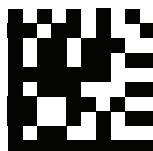


Smaller quiet zone allowed

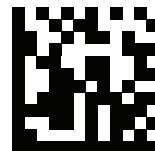


End

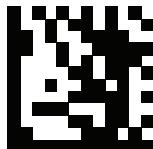MSI / Plessey


Set

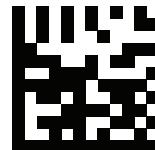


Disable MSI Plessey checksum

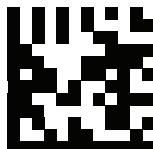


Mod 10 checksum (Default)

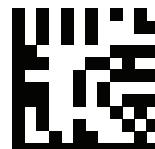


Mod 10/10 checksum

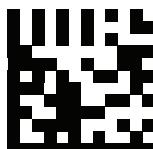


Mod 11/10 checksum

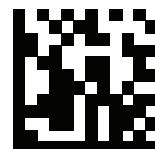


End

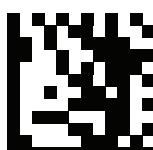


Set

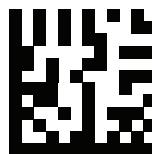


Output checksum character(s) (Default)

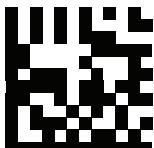


Strip checksum character(s)

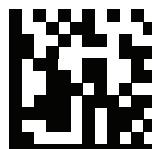


End

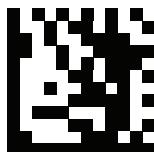Code 11


Set

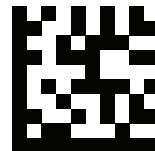


Output checksum character(s)

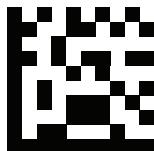


Strip checksum character(s) (Default)

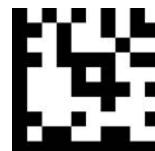

Disable checksum checking

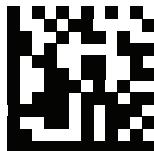


End

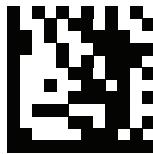


Set



Enable 1-digit checksum checking

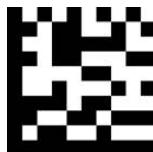


Enable 2-digit checksum checking
(Default)

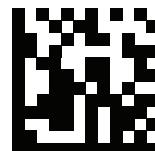


End


Data Matrix

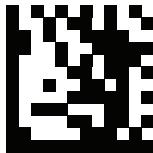


Set

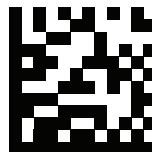


Enable mirror decoding (Default)

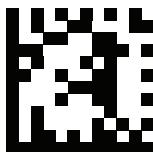

Disable mirror decoding

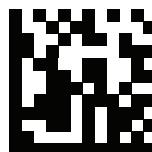


End

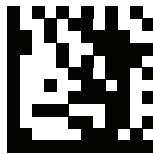


Set




Enable rectangular Data Matrix decoding

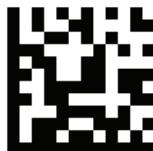


Disable rectangular Data Matrix decoding
(Default)

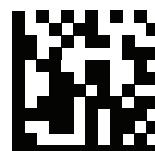


End

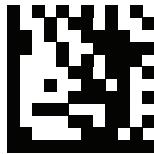QR / Micro QR


Set

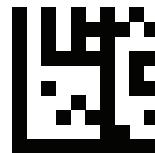


Enable mirror decoding (Default)

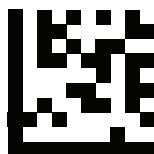

Disable mirror decoding

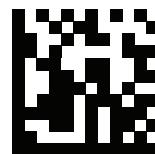

End

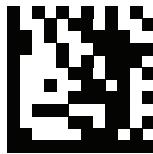


Set



UTF8 conversion for word only




Universal UTF8 conversion (Default)

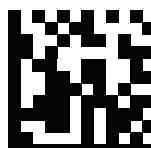

End

Note: Please install QR_UTF8_Conversion executable file before using this function.

Japanese Language Encoding Support

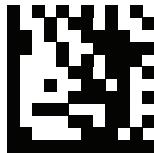


Set



Enable




Disable (Default)

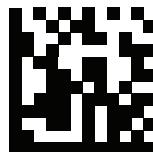


End


Aztec

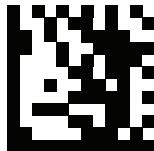


Set

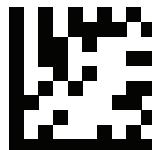


Enable mirror decoding (Default)

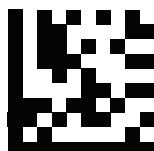


Disable mirror decoding

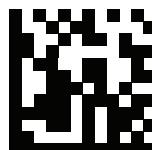


End

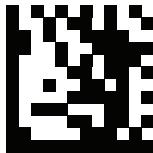FNC1 GS Substitution Values

Set

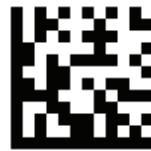

“Ctrl+]” (Default)

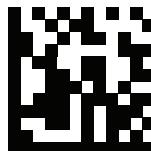“Alt+29(KP)”
(nmvs)

End


Data Editing (Prefix)

Prefix is additional characters that can be sent before the scanned data. Please scan the barcodes in the selection below to set your prefix.


Prefix Set Up Flow

1. Scan Set.
2. Enable barcode type.
3. Scan prefix you would like to add characters within ASCII Table. Up to 4 digits can be added.
4. Scan End.


Ex. If we wish to add “3” as prefix for all barcode type, then follow procedure as below, Scan [Set] to enter setup. Then we select barcode by scanning [Enable All], then we scan [3] as 3 of ASCII HEX. At the end, we scan [End] to completed setup.

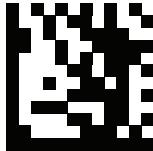All Prefix


Set

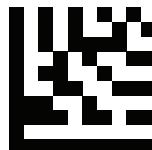

Enable All

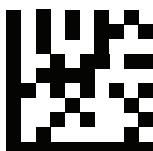


Disable All (Default)

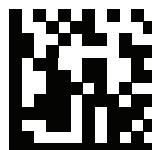


End


UPC / EAN Prefix

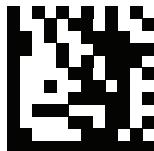


Set

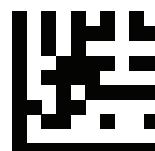


Enable UPC-A

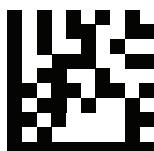


Disable UPC-A

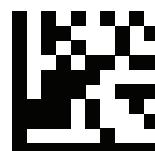


Enable UPC-E

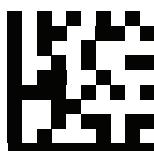


Disable UPC-E

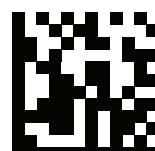


End

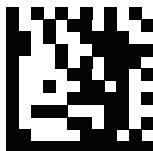


Set

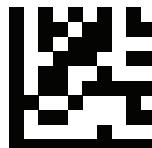


Enable EAN 8

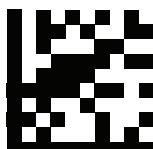


Disable EAN 8

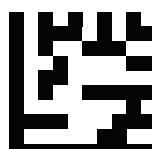

Enable EAN 13

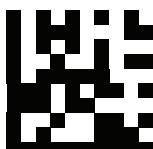


Disable EAN 13

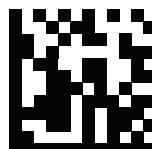


End


Code 128 Prefix

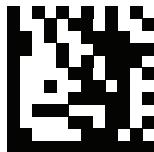


Set

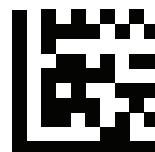


Enable Code 128

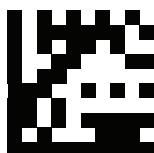


Disable Code 128

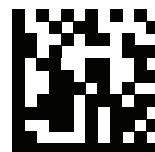


End

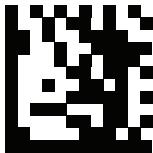Code 39 Prefix


Set

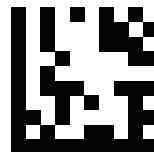

Enable Code 39

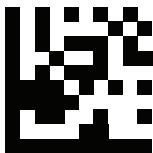


Disable Code 39

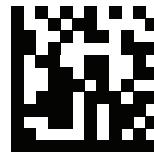


End


Code 93 Prefix

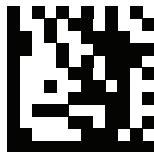


Set

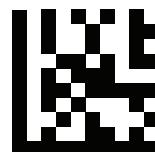


Enable Code 93

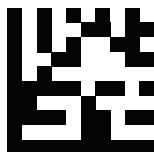


Disable Code 93

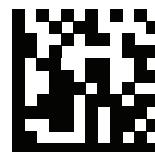


End

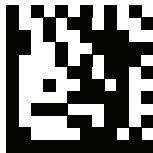Code 32 Prefix


Set

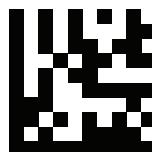

Enable Code 32

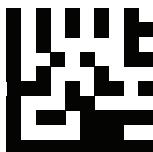


Disable Code 32

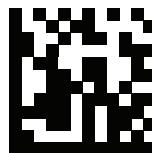


End


Code 11 Prefix

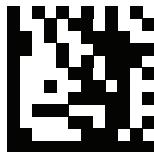


Set

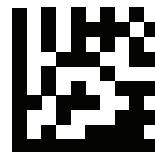

Enable Code 11

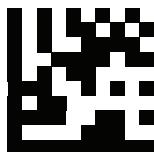


Disable Code 11

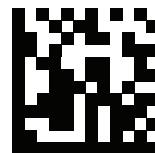


End


Codabar Prefix

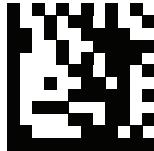


Set

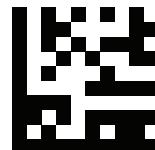

Enable Codabar

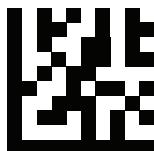


Disable Codabar

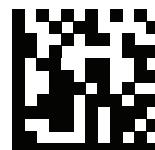


End


Plessey Prefix

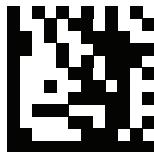


Set

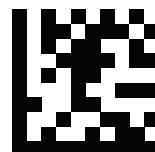

Enable Plessey

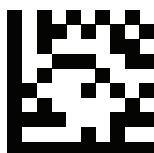


Disable Plessey

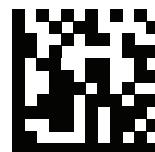


End


MSI Prefix

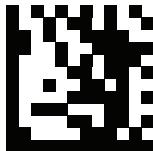


Set

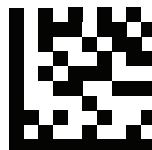

Enable MSI

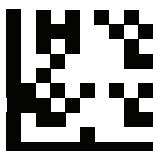


Disable MSI

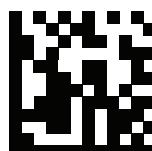


End


Interleaved 2 of 5 Prefix

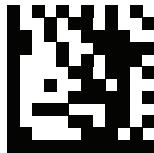


Set

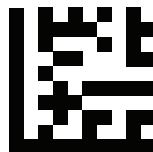


Enable Interleaved 2 of 5

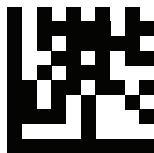


Disable Interleaved 2 of 5

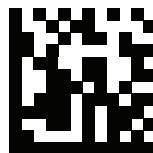


End

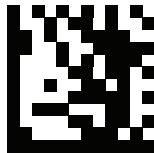IATA 2 of 5 Prefix


Set

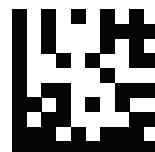

Enable IATA 2 of 5

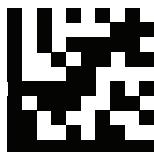


Disable IATA 2 of 5

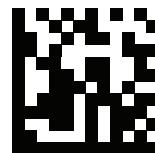


End


Matrix 2 of 5 Prefix

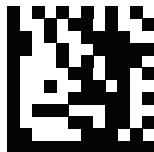


Set

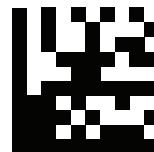


Enable Matrix 2 of 5

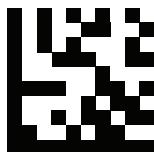


Disable Matrix 2 of 5

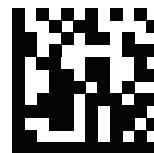


End

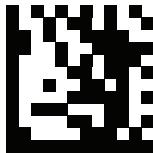Straight 2 of 5 Prefix


Set

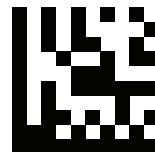

Enable Straight 2 of 5

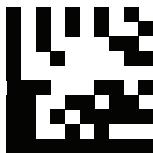


Disable Straight 2 of 5

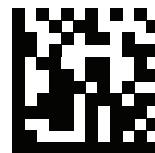


End


RSS 14 Prefix (GS1 DataBar 14 Prefix)

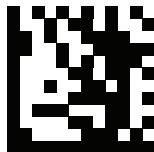


Set

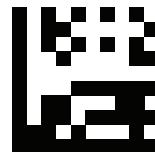


Enable RSS 14 Prefix
(GS1 DataBar 14 Prefix)

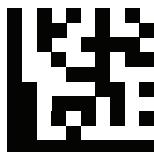




Disable RSS 14 Prefix
(GS1 DataBar 14 Prefix)

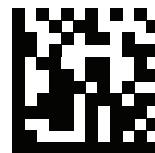

End

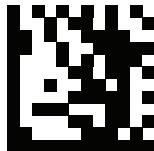
RSS Expanded Prefix (GS1 DataBar Expanded Prefix)

Set

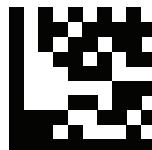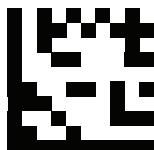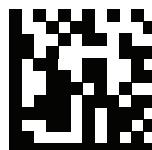
Enable RSS Expanded Prefix
(GS1 DataBar Expanded Prefix)Disable RSS Expanded Prefix
(GS1 DataBar Expanded Prefix)

End


RSS Limited Prefix (GS1 DataBar Limited Prefix)

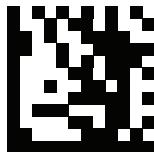


Set

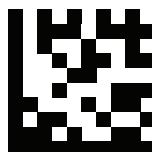

Enable RSS Limited Prefix
(GS1 DataBar Limited Prefix)

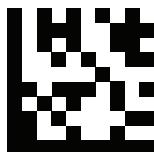


Disable RSS Limited Prefix
(GS1 DataBar Limited Prefix)

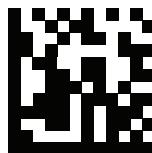


End


Component CC-A Prefix

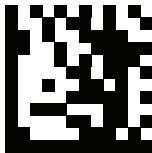


Set

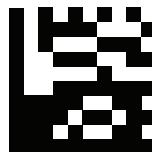

Enable Component CC-A

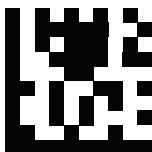


Disable Component CC-A

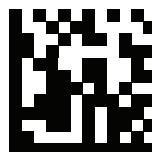


End


Component CC-B Prefix

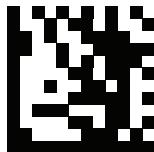


Set

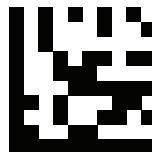


Enable Component CC-B

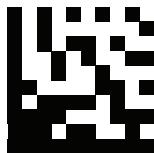


Disable Component CC-B

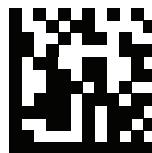


End

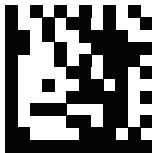Component CC-C Prefix


Set

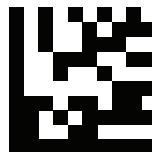

Enable Component CC-C

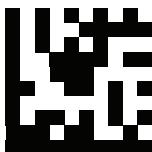


Disable Component CC-C

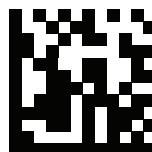


End


PDF 417 Prefix

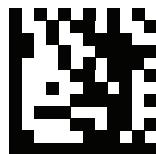


Set

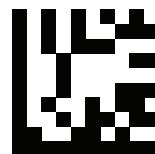

Enable PDF 417

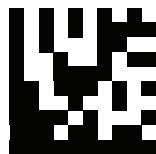


Disable PDF 417

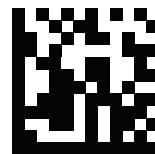


End


Micro PDF 417 Prefix

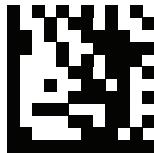


Set

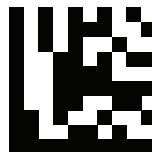

Enable Micro PDF 417

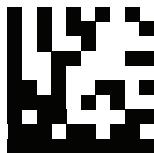


Disable Micro PDF 417

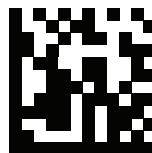


End


Data Matrix Prefix

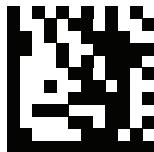


Set

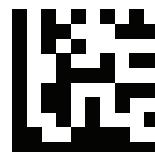

Enable Data Matrix

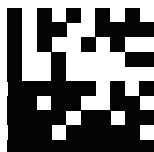


Disable Data Matrix

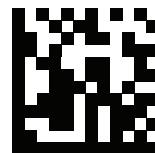


End


QR Prefix

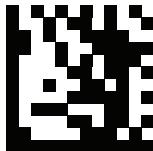


Set

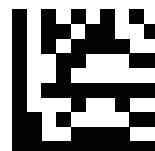

Enable QR Code

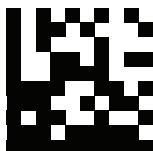


Disable QR Code

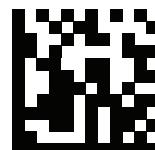


End


Micro QR Prefix

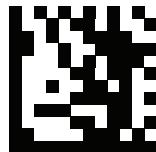


Set

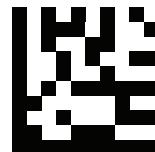

Enable Micro QR

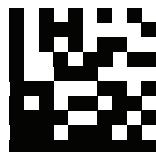


Disable Micro QR

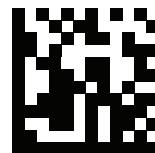


End


Aztec Prefix

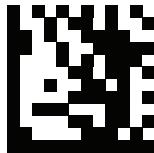


Set

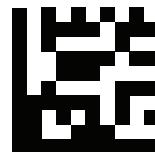

Enable Aztec

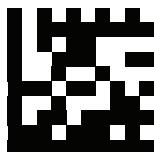


Disable Aztec

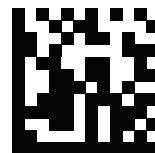


End


MaxiCode Prefix

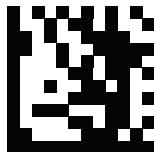


Set

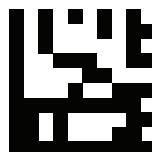

Enable MaxiCode

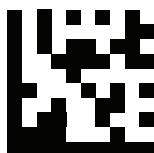

Disable MaxiCode

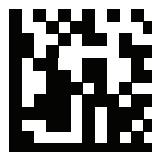

End

Data Editing (Suffix)


Suffix is additional characters that can be sent after the scanned data. Please scan the barcodes in the selection below to set your suffix.

Suffix Set Up Flow


1. Scan Set.
2. Enable barcode type.
3. Scan suffix you would like to add characters within ASCII Table. Up to 4 digits can be added.
4. Scan End.

Ex. If we wish to add “36” as suffix for all barcode type, then follow procedure as below. Scan [Set] to enter setup. Then we select barcode by scanning [Enable All], then we scan [3] as 3 of ASCII HEX and [6] as 6.


All Suffix

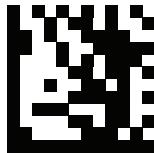


Set

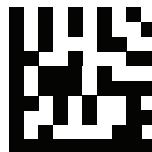


Enable All

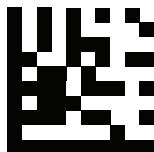


Disable All (Default)

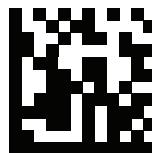


End

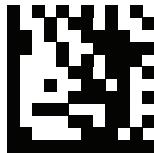UPC-A Suffix


Set

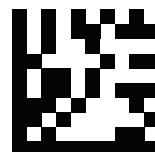

Enable UPC-A

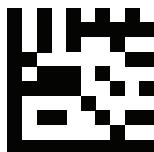


Disable UPC-A

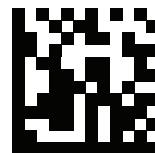


End


UPC-E Suffix

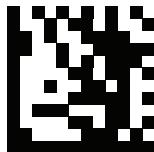


Set

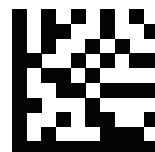


Enable UPC-E

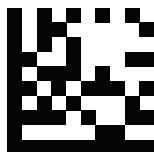


Disable UPC-E

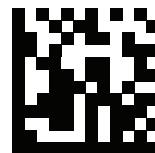


End

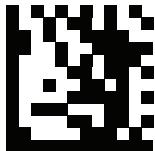EAN 8 Suffix


Set

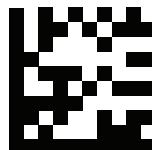

Enable EAN 8

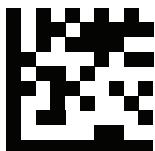


Disable EAN 8

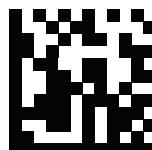

End


EAN 13 Suffix

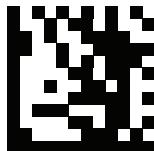


Set



Enable EAN 13

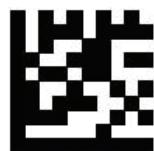


Disable EAN 13

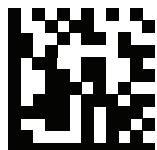


End


Code 128 Suffix

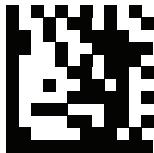


Set

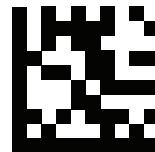

Enable Code 128

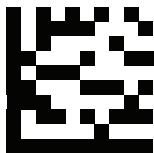


Disable Code 128

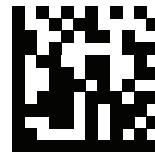


End


Code 39 Suffix

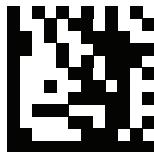


Set

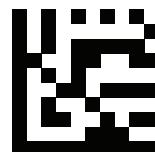

Enable Code 39

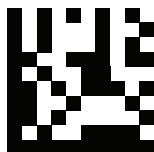


Disable Code 39

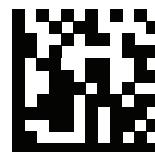


End


Code 93 Suffix

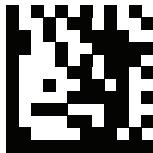


Set

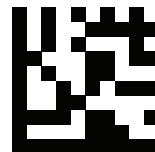

Enable Code 93

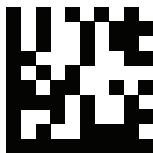


Disable Code 93

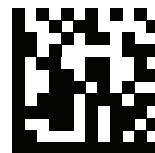


End


Code 32 Suffix

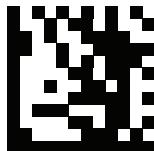


Set

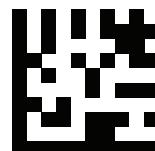


Enable Code 32

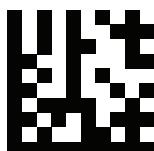


Disable Code 32

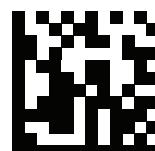


End

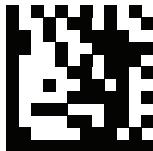Code 11 Suffix


Set

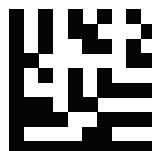

Enable Code 11

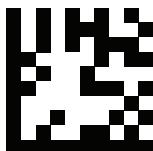


Disable Code 11

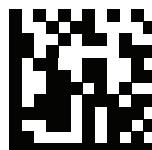


End


Codabar Suffix

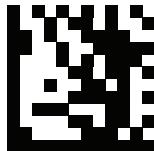


Set

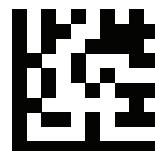

Enable Codabar

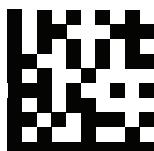


Disable Codabar

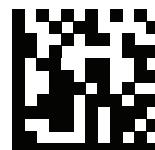


End


Plessey Suffix

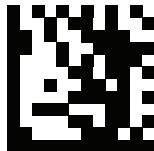


Set

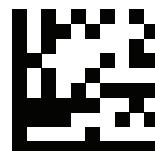

Enable Plessey

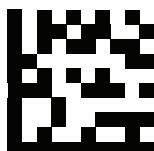


Disable Plessey

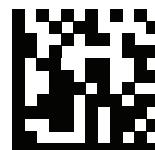


End


MSI Suffix

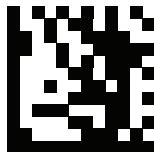


Set

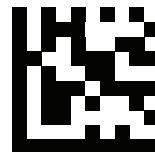


Enable MSI

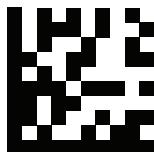


Disable MSI

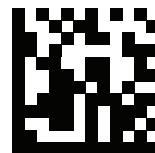


End

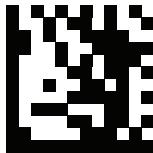Interleaved 2 of 5 Suffix


Set

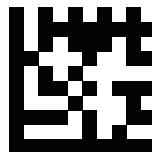

Enable Interleaved 2 of 5

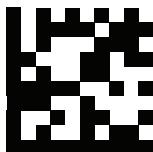


Disable Interleaved 2 of 5

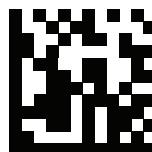


End


IATA 2 of 5 Suffix

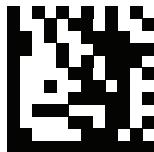


Set

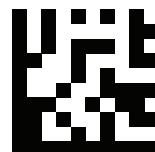


Enable IATA 2 of 5

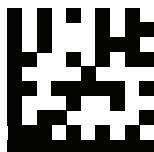


Disable IATA 2 of 5

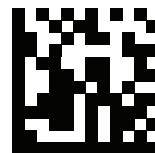


End

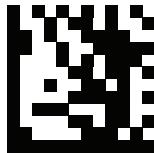Matrix 2 of 5 Suffix


Set

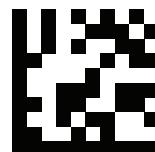

Enable Matrix 2 of 5

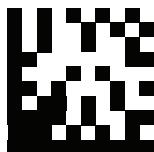


Disable Matrix 2 of 5

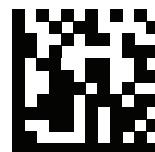


End


Straight 2 of 5 Suffix

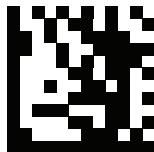


Set

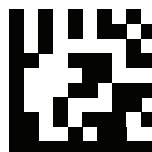


Enable Straight 2 of 5

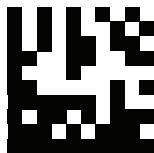




Disable Straight 2 of 5

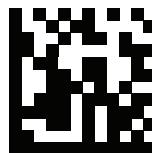

End

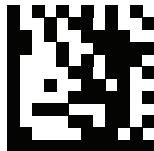
RSS 14 Suffix (GS1 DataBar 14 Suffix)

Set

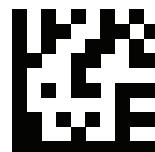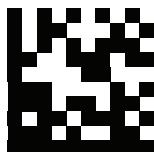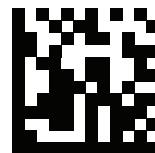
Enable RSS 14 Suffix
(GS1 DataBar 14 Suffix)Disable RSS 14
Suffix (GS1 DataBar 14 Suffix)

End


RSS Expanded Suffix (GS1 DataBar Expanded Suffix)

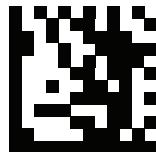


Set

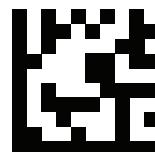


Enable RSS Expanded
Suffix (GS1 DataBar Expanded Suffix)

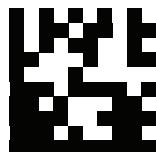




Disable RSS Expanded
Suffix (GS1 DataBar Expanded Suffix)

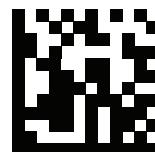

End

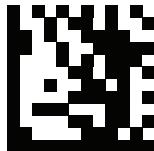
RSS Limited Suffix (GS1 DataBar Limited Suffix)

Set

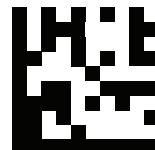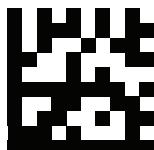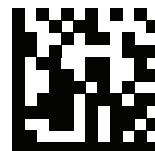
Enable RSS Limited
Suffix (GS1 DataBar Limited Suffix)Disable RSS Limited
Suffix (GS1 DataBar Limited Suffix)

End


Component CC-A Suffix

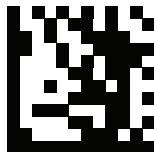


Set

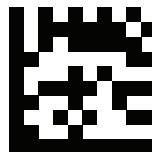


Enable Component CC-A

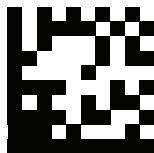


Disable Component CC-A

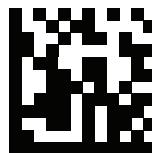


End

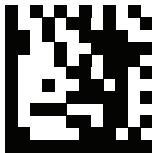Component CC-B Suffix


Set

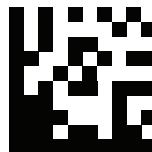

Enable Component CC-B

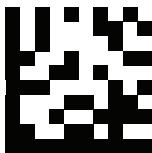


Disable Component CC-B

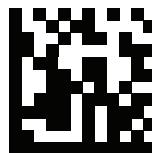


End


Component CC-C Suffix

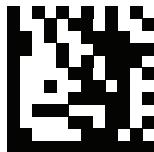


Set

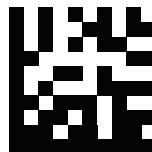


Enable Component CC-C

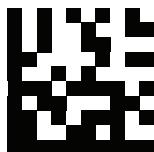


Disable Component CC-C

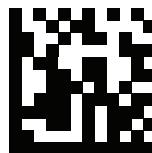


End

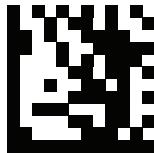PDF-417 Suffix


Set

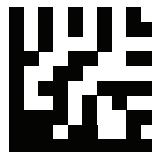

Enable PDF417

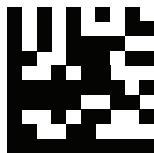


Disable PDF417

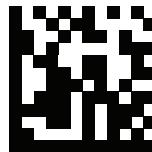


End


Micro PDF-417 Suffix

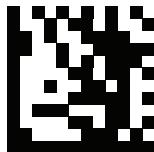


Set

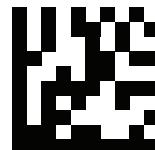

Enable Micro PDF417

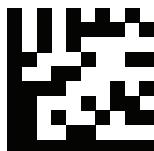


Disable Micro PDF417

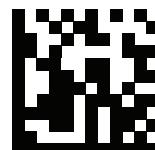


End


Data Matrix Suffix

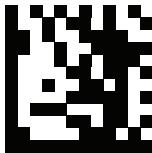


Set

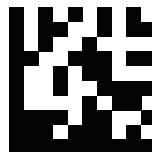

Data Matrix Enable

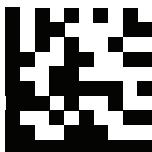


Data Matrix Disable

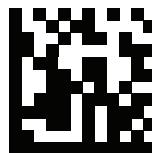


End


QR Code Suffix

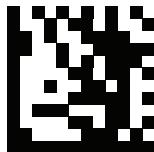


Set

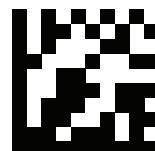


QR Code Enable

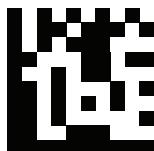


QR Code Disable

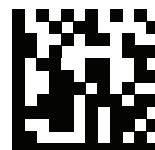


End

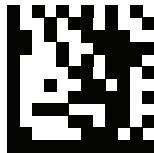Micro QR Suffix


Set

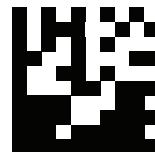

Micro QR Enable

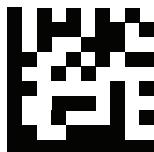


Micro QR Disable

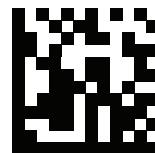


End


Aztec Suffix

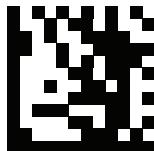


Set

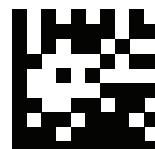

Aztec Enable

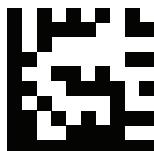


Aztec Disable

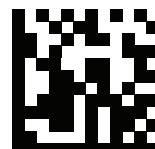


End


MaxiCode Suffix

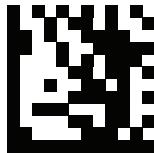


Set

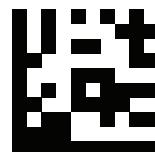

MaxiCode Enable

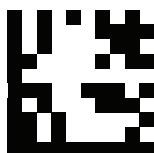

MaxiCode Disable

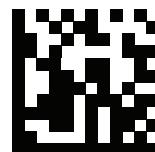

End


Data Editing (Truncate/Return)

Truncate/Return Commands

1. Return the leftmost characters: Specify the number of leftmost characters you want returned.
2. Truncate the leftmost characters: Specify the number of leftmost characters you want deleted.
3. Return the Rightmost characters: Specify the number of rightmost characters you want returned.
4. Truncate the Rightmost characters: Specify the number of rightmost characters you want deleted.
5. Return the Middle characters: Returns the middle characters. The middle is found by scanning from left to right, and parameters determine where the middle begins and ends
6. Truncate the Middle characters: Delete the middle characters. The middle is found by scanning from left to right, and parameters determine where the middle begins and ends

Set Up Flow

1. Scan Set to set up.
2. Enable barcode type.
3. Scan one of Truncate/Return Command.
4. Select lengths using the numeric bar codes in ASCII Code Table.
5. Scan End.

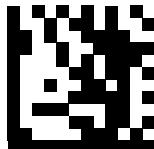Set All Symbologies Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

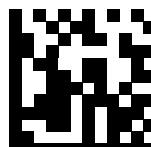

End

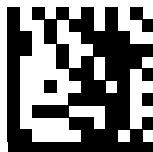

Set




Return middle




Truncate middle



Disable All (Default)

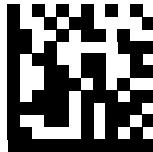

End

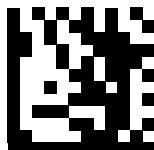Set UPC-A Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost




Truncate rightmost

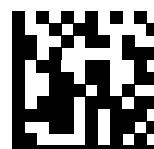

End

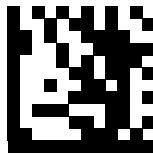

Set

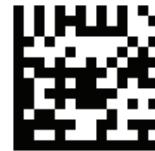


Return middle




Truncate middle



Disable (Default)

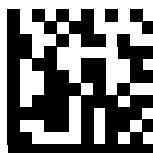

End

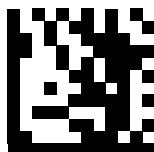Set UPC-E Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

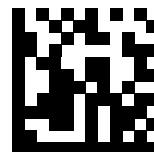

End

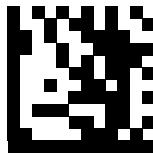

Set




Return middle




Truncate middle



Disable (Default)

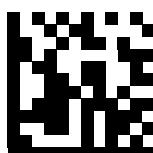

End

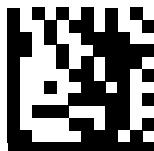Set EAN-8 Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

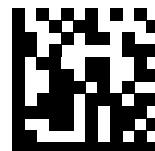

End

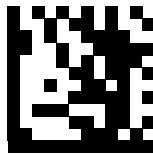

Set




Return middle




Truncate middle



Disable (Default)

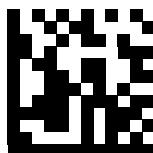

End

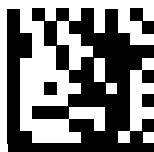Set EAN 13 Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

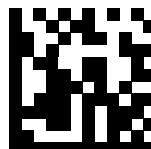

End

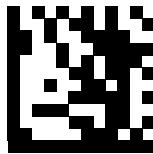

Set




Return middle




Truncate middle



Disable (Default)

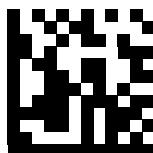

End

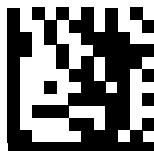Set Code 128 Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

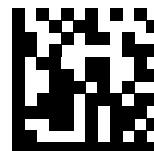

End

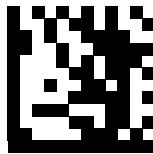

Set




Return middle




Truncate middle



Disable (Default)

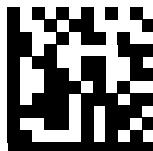

End

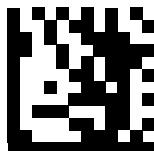Set Code 39 Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

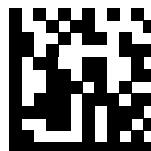

End

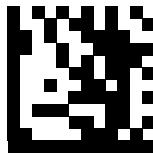

Set




Return middle




Truncate middle



Disable (Default)

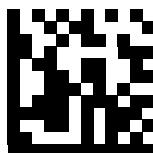

End

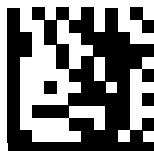Set Code 93 Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost




Truncate rightmost

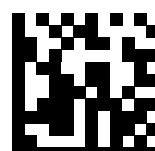

End

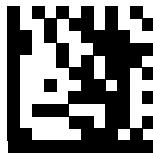

Set

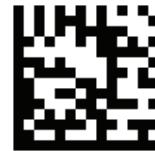


Return middle




Truncate middle



Disable (Default)

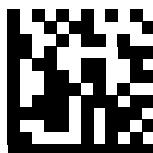

End

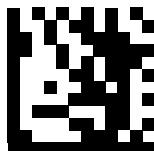Set Code 32 Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

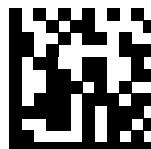

End

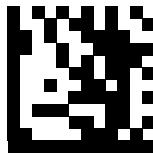

Set




Return middle




Truncate middle



Disable (Default)

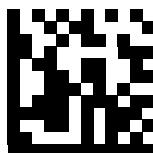

End

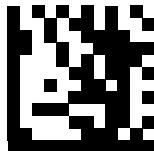Set Code 11 Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

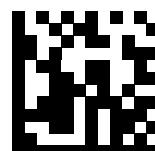

End

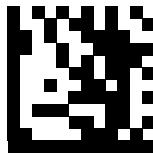

Set




Return middle




Truncate middle



Disable (Default)

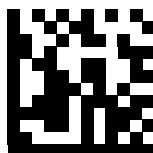

End

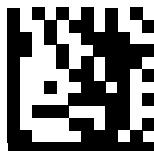Set Codabar Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

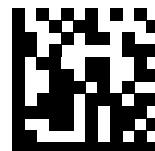

End

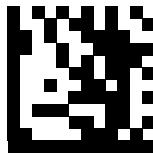

Set




Return middle




Truncate middle



Disable (Default)

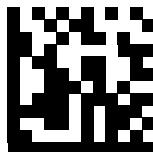

End

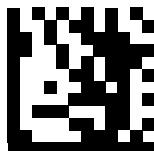Set Plessey Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

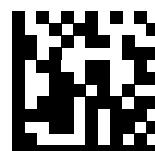

End

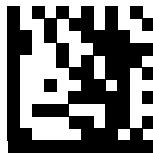

Set




Return middle




Truncate middle



Disable (Default)

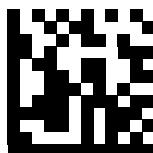

End

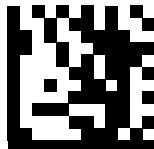Set MSI (Modified Plessy) Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

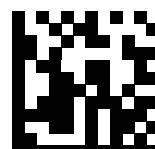

End

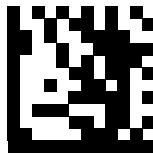

Set




Return middle




Truncate middle



Disable (Default)

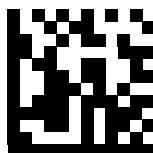

End

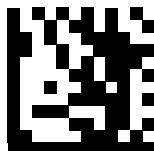Set Interleaved 2 of 5 Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

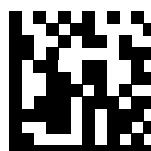

End

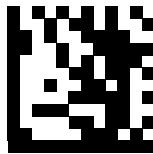

Set




Return middle




Truncate middle



Disable (Default)

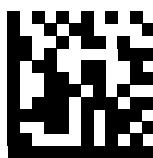

End

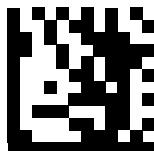Set IATA 2 of 5 Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

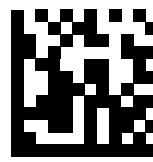

End

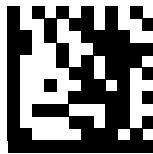

Set




Return middle




Truncate middle



Disable (Default)

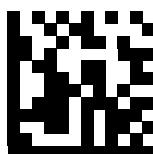

End

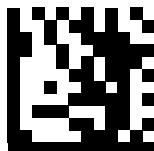Set Matrix 2 of 5 Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

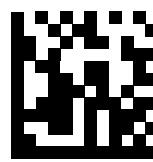

End

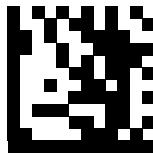

Set




Return middle




Truncate middle



Disable (Default)

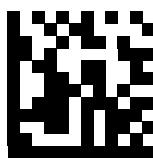

End

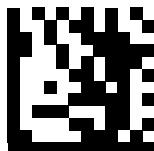Set Straight 2 of 5 Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

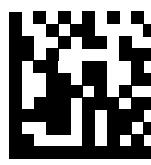

End

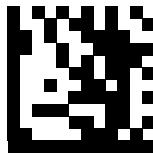

Set




Return middle




Truncate middle



Disable (Default)

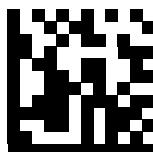

End

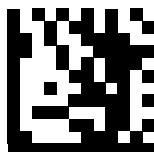Set RSS 14 (GS1 DataBar) Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

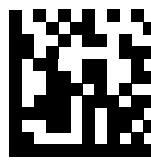

End

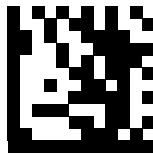

Set




Return middle




Truncate middle



Disable (Default)

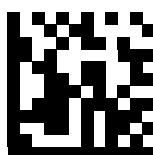

End

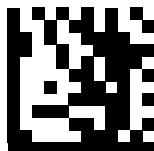Set RSS Expanded (GS1 DataBar Expanded) Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

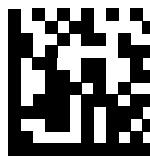

End

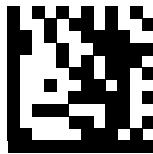

Set




Return middle




Truncate middle



Disable (Default)

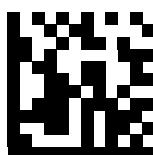

End

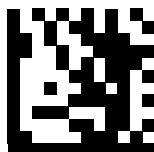Set RSS Limited (GS1 DataBar Limited) Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

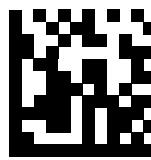

End

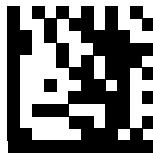

Set




Return middle




Truncate middle



Disable (Default)

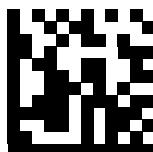

End

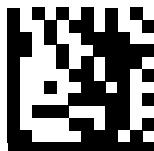Set Component CC-A Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

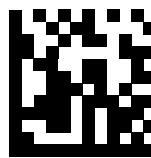

End

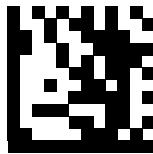

Set




Return middle




Truncate middle



Disable (Default)

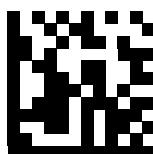

End

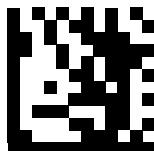Set Component CC-B Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

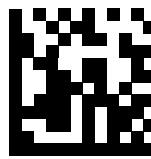

End

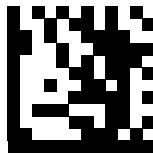

Set




Return middle




Truncate middle



Disable (Default)

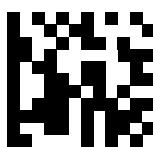

End

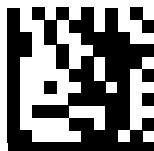Set Component CC-C Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

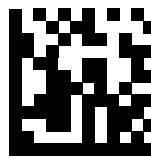

End

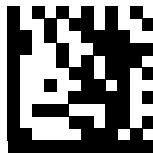

Set




Return middle




Truncate middle



Disable (Default)

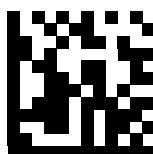

End

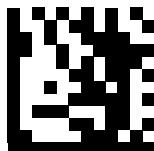Set PDF 417 Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

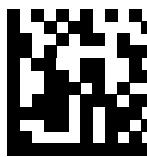

End

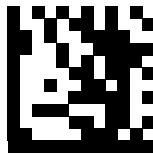

Set




Return middle




Truncate middle



Disable (Default)

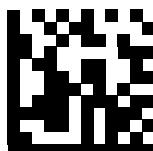

End

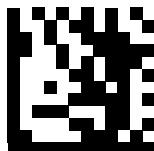Set Micro PDF 417 Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

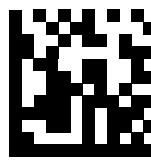

End

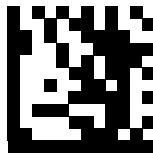

Set




Return middle




Truncate middle



Disable (Default)

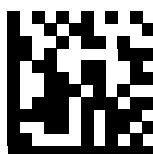

End

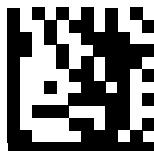Set Data Matrix Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

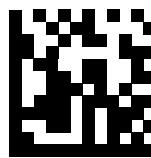

End

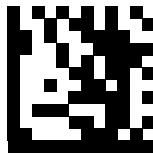

Set




Return middle




Truncate middle



Disable (Default)

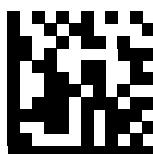

End

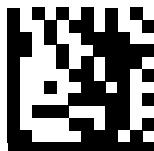Set QR Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

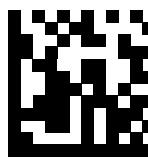

End

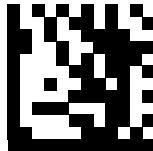

Set




Return middle




Truncate middle



Disable (Default)

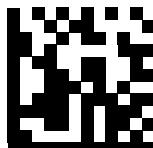

End

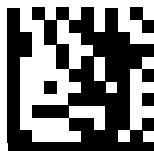Set Micro QR Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

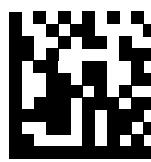

End

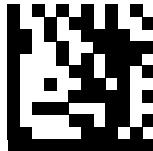

Set




Return middle




Truncate middle



Disable (Default)

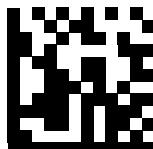

End

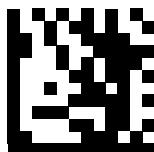Set Aztec Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

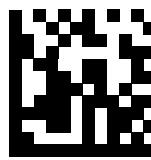

End

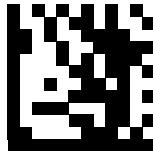

Set




Return middle




Truncate middle



Disable (Default)

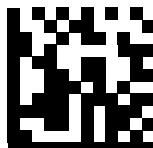

End

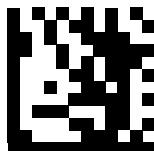Set MaxiCode Truncate/Return

Set



Return leftmost




Truncate leftmost




Return rightmost



Truncate rightmost

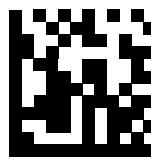

End

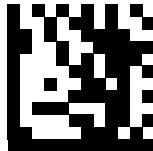

Set




Return middle



Truncate middle



Disable (Default)

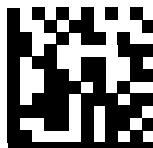

End

Code Settings

Set Lengths for Codes

- One Discrete Length

Select this option to decode the symbol containing a selected length.
Select the length using the numeric bar codes in ASCII Code Table.

Example 1:

To decode Interleaved 2 of 5 symbols with 8 characters:

- a. scan Set to set up
- b. scan Interleaved 2 of 5 One Discrete Length
- c. scan 8 in ASCII Code Table
- d. scan End to confirm the setup

Example 2:

To decode Interleaved 2 of 5 symbols with 12 characters:

- a. scan Set to set up
- b. scan Interleaved 2 of 5 One Discrete Length
- c. scan scan 1 followed by 2 in ASCII Code Table
- d. scan End to confirm the setup

- Two Discrete Lengths

Select this option to decode the symbol containing either of two selected lengths.
Select lengths using the numeric bar codes in ASCII Code Table.

Example:

To decode Code 128 symbols containing either 8 or 14 characters

- a. scan Set to set up
- b. scan Code 128 Two Discrete Length
- c. scan 0, 8, 1, and then 4 in ASCII Code Table
- d. scan End to confirm the setup

- Length Within Range

Select this option to decode the symbol with a specific length range.
Select lengths using numeric bar codes in ASCII Code Table.

Example:

To decode Codabar symbols containing between 7 and 8 characters,


- a. scan Set to set up
- b. scan Codabar Length Within Range
- c. scan 0, 7, 0, and then 8 in ASCII Code Table
- d. scan End to confirm the setup

- Any Length

Select this option to decode the symbol containing any number of characters within the digital scanner's capability.

Example:

- a. scan Set to set up
- b. scan Matrix 2 of 5 Any Length
- c. scan End to confirm the setup

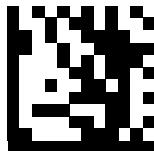Set Lengths for Code 128

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

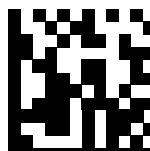

End

Set Lengths for Code 39

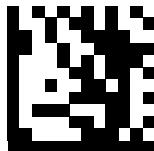


Set




One Discrete Length




Two Discrete Lengths

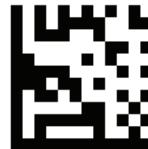

Length Within Range

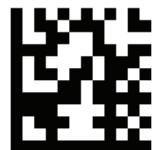


Any Length (Default)

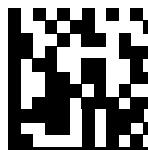

End

Set Lengths for Code 93

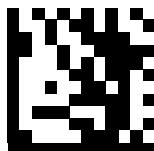

Set




One Discrete Length




Two Discrete Lengths



Length Within Range

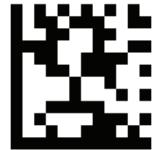


Any Length (Default)

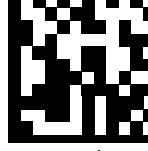


End

Set Lengths for Codabar

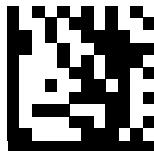

Set

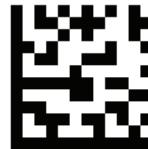

One Discrete Length




Two Discrete Lengths




Length Within Range



Any Length (Default)

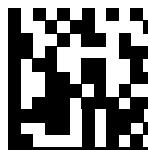

End

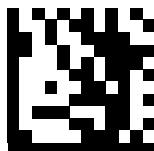Set Lengths for Interleaved 2 of 5


Set



One Discrete Length




Two Discrete Lengths

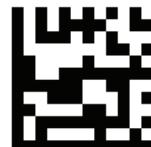

Length Within Range




Any Length (Default)

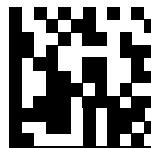

End

Set Lengths for Code 11

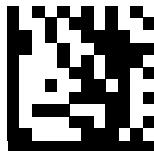

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

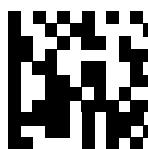

End

Set Lengths for MSI

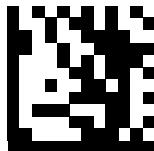

Set



One Discrete Length




Two Discrete Lengths



Length Within Range




Any Length (Default)

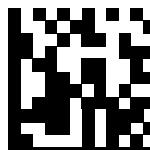

End

Set Lengths for Matrix 2 of 5

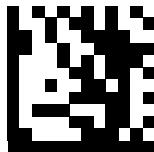


Set



One Discrete Length




Two Discrete Lengths

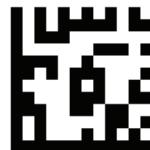

Length Within Range




Any Length (Default)

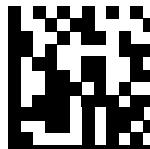

End

Code Identifiers

Scan the following barcodes to set symbology Identifiers.

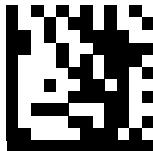


Set




Disable Code ID (Default)



Enable factory standard ID

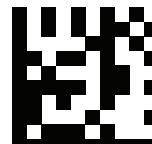

Enable AIM ID

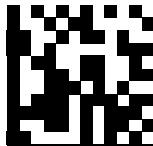


End

Code Identifiers Table

Symbology	Factory Standard	AIM
UPC-A	A]E
UPC-E	E]E
EAN 8	FF]E
EAN 13	F]E
Code 128	K]C
Code 39	M]A
Code 93	L]G
Code 32	M]X
Code 11	O]H
Codabar	N]F
Plessey	P]P
MSI / Plessey	a]M
Interleaved 2 of 5	I]I
IATA 2 of 5	Z]R
Matrix 2 of 5	G]X
Straight 2 of 5	S]S
Pharmacode	H]X
RSS 14 (GS1 DATABAR 14)	RS]e
RSS Expanded (GS1 DataBar Expanded)	RX]e
RSS Limited (GS1 DataBar Limited)	RL]e
Component CC-A	m]e
Component CC-B	n]e
Component CC-C	i]e
PDF417	r]L
Micro PDF417	s]L
Data Matrix	t]d
QR	u]Q
Micro QR	j]Q
Aztec	e]Z
MaxiCode	v]U

Keyboard Caps Lock State

Scan a barcode below to turn Caps on or off.

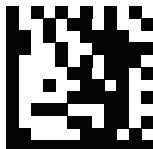


Set




Caps Lock Off (Default)




Caps Lock On

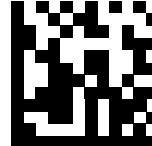

End

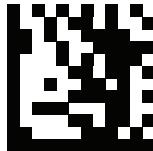


Set

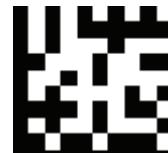


Alphabet always upper case



Alphabet always lower case

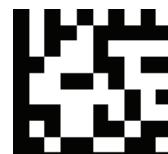


Override

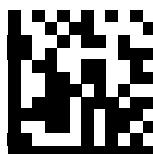

End

Function Key Mapping

Scan the following barcodes to enable or disable Function Key Mapping.

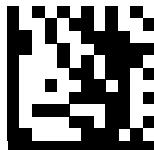


Set



Disable Function Key Mapping (Default)



Enable Function Key Mapping

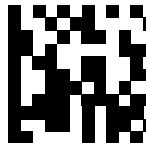


End

ASCII Code


For parameters requiring specific numeric values, scan the appropriately numbered barcode(s).




Enter

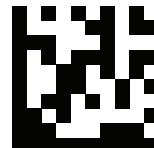


!

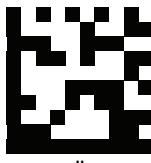


"

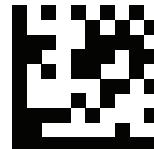


#

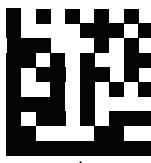


\$

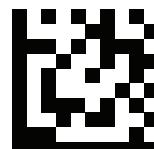


Space

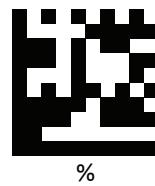


%

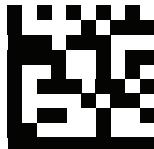


&

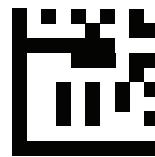


-

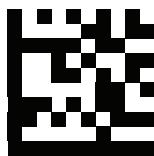


(

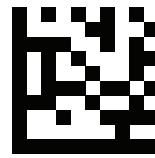







)

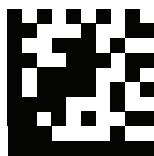


*

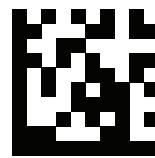


+

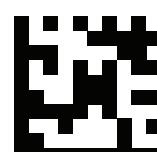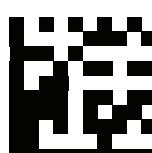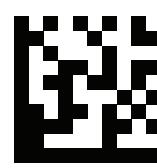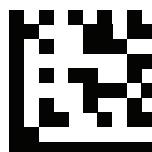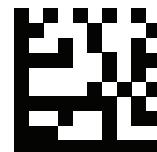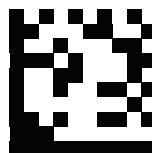


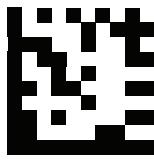


<

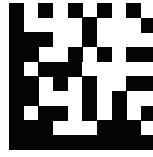


=

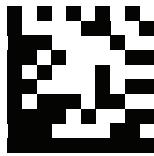


>

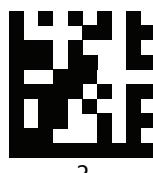


?

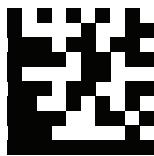


@

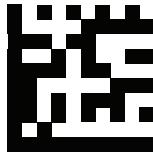


0

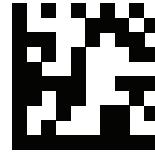


1

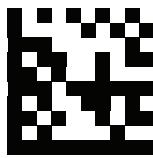


2

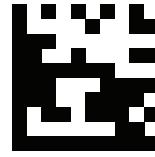


3

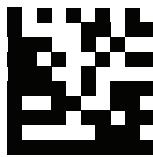


4

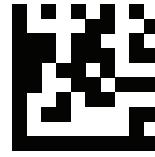


5

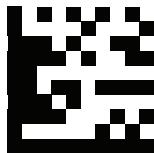


6

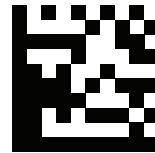


7

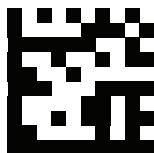

8

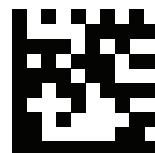


9

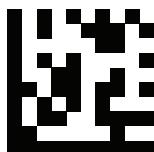


A

(Function Key
Mapping: Ctrl+a)

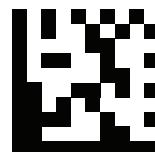


B


(Function Key
Mapping: Ctrl+b)

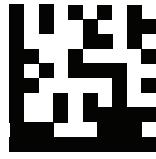


C
(Function Key
Mapping: Ctrl+c)

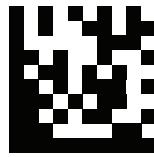


D
(Function Key
Mapping: Ctrl+d)

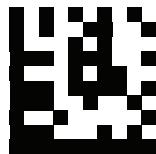


E
(Function Key
Mapping: Ctrl+e)

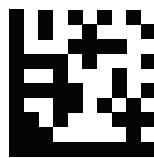

F
(Function Key
Mapping: Ctrl+f)

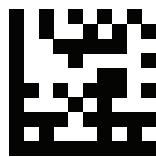


G
(Function Key
Mapping: Ctrl+g)

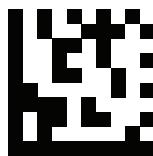


H

(Function Key
Mapping: Ctrl+h)

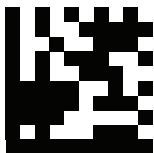


I

(Function Key
Mapping: Ctrl+i)

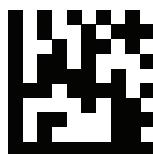


J

(Function Key
Mapping: Ctrl+j)

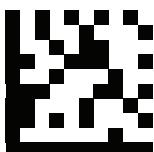


K

(Function Key
Mapping: Ctrl+k)

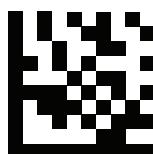


L


(Function Key
Mapping: Ctrl+l)

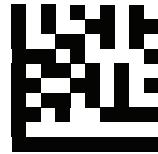


M
(Function Key
Mapping: Ctrl+m)

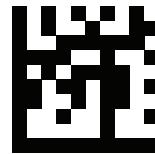


N
(Function Key
Mapping: Ctrl+n)

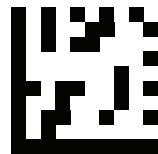


O
(Function Key
Mapping: Ctrl+o)

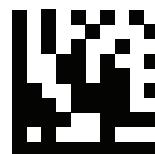

P
(Function Key
Mapping: Ctrl+p)

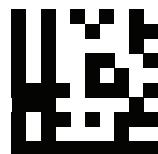


Q
(Function Key
Mapping: Ctrl+q)

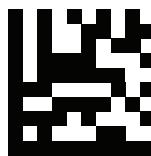


R

(Function Key
Mapping: Ctrl+r)

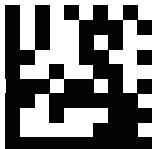


S

(Function Key
Mapping: Ctrl+s)

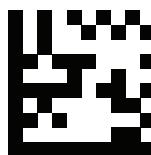


T

(Function Key
Mapping: Ctrl+t)

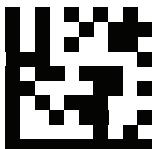


U

(Function Key
Mapping: Ctrl+u)

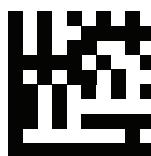


V

(Function Key
Mapping: Ctrl+v)

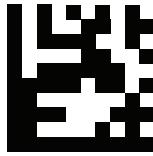


W

(Function Key
Mapping: Ctrl+w)

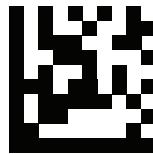


X

(Function Key
Mapping: Ctrl+x)

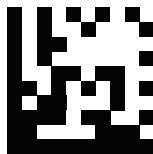


Y

(Function Key
Mapping: Ctrl+y)

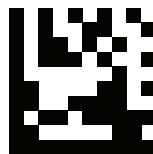


Z


(Function Key
Mapping: Ctrl+z)

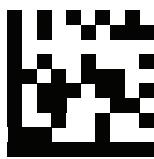


a

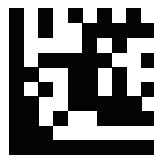


b

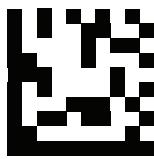


c

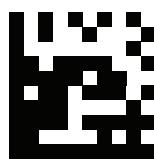


d

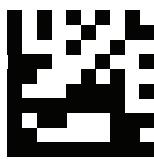


e

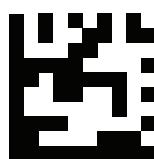


f

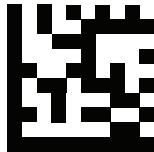


g

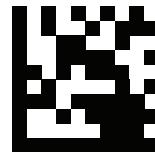


h

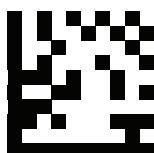


i

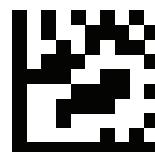


j

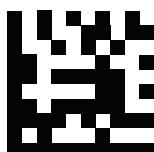


k

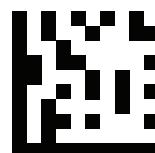


l

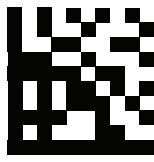


m

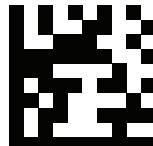


n

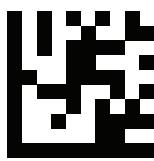


o

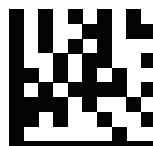


p

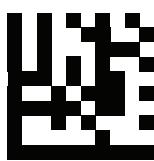


q

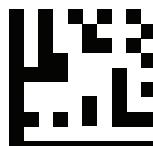


r

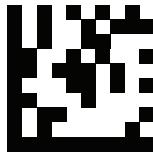


S

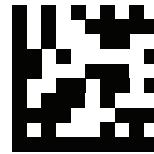


t

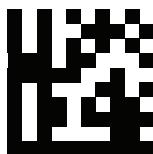


u

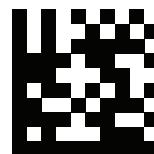


v

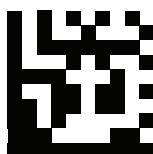


w

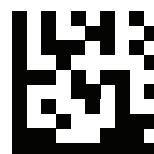

x

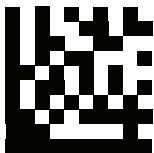

y

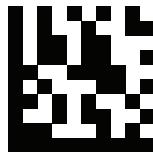

z



Insert



Delete



Home



End



Up arrow



Down arrow



Left arrow




Right arrow



Tab



Backspace

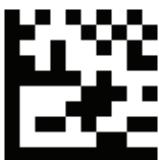

Shift



ESC



Page up



Page down



F1



F2



F3



F4



F5



F6




F7



F8



F9

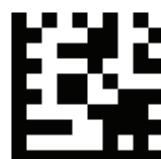

F10



F11



F12

JavaPOS Driver V2.00 for Win32/Win64

JavaPOS Version

Our JavaPOS driver now is compatible with JavaPOS1.7.

Install the Java2 Runtime Environment

The JRE is Java's virtual machine that allows for applications to run on the host computer. To be able to run the JavaPOS application, you need a 1.7 version JRE. Ignore the following steps if you already have a JavaPOS1.7 or a later version in your host computer.

- Go to <http://java.sun.com>, and select this version of Java Runtime Environment.
- Install the program following the instructions.

Install the Service Object and JavaPOS files



In the “\Driver” folder, there are two files: ZbtJavapos.jar and jpos.xml. Please include ZbtJavapos.jar at your CLASSPATH and also copy the related “JPosEntry” option from the jpos.xml to your application’s jpos.xml.

How to use RS232 scanner with JavaPOS Driver

Install the Java RXTXcomm API

In the \RXTXcomm folder, there are four files: rtxSerial.dll , rtxParallel.dll, and RXTXcomm.jar. Please do the following steps to install the library.

1. Copy rtxSerial.dll and rtxParallel.dll to C:\Windows\system32.
2. Copy RXTXcomm.jar to your <JRE Install Folder>\lib directory.

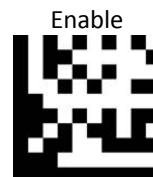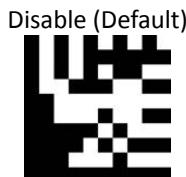

Use barcodes to configure the Handheld scanner

JavaPOS configuration barcodes:

Start of Configuration



RS-232



JPOS Enable



End of Configuration



Running the JavaPOS Test utility

Please run the test application POStest.sh to evaluate your installation.

How to use JavaPOS driver at your application

1. Add “ZbtJavaPos.jar” from the “\Driver” folder to the CLASSPATH and copy the related “JPosEntry” option from the “**jpos.xml**”.
2. Modify the jpos.xml based on your COM Port
3. Example of jpos.xml file content

```
<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
           "jpos/res/jcl.dtd">
<JposEntries>
<!--Saved by JavaPOS jpos.config/loader (JCL) version 2.2.0 on 2010/3/11 10:16-->

<JposEntry logicalName="Z3172P">
    <creation factoryClass="com.zbt.jpos.ZbtJposServiceInstanceFactory"
serviceClass="com.zbt.jpos.ScannerService"/>
    <vendor name="" url="" />
    <jpos category="Scanner" version="1.7" />
    <product description="Scanners" name="Scanner" url="" />

    <!--Other non JavaPOS required property (mostly vendor properties and bus specific
properties i.e. RS232 )-->
    <prop name="deviceType" type="String" value="2D" />
    <prop name="deviceBus" type="String" value="RS232" />
    <prop name="baudRate" type="String" value="9600" />
    <prop name="parity" type="String" value="None" />
    <prop name="portName" type="String" value=" COM1" />
    <prop name="flowControl" type="String" value="None" />
    <prop name="stopBits" type="String" value="1" />
    <prop name="dataBits" type="String" value="8" />
</JposEntry>

<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
           "jpos/res/jcl.dtd">
<JposEntries>

</JposEntries>
```

Note: The default baud rate : 2D scanner =9600

How to use USB scanner with JavaPOS Driver

Configuring the Scanner via barcodes:

- Scan the barcodes in the sequence below to configure the scanner to usb-serial mode.

JavaPOS configuration bar codes:


Start of Configuration



USB Virtual COM Port



JPOS Enable

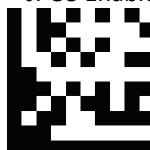

End of Configuration



Install the Java RXTXcomm API

In the \RXTXcomm folder, there are four files: rtxSerial.dll , rtxParallel.dll, and RXTXcomm.jar. Please do the following steps to install the library.

1. Copy rtxSerial.dll and rtxParallel.dll to C:\Windows\system32
2. Copy RXTXcomm.jar to your <JRE Install Folder>\lib directory.

Running the JavaPOS Test utility

Please run the test application to evaluate your installation.

How to Use JavaPOS Driver at your application

1. In the “\Driver” folder, copy “**ZbtJavaPos.jar**” and “**jpos.xml**” to your work folder.
2. Modify the jpos.xml .
3. Example of jpos.xml file content

```
<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
           "jpos/res/jcl.dtd">
<JposEntries>
<!--Saved by JavaPOS jpos.config/loader (JCL) version 2.2.0 on 2010/3/11 10:16-->

<JposEntry logicalName="Z3172P">
    <creation factoryClass="com.zbt.jpos.ZbtJposServiceInstanceFactory"
serviceClass="com.zbt.jpos.ScannerService"/>
    <vendor name="" url="" />
    <jpos category="Scanner" version="1.7" />
    <product description="Scanners" name="Scanner" url="" />

    <!--Other non JavaPOS required property (mostly vendor properties and bus specific properties i.e.
RS232 )-->
    <prop name="deviceType" type="String" value="2D" />
    <prop name="deviceBus" type="String" value="RS232" />
    <prop name="baudRate" type="String" value="115200" />
    <prop name="parity" type="String" value="None" />
    <prop name="portName" type="String" value=" COM56" />
    <prop name="flowControl" type="String" value="None" />
    <prop name="stopBits" type="String" value="1" />
    <prop name="dataBits" type="String" value="8" />
</JposEntry>

<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE JposEntries PUBLIC "-//JavaPOS//DTD//EN"
           "jpos/res/jcl.dtd">
<JposEntries>
</JposEntries>
```