

The Steps for updating the firmware of Z-9000

1. Power off the Z-9000 unit.
2. Press 8 and the Power key at the same time to enter Program Manager.




3. Use the up/down arrow keys to select "1. Download " and press Enter (blue key) to enter the Download screen.




4. Select an empty slot to store the file and press Enter. Please remember the slot number you selected for later use.
5. The “Please Plug The USB Cable” screen appears. Connect the cradle to the computer and plug in the power adapter; place the unit in the cradle when ready. Please install the Z-9000 driver if necessary.




6. On your computer, please open the Boot Load Utility (default path: Start>All Programs>ZEBEX>ZAC>Boot Load Utility).
7. Check the Device Manager on your computer for the COM port Z-9000 is using.

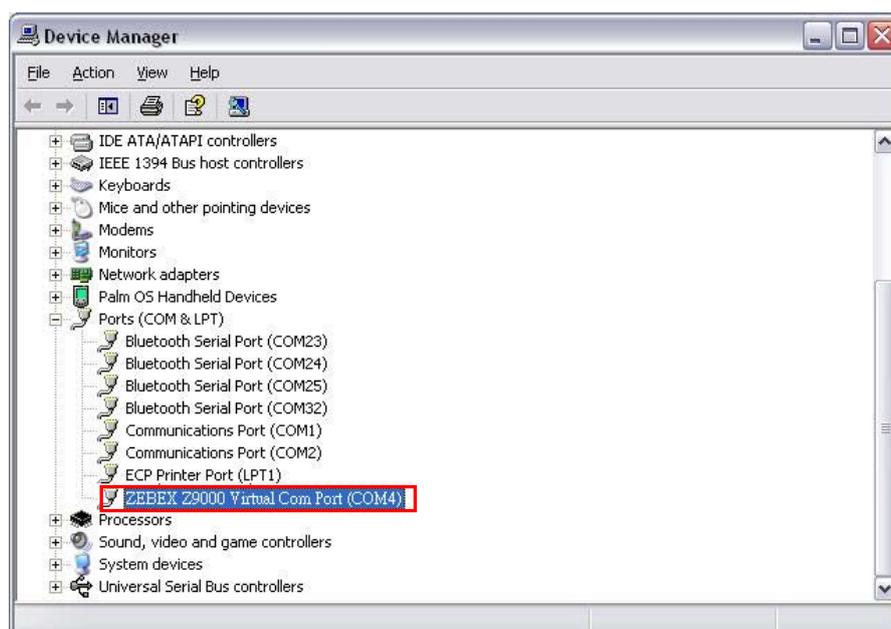


8. Select the same COM port the Z-9000 is using in Boot Load Utility.

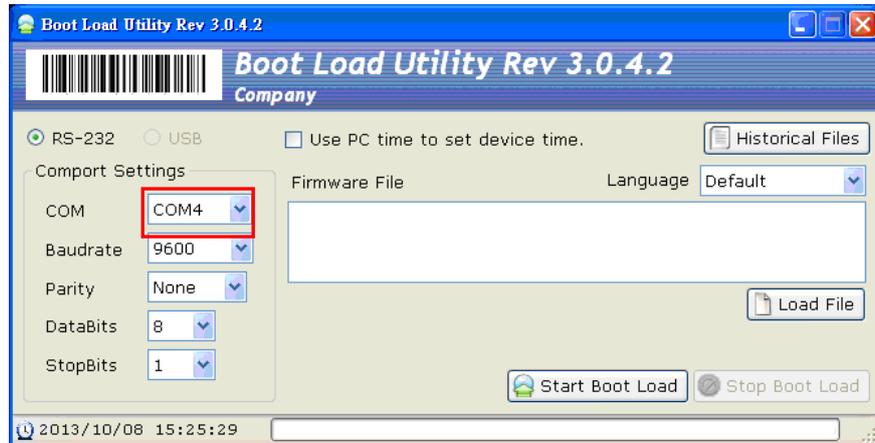


9. Select "Load File" then select the Z-9000 firmware file stored on your computer.

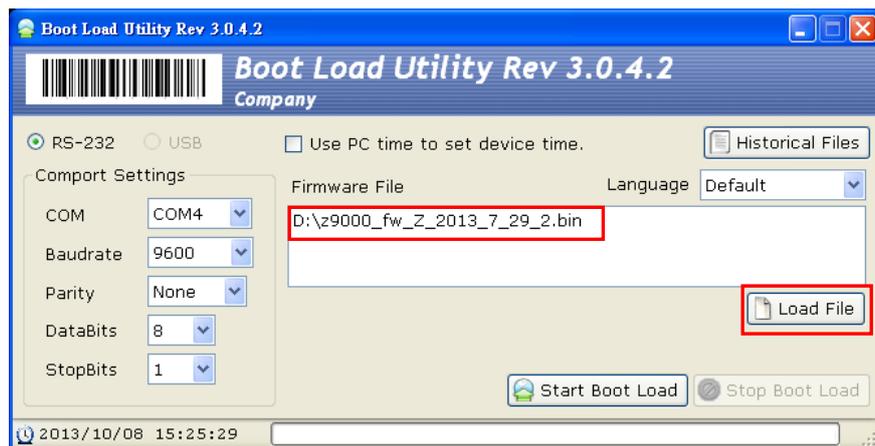

10. Select "Start Boot Load" to transfer the file to Z-9000. You will hear a beep sound when the transfer is done. The Download screen appears on the Z-9000 screen. Press ESC to exit the screen when ready.

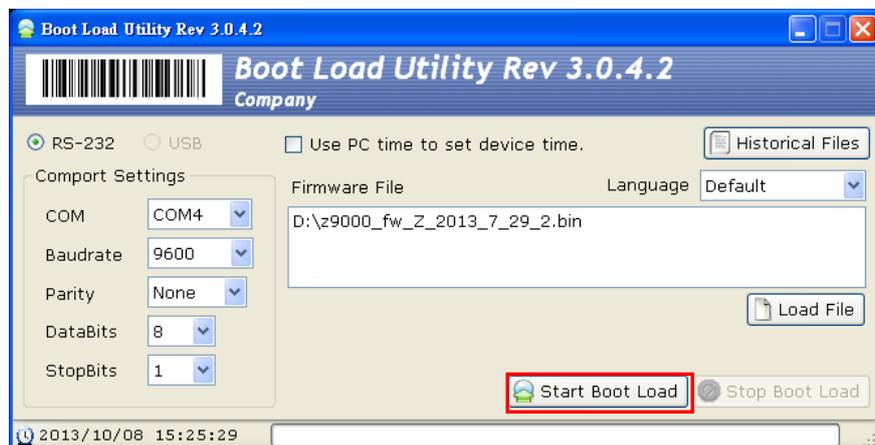

Select "2. Activate" then select the file slot you selected in step 4 and press enter.

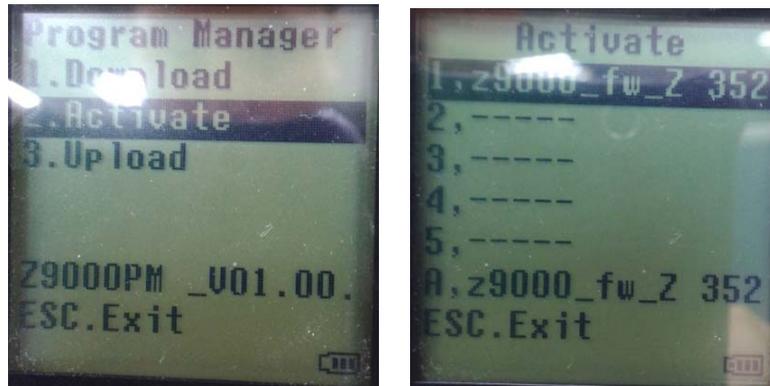

11. Press FN and 3 at the same time to activate the file.



12. A message appears on the screen "Are you sure to activate file?" Use the up/down arrow keys to select "YES" then press enter to begin update.

13. The screen will return to the Activate screen when the update is done.

Upgrade Warning

- Incorrect operation may cause dysfunction or damage to the unit.
- Please choose the correct firmware file.
- Do not remove power or reboot the system until the firmware upgrade procedure is complete to avoid possible damage to the unit.