

# Programming Guide

★ Advanced Miniature CCD / Scan Engine





## Revision History

Changes to the original manual are listed below:

| <b>Version</b> | <b>Date</b>       | <b>Description of Version</b>                    |
|----------------|-------------------|--|
| 1.0            | October 21, 2010  | Initial release                                  |
| 1.1            | February 17, 2011 | Added Power save mode and Blink mode selections. |

## Important Notice

No warranty of any kind is made in regard to this material, including, but not limited to, implied warranties of merchantability or fitness for any particular purpose. We are not liable for any errors contained herein nor for incidental or consequential damages in connection with furnishing, performance or use of this material. We shall be under no liability in respect of any defect arising from fair wear and tear, willful damage, negligence, abnormal working conditions, failure to follow the instructions and warnings, or misuse or alteration or repair of the products without written approval. No part of this document may be reproduced, transmitted, stored in a retrieval system, transcribed, or translated into any human or computer or other language in any form or by any means electronic, mechanical, magnetic, optical, chemical, biological, manual or otherwise, except for brief passages which may be quoted for purposes of scholastic or literary review, without express written consent and authorization. We reserve the right to make changes in product design without reservation and without notification. The material in this guide is for information only and is subject to change without notice. All trademarks mentioned herein, registered or otherwise, are the properties of their various, ill, assorted owners.

## General Handling Precautions

Do not dispose of the scanner in fire.

Do not put the scanner directly in the sun or by any heat source.

Do not use or store the scanner in a very humid place.

Do not drop the scanner or allow it to collide violently with other objects.

Do not take the scanner apart without authorization.

## Printing Guidance

This programming guide is in A5 size. Please double check your printer setting before printing it out.

When barcodes are to be printed out for programming, the use of a high-resolution laser printer is strongly suggested for the best scan result.

## For CE-Countries

This scanner is in conformity with CE standards. Please note that an approved, CE-marked power supply unit should be used in order to maintain CE conformance.

Copyright © 2010. All rights reserved.

# Table of Contents

|   |    |
|---|----|
| About this Guide.....                                 | 1  |
| Default Parameters.....                               | 2  |
| Scanner Operation .....                               | 2  |
| Interface Communication .....                         | 2  |
| Symbologies .....                                     | 3  |
| Data Formatting .....                                 | 4  |
| Programming Procedure.....                            | 5  |
| Parameter Setting.....                                | 6  |
| Scanner Operation .....                               | 6  |
| Interface Configuration .....                         | 15 |
| The Symbologies .....                                 | 21 |
| Data Editing.....                                     | 44 |
| Appendix 1: USB Virtual COM Driver Installation ..... | 47 |
| Appendix 2: Barcode Length Setting.....               | 48 |
| Appendix 4: Full ASCII Code 39 Table .....            | 49 |



# About this Guide

---

This guide can be used to complete setups and configurations of your scanner. Follow the instructions to scan the included programming barcode labels to change the decoding options and interface protocols compatible with your host system requirements. You can also reset the scanner by scanning the Reset (return to factory default) barcode. The configurations are stored in non-volatile memory and will not be lost by removing power from the scanner.

During the programming mode, the scanner will acknowledge a good and valid reading with a short beep. It will give long beeps or remain silent for either an invalid or bad reading. If an error occurs during a scanning sequence simply rescan the correct parameter.

The settings herein shall be updated periodically without prior notice. For the latest version, please contact your distributor.

## Default Parameters

---

This table gives the default settings of all the programmable parameters. The default settings would be restored whenever the scanner reads the "Reset" programming label in programming mode. If you wish to change any setting, scan the appropriate barcodes below.

### Scanner Operation

| Parameter                         | Default |
|-----------------------------------|---------|
| Same code delay                   | 500msec |
| Beeping frequency                 | 2500 HZ |
| Beeping duration                  | 50msec  |
| LED/Beep before data transmission | On      |
| Power save                        | Off     |
| Blink mode timer                  | 5sec    |
| Header and trailer                | None    |
| Inter message delay               | 0msec   |
| Inter character delay             | 0msec   |

### Interface Communication

| Parameter                 | Default                |
|---------------------------|------------------------|
| <b>RS-232 Interface</b>   |                        |
| Baud rate                 | 9600                   |
| Parity                    | none                   |
| Data Bits                 | 8                      |
| Stop Bit                  | 1                      |
| RTS/CTS                   | off                    |
| Terminator                | <CR><LF>               |
| <b>USB Interface</b>      |                        |
| USB Device Type           | HID Keyboard Emulation |
| USB Country Keyboard Type | US Keyboard            |
| Terminator type           | Enter                  |

## Symbologies

| Parameter                             | Default |
|---------------------------------------|---------|
| <b>Decoder Selection</b>              |         |
| EAN/UPC                               | Enable  |
| Code 39                               | Enable  |
| Code 32                               | Disable |
| Codabar                               | Enable  |
| ITF 2 of 5                            | Enable  |
| MSI                                   | Disable |
| Chinese Post Code                     | Disable |
| Code 93                               | Enable  |
| Code 128                              | Enable  |
| EAN-128                               | Disable |
| Telepen                               | Disable |
| Code 11                               | Disable |
| Standard 2 of 5                       | Disable |
| Industrial 2 of 5                     | Disable |
| Matrix 2 of 5                         | Disable |
| GS1 DataBar                           | Disable |
| <b>Code Identifiers</b>               |         |
| Identifier code as factory standard   | Disable |
| Identifier code as AIM standard       | Disable |
| Code 39 identifier code               | M       |
| ITF 2 of 5 identifier code            | I       |
| Chinese post code identifier code     | H       |
| UPC-A identifier code                 | A       |
| UPC-E identifier code                 | E       |
| EAN-13 identifier code                | F       |
| EAN-8 identifier code                 | FF      |
| Codabar identifier code               | N       |
| Code 128 identifier code              | K       |
| Code 93 identifier code               | L       |
| MSI identifier code                   | P       |
| Code 11 identifier code               | O       |
| Standard 2 of 5 identifier code       | S       |
| Industrial 2 of 5 identifier code     | D       |
| Matrix 2 of 5 identifier code (Japan) | G       |
| GS1 DataBar identifier code           | RS      |
| GS1 DataBar Limited identifier code   | RL      |

|   |         |    |
|---|---------|----|
| GS1 DataBar Expanded identifier code  |         | RX |
| <b>Barcode Length</b>   |         |    |
| Codabar<br>Code 11<br>Standard 2 of 5<br>Industrial 2 of 5<br>Matrix 2 of 5 (Japan) | maximum | 32 |
|   | minimum | 6  |
| Code 39<br>Code 93<br>Code 128  | maximum | 62 |
|   | minimum | 3  |
| Chinese Post Code   | maximum | 16 |
|   | minimum | 10 |
| MSI<br>ITF 2 of 5   | maximum | 32 |
|   | minimum | 4  |
| GS1 DataBar<br>GS1 DataBar Limited  | maximum | 14 |
|   | minimum | 14 |
| GS1 DataBar Expanded  | maximum | 48 |
|   | minimum | 6  |


## Data Formatting

| Code              | Message Format                             |
|-------------------|--|
| EAN-13            | D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 |
| EAN-8             | D1 D2 D3 D4 D5 D6 D7 D8                    |
| UPC-A             | D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12     |
| UPC-E             | D1 D2 D3 D4 D5 D6 D7 D8                    |
| Code 128          | D1-Dx (default 3~62)                       |
| EAN-128           | C1 D1-Dx (default 3~62)                    |
| Code 39           | D1-Dx (default 3~62)                       |
| Codabar           | D1-Dx (default 6~32)                       |
| ITF 2 of 5        | D1-Dx (default 6~32)                       |
| Chinese Post Code | D1-Dx (default 8~32)                       |
| Code 93           | D1-Dx (default 3~32)                       |
| MSI               | D1-Dx (default 6~32)                       |

# Programming Procedure

Below is the programming procedure by using barcodes in this guide.

1. Power up the scanner.
2. Scan the **Start of Configuration** barcode.
3. Scan the barcode for the desired feature. Multiple features can be enabled/disabled before scanning the **End of Configuration** barcode.
4. Scan the **End of Configuration** barcode and save the new configuration.
5. To give up a configuration change, power off the scanner before scanning the **End of Configuration** barcode or scan the **Abort** barcode.
6. For some parameter setting, such as barcode length and identifier code, it is required to scan the **Set** barcode to save the configuration.

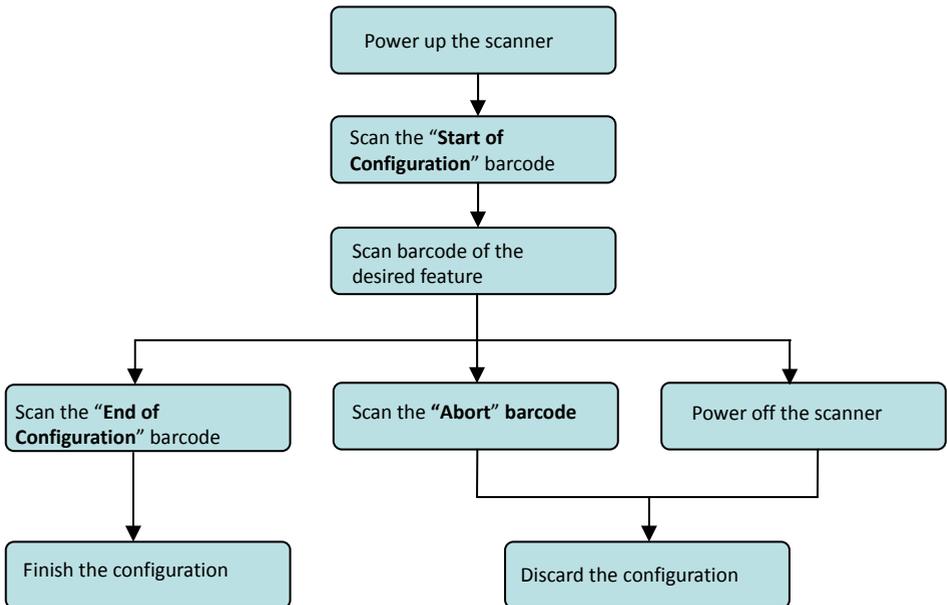

Default values are highlighted in **gray background**.

# Parameter Setting

---



Start Of Configuration

---

## Scanner Operation

### 1. System Function Setting

| Barcode Value | Barcode Label | Description                                 |
|---------------|---------------|---|
| --            |               | Reset (return to factory default)           |
| %/            |               | Display firmware version                    |
| ++            |               | Abort :exit programming mode with no update |
| KE94          |               | Return to customer default                  |
| KE95          |               | Save as customer default                    |



End Of Configuration

---

Start Of Configuration

---

## 2. Interface Setting

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b>   |
|----------------------|----------------------|--|
| KE97                 |                      | Return to USB default  |
| KE99                 |                      | Return to RS-232 default   |
| KE87                 |                      | Enable USB virtual COM<br>(Virtual COM driver required. For installation steps refer to Appendix 1.)   |
| KE77                 |                      | Enable OPOS/JPOS<br>(Available for USB interface only and requires driver. For RS-232 interface, the scanner needs reset and identifier code has to be enabled.) |



End Of Configuration



Start Of Configuration

### 3. General Scan Mode Setting

| Barcode Value | Barcode Label | Description  |
|---------------|---------------|--|
| SM01          |               | <b>Trigger mode</b> <ul style="list-style-type: none"> <li>The scanner becomes inactive as soon as the data is transmitted. It must be triggered to become active again.</li> </ul>  |
| SM02          |               | <b>Auto Scan mode</b> <ul style="list-style-type: none"> <li>The scanner is still active after the data is transmitted but the successive transmission of the same barcode is not allowed when the trigger switch is pressed again.</li> </ul> |
| SM04          |               | <b>Alternate mode</b> <ul style="list-style-type: none"> <li>The scanner illumination alternates between on and off when the trigger switch is pressed.</li> </ul>   |
| SM05          |               | <b>Repeat mode</b> <ul style="list-style-type: none"> <li>This mode is similar to Auto Scan mode, but double reading for the same barcode is prohibited if the scanner switch is pressed.</li> </ul>   |
| SM06          |               | <b>Momentary mode</b> <ul style="list-style-type: none"> <li>The scanner will light up only when the trigger switch is pressed the scanner will turn off when the trigger switch is release.</li> </ul>  |
| SM12          |               | <b>Presentation mode</b> <ul style="list-style-type: none"> <li>Also called auto trigger mode. The scanner is inactive but will automatically detect barcodes presented in the scan zone and become active.</li> </ul>                         |



End Of Configuration



Start Of Configuration

4. Operation Function Setting

**Good Read Beeper Tone Selection**

| Barcode Value | Barcode Label | Description    |
|---------------|---------------|----------------|
| GR02          |               | 900 HZ         |
| GR01          |               | 2500 HZ        |
| GR03          |               | 2700 HZ        |
| GR05          |               | Beeper disable |

**Beeper Sound Selection**

| Barcode Value | Barcode Label | Description           |
|---------------|---------------|-----------------------|
| GR13          |               | Very short (5 msec)   |
| GR12          |               | Short (20 msec)       |
| GR11          |               | Medium (50 msec)      |
| GR10          |               | Long (100 msec)       |
| GR14          |               | Very Long (200 msec)  |
| GR15          |               | Ultra long (500 msec) |



End Of Configuration



Start Of Configuration

### Beeper Timing Selection

| Barcode Value | Barcode Label   | Description  |
|---------------|---|--|
| LB00          |  | LED/Beeper after transmission <ul style="list-style-type: none"> <li>Use this barcode to indicate a "good read" after a barcode has been successfully decoded.</li> </ul>                  |
| LB01          |  | LED/Beeper before transmission <ul style="list-style-type: none"> <li>Use this barcode to indicate a "good read" before successfully transmitting the barcode data to the host.</li> </ul> |
| LB03          |  | Power-on tone enable   |
| LB04          |  | Power-on tone disable  |



End Of Configuration



Start Of Configuration

### Power Save Mode Selection

| Barcode Value | Barcode Label   | Description                         |
|---------------|---|-------------------------------------|
| MT00          |  | Power save mode off                 |
| MT01          |  | Power save after 5 min              |
| MT02          |  | Power save after 10 min             |
| MT03          |  | Power save after 20 min             |
| MT04          |  | Power save after 30 min             |
| MT05          |  | Power save after 60 min             |
| MT12          |  | Power save after every trigger scan |

**\*Power Save mode:** After the scanner has been inactive for a period of time, the device powers down to reduce power consumption.



End Of Configuration



Start Of Configuration

### Blink Mode Selection

(Only available in Auto Scan mode and Alternate mode)

| Barcode Value | Barcode Label | Description                                       |
|---------------|---------------|---|
| LS00          |               | Blink mode off.<br>Module never enters blink mode |
| LS01          |               | Blink mode timer 5s                               |
| LS02          |               | Blink mode timer 10s                              |
| LS03          |               | Blink mode timer 15s                              |
| LS04          |               | Blink mode timer 20s                              |
| LS05          |               | Blink mode timer 30s                              |
| LS06          |               | Blink mode timer 60s                              |
| LS15          |               | Light beam blinks in blink mode                   |

**\*Blink mode:** After the scanner has been inactive for a period of time, the light beam would automatically start blinking. To stop the scanner from blinking, simply present an object close to the scanner window. The Blink mode is included to reduce power consumption and to extend scanner life. Scan barcodes to set the time for switching to blink mode when the scanner is idle.



End Of Configuration



Start Of Configuration

---

**Inter Message Delay**

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b> |
|----------------------|----------------------|--------------------|
| IM01                 |                      | 0 ms               |
| IM02                 |                      | 100 ms             |
| IM03                 |                      | 500 ms             |
| IM04                 |                      | 1000 ms            |

**Inter Character Delay**

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b> |
|----------------------|----------------------|--------------------|
| IC01                 |                      | 0ms                |
| IC00                 |                      | 5ms                |
| IC02                 |                      | 10ms               |
| IC03                 |                      | 20ms               |
| IC04                 |                      | 50ms               |
| IC05                 |                      | 2ms                |



End Of Configuration



Start Of Configuration

### Same Code Delay

| Barcode Value | Barcode Label | Description                   |
|---------------|---------------|-------------------------------|
| SD01          |               | Same code delay time 50msec   |
| SD02          |               | Same code delay time 100msec  |
| SD03          |               | Same code delay time 200msec  |
| SD04          |               | Same code delay time 300msec  |
| SD05          |               | Same code delay time 400msec  |
| SD06          |               | Same code delay time 500msec  |
| SD07          |               | Same code delay time 600msec  |
| SD08          |               | Same code delay time 700msec  |
| SD09          |               | Same code delay time 800msec  |
| SD10          |               | Same code delay time 900msec  |
| SD11          |               | Same code delay time 1000msec |
| SD12          |               | Same code delay time Infinite |



End Of Configuration



Start Of Configuration

---

## Interface Configuration

### 1. RS-232C Interface Setting

| Barcode Value | Barcode Label | Same Code Delay |
|---------------|---------------|-----------------|
|               |               | Description     |
| BR09          |               | 115200          |
| BR08          |               | 57600           |
| BR00          |               | 38400           |
| BR01          |               | 19200           |
| BR02          |               | 9600            |
| BR03          |               | 4800            |
| BR04          |               | 2400            |
| BR05          |               | 1200            |



End Of Configuration



Start Of Configuration

## Parity Bit

| Barcode Value | Barcode Label | Description  |
|---------------|---------------|--------------|
| PB01          |               | Even parity  |
| PB02          |               | Odd parity   |
| PB03          |               | Mark parity  |
| PB04          |               | Space parity |
| PB05          |               | None parity  |

## Stop Bit

| Barcode Value | Barcode Label | Description |
|---------------|---------------|-------------|
| SB01          |               | 1 stop bit  |
| SB02          |               | 2 stop bit  |

## Data Bit

| Barcode Value | Barcode Label | Description |
|---------------|---------------|-------------|
| DB07          |               | 7 data bit  |
| DB08          |               | 8 data bit  |



End Of Configuration



Start Of Configuration

## Handshaking Protocol

| Barcode Value | Barcode Label | Description                     |
|---------------|---------------|---------------------------------|
| HP01          |               | None handshaking                |
| HP02          |               | ACK/NAK                         |
| HP03          |               | Xon/Xoff                        |
| HP04          |               | RTS/CTS                         |
| LB07          |               | Enable BEEPER ON<BEL> CHARACTER |
| LB08          |               | Ignore BEEP ON <BEL> CHARACTER  |
| LB09          |               | Disable ACK/NAK timeout beeper  |
| RT01          |               | ACK/NAK response time 300ms     |
| RT03          |               | ACK/NAK response time 500ms     |
| RT05          |               | ACK/NAK response time 1 sec     |
| RT02          |               | ACK/NAK response time 2 sec     |
| RT04          |               | ACK/NAK response time 3 sec     |
| RT06          |               | ACK/NAK response time 5 sec     |
| RT07          |               | ACK/NAK response time infinity  |



End Of Configuration

Start Of Configuration

---

**Message Terminator**

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b>                |
|----------------------|----------------------|-----------------------------------|
| DT11                 |                      | RS-232 message terminator—none    |
| DT12                 |                      | RS-232 message terminator—CR/LF   |
| DT13                 |                      | RS-232 message terminator—CR      |
| DT14                 |                      | RS-232 message terminator—LF      |
| DT15                 |                      | RS-232 message terminator—H-tab   |
| DT16                 |                      | RS-232 message terminator—STX/ETX |
| DT17                 |                      | RS-232 message terminator—EOT     |



End Of Configuration



Start Of Configuration

2. USB HID Keyboard Setting

**Language Support**

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b>                      |
|----------------------|----------------------|---|
| KL00                 |                      | International Keyboard mode (ALT mode)  |
| KL01                 |                      | Keyboard language support — USA         |
| KL02                 |                      | Keyboard language support — UK          |
| KL03                 |                      | Keyboard language support — Germany     |
| KL04                 |                      | Keyboard language support — French      |
| KL05                 |                      | Keyboard language support — Spanish     |
| KL06                 |                      | Keyboard language support — Italian     |
| KL07                 |                      | Keyboard language support — Switzerland |
| KL08                 |                      | Keyboard language support — Sweden      |
| KL09                 |                      | Keyboard language support — Belgium     |
| KL10                 |                      | Keyboard language support — Portugal    |
| KL11                 |                      | Keyboard language support — Turkish     |
| KL15                 |                      | Keyboard language support — Japanese    |



End Of Configuration



Start Of Configuration

| Barcode Value | Barcode Label | Keyboard Setting               |                               |
|---------------|---------------|--------------------------------|-------------------------------|
|               |               |                                | Description                   |
| CP00          |               |                                | Capital lock on               |
| CP01          |               | Capital lock off               |                               |
| CP05          |               |                                | Function key emulation enable |
| CP06          |               | Function key emulation disable |                               |
| CP18          |               | Send number as normal data     |                               |
| CP19          |               |                                | Send number as keypad data    |
| CP20          |               | Alphabet follow as keyboard    |                               |
| CP21          |               |                                | Alphabet always upper case    |
| CP22          |               |                                | Alphabet always Lower case    |

| Barcode Value | Barcode Label | Message Terminator          |                             |
|---------------|---------------|-----------------------------|-----------------------------|
|               |               |                             | Description                 |
| DT01          |               |                             | Keyboard terminator---none  |
| DT02          |               | Keyboard terminator---Enter |                             |
| DT03          |               |                             | Keyboard terminator---H-TAB |



End Of Configuration



Start Of Configuration

## The Symbolologies

### 1. Codabar Parameter Setting

| Barcode Value | Barcode Label | Description   |
|---------------|---------------|---|
| RC02          |               | Codabar enable  |
| RD02          |               | Codabar disable   |
| CB05          |               | Codabar start/stop character transmission — none            |
| CB06          |               | Codabar start/stop character transmission — A,B,C,D         |
| CB07          |               | Codabar start/stop character transmission — DC1~DC4         |
| CB08          |               | Codabar start/stop character transmission — a/t,b/n,c/*,d/e |
| CB09          |               | Codabar maximum length setting                              |
| CB10          |               | Codabar minimum length setting                              |

SET



Confirm to save this setting (required for reading full ASCII table and length setting)



End Of Configuration



Start Of Configuration

---

| Barcode Value | Barcode Label | Description                            |
|---------------|---------------|--|
| CB13          |               | No check character                     |
| CB14          |               | Validate modulo 16, but don't transmit |
| CB15          |               | Validate modulo 16 and transmit        |
| DC50          |               | Codabar data redundant check=off       |
| DC51          |               | Codabar data redundant check=1         |
| DC52          |               | Codabar data redundant check=2         |
| DC53          |               | Codabar data redundant check=3         |



End Of Configuration



Start Of Configuration

2. Code 39 Parameter Setting

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b>                                |
|----------------------|----------------------|---|
| RC01                 |                      | Code 39 enable                                    |
| RD01                 |                      | Code 39 disable                                   |
| RC13                 |                      | Code 32 enable                                    |
| RD13                 |                      | Code 32 disable                                   |
| DC00                 |                      | Code 39 data redundant check=off                  |
| DC01                 |                      | Code 39 data redundant check=1                    |
| DC02                 |                      | Code 39 data redundant check=2                    |
| DC03                 |                      | Code 39 data redundant check=3                    |
| 3901                 |                      | Standard code 39                                  |
| 3902                 |                      | Full ASCII code 39                                |
| 3903                 |                      | Code 39 start/stop character transmission         |
| 3904                 |                      | Code 39 start/stop character without transmission |



End Of Configuration



Start Of Configuration

| Barcode Value | Barcode Label | Description   |
|---------------|---------------|---|
| 3905          |               | Code 39 check digit calculate and transmit  |
| 3906          |               | Code 39 check digit calculate but without transmit                                      |
| 3907          |               | No check character  |
| 3908          |               | Code 39 maximum length setting  |
| 3909          |               | Code 39 minimum length setting  |
| SET           |               | Confirm to save this setting (required for reading full ASCII table and length setting) |
| 3912          |               | Code 32 (Italian pharmacy) transmit "A" character                                       |
| 3913          |               | Code 32 (Italian pharmacy) without transmit "A" character                               |



End Of Configuration



Start Of Configuration

3. Code 93 Parameter Setting

| Barcode Value | Barcode Label | Description                      |
|---------------|---------------|----------------------------------|
| RC08          |               | Code 93 enable                   |
| RD08          |               | Code 93 disable                  |
| DC30          |               | Code 93 data redundant check=off |
| DC31          |               | Code 93 data redundant check=1   |
| DC32          |               | Code 93 data redundant check=2   |
| DC33          |               | Code 93 data redundant check=3   |
| 9301          |               | Code 93 maximum length setting   |
| 9302          |               | Code 93 minimum length setting   |

|     |  |   |
|-----|--|---|
| SET |  | Confirm to save this setting (required for reading full ASCII table and length setting) |
|-----|--|---|

|      |  |  |
|------|--|--|
| 9303 |  | Code 93 check digit calculate but without transmit     |
| 9304 |  | Code 93 check digit not calculate and without transmit |
| 9305 |  | Code 93 check digit calculate and transmit             |



End Of Configuration



Start Of Configuration

## 4. Code 128 Parameter Setting

| Barcode Value | Barcode Label | Description                       |
|---------------|---------------|-----------------------------------|
| RC06          |               | Code 128 enable                   |
| RD06          |               | Code 128 disable                  |
| RC10          |               | EAN-128 enable                    |
| RD10          |               | EAN-128 disable                   |
| DC40          |               | Code 128 data redundant check=off |
| DC41          |               | Code 128 data redundant check=1   |
| DC42          |               | Code 128 data redundant check=2   |
| DC43          |               | Code 128 data redundant check=3   |
| 1803          |               | No check character                |
| 1804          |               | Calculate but not transmitted     |
| 1805          |               | Calculate and transmit            |
| 1806          |               | Code 128 maximum length setting   |
| 1807          |               | Code 128 minimum length setting   |

SET



Confirm to save this setting (required for reading full ASCII table and length setting)



End Of Configuration



Start Of Configuration

5. Chinese Post Code Parameter Setting

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b>                         |
|----------------------|----------------------|--|
| RC05                 |                      | Chinese post code enable                   |
| RD05                 |                      | Chinese post code disable                  |
| DC60                 |                      | Chinese post code data redundant check=off |
| DC61                 |                      | Chinese post code data redundant check=1   |
| DC62                 |                      | Chinese post code data redundant check=2   |
| DC63                 |                      | Chinese post code data redundant check=3   |
| SZ01                 |                      | Chinese post code maximum length setting   |
| SZ02                 |                      | Chinese post code minimum length setting   |

|     |  |   |
|-----|--|---|
| SET |  | Confirm to save this setting (required for reading full ASCII table and length setting) |
|-----|--|---|



End Of Configuration



Start Of Configuration

## 6. MSI/Plessey Parameter Setting

| Barcode Value | Barcode Label | Description   |
|---------------|---------------|---|
| RC14          |               | MSI enable  |
| RD14          |               | MSI disable   |
| DC70          |               | MSI data redundant check= off   |
| DC71          |               | MSI data redundant check=1  |
| DC72          |               | MSI data redundant check=2  |
| DC73          |               | MSI data redundant check=3  |
| MS01          |               | MSI/Plessey maximum length setting  |
| MS02          |               | MSI/Plessey minimum length setting  |
| SET           |               | Confirm to save this setting (required for reading full ASCII table and length setting) |
| MS03          |               | MSI/Plessey double check digit calculate but not transmit                               |
| MS04          |               | MSI/Plessey double check digit without calculate and transmit                           |
| MS05          |               | MSI/Plessey double check digit calculate but only first digit transmit                  |
| MS06          |               | MSI/Plessey double check digit calculate and both transmit                              |
| MS07          |               | MSI/Plessey single check digit calculate but without transmit                           |
| MS08          |               | MSI/Plessey single check digit calculate and transmit                                   |



End Of Configuration



Start Of Configuration

7. Code 11 Interface Setting

| Barcode Value | Barcode Label | Description                    |
|---------------|---------------|--------------------------------|
| RC07          |               | Code 11 enable                 |
| RD07          |               | Code 11 disable                |
| 1101          |               | Code 11 maximum length setting |
| 1102          |               | Code 11 minimum length setting |

|     |  |   |
|-----|--|---|
| SET |  | Confirm to save this setting (required for reading full ASCII table and length setting) |
|-----|--|---|

|      |  |   |
|------|--|---|
| 1103 |  | Code 11 one check digit verification  |
| 1104 |  | Code 11 two check digit verification  |
| 1105 |  | Two Check for Code 11 check digit if code length is longer than 10 characters |
| 1106 |  | Disable verification  |
| 1107 |  | Code 11 check digit transmitted   |
| 1108 |  | Code 11 check digit not transmitted   |



End Of Configuration



Start Of Configuration

## 8. ITF 2 of 5 Parameter Setting

| Barcode Value | Barcode Label | Description   |
|---------------|---------------|---|
| RC04          |               | ITF 2 of 5 enable                                     |
| RD04          |               | ITF 2 of 5 disable                                    |
| RC09          |               | IATA code enable                                      |
| RD09          |               | IATA disable  |
| DC80          |               | ITF 25 data redundant check=off                       |
| DC81          |               | ITF25 data redundant check=1                          |
| DC82          |               | ITF25 data redundant check=2                          |
| DC83          |               | ITF25 data redundant check=3                          |
| IT03          |               | ITF 2 of 5 no check character                         |
| IT04          |               | ITF 2 of 5 check digit calculate and transmit         |
| IT05          |               | ITF 2 of 5 check digit calculate but without transmit |



End Of Configuration



Start Of Configuration

---

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b>                     |
|----------------------|----------------------|--|
| IT01                 |                      | ITF 2 of 5 code maximum length setting |
| IT02                 |                      | ITF 2 of 5 code minimum length setting |
| IT06                 |                      | ITF 2 of 5 one fixed length setting    |
| IT07                 |                      | ITF 2 of 5 two fixed length setting    |

|     |  |   |
|-----|--|---|
| SET |  | Confirm to save this setting (required for reading full ASCII table and length setting) |
|-----|--|---|



End Of Configuration



Start Of Configuration

## 9. Standard 2 of 5 Parameter Setting

| Barcode Value | Barcode Label | Description                                 |
|---------------|---------------|---|
| RC22          |               | Standard 2 of 5 code enable                 |
| RD22          |               | Standard 2 of 5 code disable                |
| D051          |               | Standard 2 of 5 code maximum length setting |
| D052          |               | Standard 2 of 5 code minimum length setting |

SET



Confirm to save this setting (required for reading full ASCII table and length setting)

D053



Standard 2 of 5 code no check character

D054



Standard 2 of 5 code check digit calculate and transmit

D055



Standard 2 of 5 code check digit calculate but without transmit



End Of Configuration



Start Of Configuration

10. Industrial 2 of 5 Parameter Setting

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b>                            |
|----------------------|----------------------|---|
| RC21                 |                      | Industrial 2 of 5 code enable                 |
| RD21                 |                      | Industrial 2 of 5 code disable                |
| D251                 |                      | Industrial 2 of 5 code maximum length setting |
| D252                 |                      | Industrial 2 of 5 code minimum length setting |

|     |  |   |
|-----|--|---|
| SET |  | Confirm to save this setting (required for reading full ASCII table and length setting) |
|-----|--|---|

|      |  |   |
|------|--|---|
| D253 |  | Industrial 2 of 5 code no check character                             |
| D254 |  | Industrial 2 of 5 code check digit calculate and transmit             |
| D255 |  | Industrial 2 of 5 code check digit calculate but without transmission |



End Of Configuration



Start Of Configuration

## 11. Matrix 2 of 5 (Japan) Parameter Setting

| Barcode Value | Barcode Label | Description   |
|---------------|---------------|---|
| RC12          |               | Matrix 2 of 5 enable  |
| RD12          |               | Matrix 2 of 5 disable   |
| D151          |               | Matrix 2 of 5 maximum length setting  |
| D152          |               | Matrix 2 of 5 minimum length setting  |
| SET           |               | Confirm to save this setting (required for reading full ASCII table and length setting) |
| D153          |               | Matrix 2 of 5 no check character  |
| D154          |               | Matrix 2 of 5 check digit calculate and transmit  |
| D155          |               | Matrix 2 of 5 check digit calculate but without transmission                            |



End Of Configuration



Start Of Configuration

12. UPC/EAN/JAN Parameter Setting

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b>               |
|----------------------|----------------------|----------------------------------|
| RC11                 |                      | EAN convert to ISSN/ISBN enable  |
| RD11                 |                      | EAN convert to ISSN/ISBN disable |
| RC03                 |                      | UPC/EAN/JAN enable               |
| RD03                 |                      | UPC/EAN/JAN disable              |
| UE01                 |                      | UPC/EAN/JAN all enable           |
| UE02                 |                      | EAN-8 or EAN-13 enable           |
| UE03                 |                      | UPC-A and EAN-13 enable          |
| UE04                 |                      | UPC-A and UPC-E enable           |
| UE05                 |                      | UPC-A enable                     |
| UE06                 |                      | UPC-E enable                     |
| UE07                 |                      | EAN-13 enable                    |
| UE08                 |                      | EAN-8 enable                     |
| UE09                 |                      | UPC/EAN Addendum disable         |



End Of Configuration



Start Of Configuration

| Barcode Value | Barcode Label | Description                              |
|---------------|---------------|--|
| UE10          |               | Add on 5 only                            |
| UE11          |               | Add on 2 only                            |
| UE12          |               | Add on 2 or 5                            |
| UE13          |               | Force UPC-E to UPC-A format enable       |
| UE14          |               | Force UPC-E to UPC-A format disable      |
| UE15          |               | Force UPC-A to EAN-13 format enable      |
| UE16          |               | Force UPC-A to EAN-13 format disable     |
| UE44          |               | Force EAN-8 to EAN-13 format enable      |
| UE45          |               | Force EAN-8 to EAN-13 format disable     |
| UE17          |               | Transmit UPC-A check digit enable        |
| UE18          |               | Transmit UPC-A check digit disable       |
| UE19          |               | Transmit UPC-E leading character enable  |
| UE20          |               | Transmit UPC-E leading character disable |
| UE21          |               | Transmit UPC-E check digit enable        |
| UE22          |               | Transmit UPC-E check digit disable       |



End Of Configuration



Start Of Configuration

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b>                              |
|----------------------|----------------------|---|
| UE23                 |                      | Transmit EAN-8 check digit enable               |
| UE24                 |                      | Transmit EAN-8 check digit disable              |
| UE25                 |                      | Transmit EAN-13 check digit enable              |
| UE26                 |                      | Transmit EAN-13 check digit disable             |
| UE27                 |                      | Transmit UPC-A leading character enable         |
| UE28                 |                      | Transmit UPC-A leading character disable        |
| UE30                 |                      | Add-on format with separator                    |
| UE31                 |                      | Add-on format without separator                 |
| UE60                 |                      | EAN-13 country code first "0" can transmitted   |
| UE61                 |                      | EAN-13 country code first:"0" can't transmitted |
| UE66                 |                      | EAN-13 with first 0 ID code same as "UPC-A"     |
| UE67                 |                      | EAN-13 with first 0 ID code same as "EAN-13"    |
| DC10                 |                      | UPC-A data redundant check=off                  |
| DC11                 |                      | UPC-A data redundant check=1                    |



End Of Configuration



Start Of Configuration

| Barcode Value | Barcode Label | Description                      |
|---------------|---------------|----------------------------------|
| DC12          |               | UPC-A data redundant check=2     |
| DC13          |               | UPC-A data redundant check=3     |
| DC14          |               | UPC-E data redundant check=off   |
| DC15          |               | UPC-E data redundant check=1     |
| DC16          |               | UPC-E data redundant check=2     |
| DC17          |               | UPC-E data redundant check=3     |
| DC20          |               | EAN-13 data redundant check=off  |
| DC21          |               | EAN-13 data redundant check=1    |
| DC22          |               | EAN-13 data redundant check=2    |
| DC23          |               | EAN-13 data redundant check=3    |
| DC24          |               | EAN-8 data redundant check=off   |
| DC25          |               | EAN-8 data redundant check=1     |
| DC26          |               | EAN-8 data redundant check=2     |
| DC27          |               | EAN-8 data redundant check=3     |
| UE32          |               | EAN/UPC +add-on (none mandatory) |
| UE33          |               | EAN/UPC +add-on (mandatory)      |



End Of Configuration



Start Of Configuration

---

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b>  |
|----------------------|----------------------|---|
| UE35                 |                      | EAN/UPC +add-on mandatory for 978/977 bookland<br><b>(Supplement requirement, not sent for other)</b>     |
| UE38                 |                      | EAN/UPC +addon mandatory for 978/977 bookland<br><b>(Supplement requirement, optionally for other)</b>    |
| UE42                 |                      | EAN/UPC +addon mandatory for 491 Japanese bookland<br><b>(Supplement requirement, not sent for other)</b> |
| UE43                 |                      | EAN/UPC +addon mandatory 491 Japanese bookland<br><b>(Supplement requirement, optionally for other)</b>   |



End Of Configuration

Start Of Configuration

---

### 13. Telepen Parameter Setting

| Barcode Value | Barcode Label | Description                 |
|---------------|---------------|-----------------------------|
| RC25          |               | Telepen enable              |
| RD25          |               | Telepen disable             |
| TE03          |               | Telepen numeric mode enable |
| TE04          |               | AIM Telepen enable          |



End Of Configuration



14. GS1 DataBar Parameter Setting

There are 7 kinds of barcodes in the GS1 DataBar family and they are categorized into three groups. Barcode types in the same group use the same barcodes for setting.

| Group   | Representative  | Contents   |
|---------|---|--|
| Group 1 | GS1 DataBar Omnidirectional<br><b>(Formally RSS-14)</b> | GS1 DataBar Omnidirectional<br>GS1 DataBar Truncated<br>GS1 DataBar Stacked<br>GS1 DataBar Stacked Omnidirectional |
| Group 2 | GS1 DataBar Limited<br><b>(Formally RSS Limited)</b>    | GS1 DataBar Limited  |
| Group 3 | GS1 DataBar Expanded<br><b>(Formally RSS Expanded)</b>  | GS1 DataBar Expanded<br>GS1 DataBar Expanded Stacked   |

**GS1 DataBar Omnidirectional (Formally RSS-14)**

| Barcode Value | Barcode Label | Description   |
|---------------|---------------|---|
| RC15          |               | GS1 DataBar Omnidirectional enable                              |
| RD15          |               | GS1 DataBar Omnidirectional disable                             |
| SS00          |               | Transmit GS1 DataBar Omnidirectional check digit                |
| SS01          |               | Do not transmit GS1 DataBar Omnidirectional check digit         |
| SS02          |               | Transmit GS1 DataBar Omnidirectional application ID (01)        |
| SS03          |               | Do not transmit GS1 DataBar Omnidirectional application ID (01) |
| SS05          |               | GS1 DataBar Omnidirectional /EAN-128 emulation enable           |
| SS04          |               | GS1 DataBar Omnidirectional /EAN-128 emulation disable          |



Start Of Configuration

---

**GS1 DataBar Limited (Formally RSS Limited)**

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b>                                 |
|----------------------|----------------------|--|
| RC16                 |                      | GS1 DataBar Limited enable                         |
| RD16                 |                      | GS1 DataBar Limited disable                        |
| SS10                 |                      | Transmit GS1 DataBar Limited check digit           |
| SS11                 |                      | Don't transmit GS1 DataBar Limited check digit     |
| SS12                 |                      | Transmit GS1 DataBar limited application ID (01)   |
| SS13                 |                      | Do not transmit GS1 DataBar limited application ID |



End Of Configuration



Start Of Configuration

**GS1 DataBar Expanded (Formally RSS Expanded)**

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b>                                  |
|----------------------|----------------------|---|
| RC17                 |                      | GS1 DataBar Expanded enable                         |
| RD17                 |                      | GS1 DataBar Expanded disable                        |
| SS07                 |                      | GS1 DataBar Expanded/EAN-128 emulation enable       |
| SS06                 |                      | GS1 DataBar Expanded/EAN-128 emulation disable      |
| SS08                 |                      | GS1 DataBar Expanded check digital enable           |
| SS09                 |                      | GS1 DataBar Expanded check digital disable          |
| SS16                 |                      | Transmit GS1 DataBar Expanded application ID (01)   |
| SS17                 |                      | Do not transmit GS1 DataBar Expanded application ID |



End Of Configuration



Start Of Configuration

## Data Editing

### 1. Identifier Code

| Barcode Value | Barcode Label | Description                                      |
|---------------|---------------|--|
| IS00          |               | Disable identifier code                          |
| IS01          |               | Enable identifier code table as factory standard |
| IS03          |               | Enable identifier code table as AIM standard.    |
| CI01          |               | Code 39 identifier code setting                  |
| CI02          |               | ITF 2 of 5 identifier code setting               |
| CI03          |               | Chinese Post Code identifier code setting        |
| CI04          |               | UPC-E identifier code setting                    |
| CI05          |               | UPC-A identifier code setting                    |
| CI06          |               | EAN-13 identifier code setting                   |
| CI07          |               | EAN-8 identifier code setting                    |

SET



Confirm to save this setting (required for reading full ASCII table and length setting)



End Of Configuration



Start Of Configuration

| <b>Barcode Value</b> | <b>Barcode Label</b> | <b>Description</b>                                  |
|----------------------|----------------------|---|
| CI08                 |                      | Codabar identifier code setting                     |
| CI09                 |                      | Code 128 identifier code setting                    |
| CI10                 |                      | Code 93 identifier code setting                     |
| CI11                 |                      | MSI identifier code setting                         |
| CI12                 |                      | GS1 DataBar Omnidirectional identifier code setting |
| CI13                 |                      | GS1 DataBar Limited identifier code setting         |
| CI14                 |                      | GS1 DataBar expanded identifier code setting        |
| CI15                 |                      | Industrial 2 of 5 identifier code setting           |
| CI16                 |                      | Code 11 Identifier code setting                     |
| CI17                 |                      | Standard 2 of 5 identifier code setting             |
| CI18                 |                      | Matrix 2 of 5 (Japan) identifier code setting       |

|     |  |   |
|-----|--|---|
| SET |  | Confirm to save this setting (required for reading full ASCII table and length setting) |
|-----|--|---|



End Of Configuration



Start Of Configuration

## 2. Header and Trailer

| Barcode Value | Barcode Label | Description   |
|---------------|---------------|---|
| CP11          |               | Add code length as header enable (2 digits)   |
| CP12          |               | Add code length as header disable (2 digits)  |
| HT01          |               | Header (Preamble)   |
| HT02          |               | Trailer (Postamble)   |
| HT03          |               | Truncate header character   |
| HT04          |               | Truncate trailer character  |
| SET           |               | Confirm to save this setting (required for reading full ASCII table and length setting) |



End Of Configuration

## Appendix 1: USB Virtual COM Driver Installation

Contact your distributor to get the driver and follow the steps below to enable USB virtual COM port.

1. Connect the handheld scanner and the host (e.g. a PC) with a USB interface cable.
2. Enable USB virtual COM port with programming barcodes on page 7.
3. After the programming, the host would request driver installation. Browse your files to locate the driver and start installation.
4. The USB virtual COM port is ready for use after driver installation.



Some operating systems, such as Windows 7, may not detect the scanner automatically. Please open Device Manager or other appropriate programs to install the driver manually if necessary.

## Appendix 2: Barcode Length Setting


### Introduction

The length of a barcode is the number of characters it contains, including check digits. As listed in the Default Parameters section, each barcode type has different default length. You may change the setting by the following procedure.

To set up barcode length, the paramours to be determined are barcode type and the desired barcode length. Barcode length is consisted of 2 digits. For numbers smaller than 10, you need to add a “0” in the front.

### Example

If the barcode length is 4 to 12 digits, the steps would be as below:

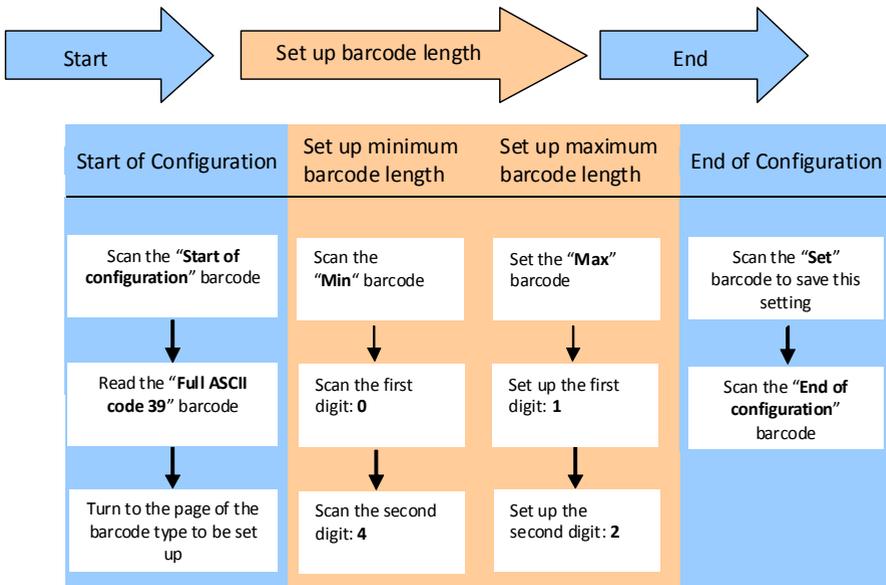

Use the ASCII table (Appendix 4) to set up barcode length. Be sure to enable the full ASCII code 39 option before you start and read the “Set” label to set your choice into memory.



## Appendix 4: Full ASCII Code 39 Table

| Code 39 | ASCII   | Hexa-code | Code 39 | ASCII   | Hexa-code |
|---------|---|-----------|---------|---|-----------|
|         | Full ASCII ---NUL   | 00        |         | Full ASCII ---SI<br>Function key----"Shift"   | 0F        |
|         | Full ASCII ---SOH<br>Function key----"Ins"                  | 01        |         | Full ASCII ---DLE<br>Function key----"5(num)" | 10        |
|         | Full ASCII ---STX<br>Function key----"Del"                  | 02        |         | Full ASCII ---DC1<br>Function key----"F1"     | 11        |
|         | Full ASCII ---ETX<br>Function key----"Home"                 | 03        |         | Full ASCII ---DC2<br>Function key----"F2"     | 12        |
|         | Full ASCII ---EOT<br>Function key----"End"                  | 04        |         | Full ASCII ---DC3<br>Function key----"F3"     | 13        |
|         | Full ASCII ---ENQ<br>Function key----"Up arrow"             | 05        |         | Full ASCII ---DC4<br>Function key----"F4"     | 14        |
|         | Full ASCII ---ACK<br>Function key----"Down arrow"           | 06        |         | Full ASCII ---NAK<br>Function key----"F5"     | 15        |
|         | Full ASCII ---BEL<br>Function key----"Left arrow"           | 07        |         | Full ASCII ---SYN<br>Function key----"F6"     | 16        |
|         | Full ASCII ---BS<br>Function key----"Backspace"             | 08        |         | Full ASCII ---ETB<br>Function key----"F7"     | 17        |
|         | Full ASCII ---HT<br>Function key----"TAB"                   | 09        |         | Full ASCII ---CAN<br>Function key----"F8"     | 18        |
|         | Full ASCII ---LF<br>Function key----"Enter (alpha numeric)" | 0A        |         | Full ASCII ---EN<br>Function key----"F9"      | 19        |
|         | Full ASCII ---VT<br>Function key----"right arrow"           | 0B        |         | Full ASCII ---SUB<br>Function key----"F10"    | 1A        |
|         | Full ASCII ---FF<br>Function key----"PgUp"                  | 0C        |         | Full ASCII ---ESC<br>Function key----"F11"    | 1B        |
|         | Full ASCII ---CR<br>Function key----<br>"Enetr(num.)"       | 0D        |         | Full ASCII ---FS<br>Function key----"F12"     | 1C        |
|         | Full ASCII ---SO<br>Function key----"PgDn"                  | 0E        |         | Full ASCII ---GS<br>Function key----"ESC"     | 1D        |





Start Of Configuration

**Full ASCII Code 39 Table**

| Code 39 | ASCII   | Hexa-code | Code 39 | ASCII           | Hexa-code |
|---------|---|-----------|---------|-----------------|-----------|
|         | Full ASCII ---RS<br>Function key-----“CTL(L)” | 1E        |         | Full ASCII ---- | 2D        |
|         | Full ASCII ---US<br>Function key-----“ALT(L)” | 1F        |         | Full ASCII ---. | 2E        |
|         | Full ASCII ---SP                              | 20        |         | Full ASCII ---/ | 2F        |
|         | Full ASCII ---!                               | 21        |         | Full ASCII ---0 | 30        |
|         | Full ASCII ---“                               | 22        |         | Full ASCII ---1 | 31        |
|         | Full ASCII ---#                               | 23        |         | Full ASCII ---2 | 32        |
|         | Full ASCII ---\$                              | 24        |         | Full ASCII ---3 | 33        |
|         | Full ASCII ---%                               | 25        |         | Full ASCII ---4 | 34        |
|         | Full ASCII ---&                               | 26        |         | Full ASCII ---5 | 35        |
|         | Full ASCII ---’                               | 27        |         | Full ASCII ---6 | 36        |
|         | Full ASCII --- (                              | 28        |         | Full ASCII ---7 | 37        |
|         | Full ASCII ---)                               | 29        |         | Full ASCII ---8 | 38        |
|         | Full ASCII ---*                               | 2A        |         | Full ASCII ---9 | 39        |
|         | Full ASCII ---+                               | 2B        |         | Full ASCII ---: | 3A        |
|         | Full ASCII ---,                               | 2C        |         | Full ASCII ---; | 3B        |



End Of Configuration



Start Of Configuration

**Full ASCII Code 39 Table**

| <b>Code 39</b>  | <b>ASCII</b>    | <b>Hexa-code</b> | <b>Code 39</b>  | <b>ASCII</b>    | <b>Hexa-code</b> |
|---|-----------------|------------------|---|-----------------|------------------|
|     | Full ASCII ---< | 3C               |    | Full ASCII ---K | 4B               |
|     | Full ASCII ---= | 3D               |    | Full ASCII ---L | 4C               |
|     | Full ASCII ---> | 3E               |    | Full ASCII ---M | 4D               |
|     | Full ASCII ---? | 3F               |    | Full ASCII ---N | 4E               |
|     | Full ASCII ---@ | 40               |    | Full ASCII ---O | 4F               |
|    | Full ASCII ---A | 41               |    | Full ASCII ---P | 50               |
|    | Full ASCII ---B | 42               |    | Full ASCII ---Q | 51               |
|    | Full ASCII ---C | 43               |    | Full ASCII ---R | 52               |
|    | Full ASCII ---D | 44               |    | Full ASCII ---S | 53               |
|   | Full ASCII ---E | 45               |   | Full ASCII ---T | 54               |
|  | Full ASCII ---F | 46               |  | Full ASCII ---U | 55               |
|  | Full ASCII ---G | 47               |  | Full ASCII ---V | 56               |
|  | Full ASCII ---H | 48               |  | Full ASCII ---W | 57               |
|  | Full ASCII ---I | 49               |  | Full ASCII ---X | 58               |
|  | Full ASCII ---J | 4A               |  | Full ASCII ---Y | 59               |



End Of Configuration



Start Of Configuration

## Full ASCII Code 39 Table

| Code 39 | ASCII           | Hexa-code | Code 39 | ASCII           | Hexa-code |
|---------|-----------------|-----------|---------|-----------------|-----------|
|         | Full ASCII ---Z | 5A        |         | Full ASCII ---i | 69        |
|         | Full ASCII ---[ | 5B        |         | Full ASCII ---j | 6A        |
|         | Full ASCII ---\ | 5C        |         | Full ASCII ---k | 6B        |
|         | Full ASCII ---] | 5D        |         | Full ASCII ---l | 6C        |
|         | Full ASCII ---^ | 5E        |         | Full ASCII ---m | 6D        |
|         | Full ASCII ---_ | 5F        |         | Full ASCII ---n | 6E        |
|         | Full ASCII ---` | 60        |         | Full ASCII ---o | 6F        |
|         | Full ASCII ---a | 61        |         | Full ASCII ---p | 70        |
|         | Full ASCII ---b | 62        |         | Full ASCII ---q | 71        |
|         | Full ASCII ---c | 63        |         | Full ASCII ---r | 72        |
|         | Full ASCII ---d | 64        |         | Full ASCII ---s | 73        |
|         | Full ASCII ---e | 65        |         | Full ASCII ---t | 74        |
|         | Full ASCII ---f | 66        |         | Full ASCII ---u | 75        |
|         | Full ASCII ---g | 67        |         | Full ASCII ---v | 76        |
|         | Full ASCII ---h | 68        |         | Full ASCII ---w | 77        |



End Of Configuration



Start Of Configuration

---

**Full ASCII Code 39 Table**

| <b>Code 39</b>   | <b>ASCII</b>      | <b>Hexa-<br/>code</b> |
|--|-------------------|-----------------------|
|  | Full ASCII ---x   | 78                    |
|  | Full ASCII ---y   | 79                    |
|  | Full ASCII ---z   | 7A                    |
|  | Full ASCII ---{   | 7B                    |
|  | Full ASCII ---    | 7C                    |
|  | Full ASCII ---}   | 7D                    |
|  | Full ASCII ---~   | 7E                    |
|  | Full ASCII ---DEL | 7F                    |



End Of Configuration